



(Internal connection in the UNDER-HOOD MAIN FUSE BOX)


(Internal connection in the UNDER-HOOD MAIN FUSE BOX)


(Internal connection in the UNDER-DASH FUSE/RELAY BOX)

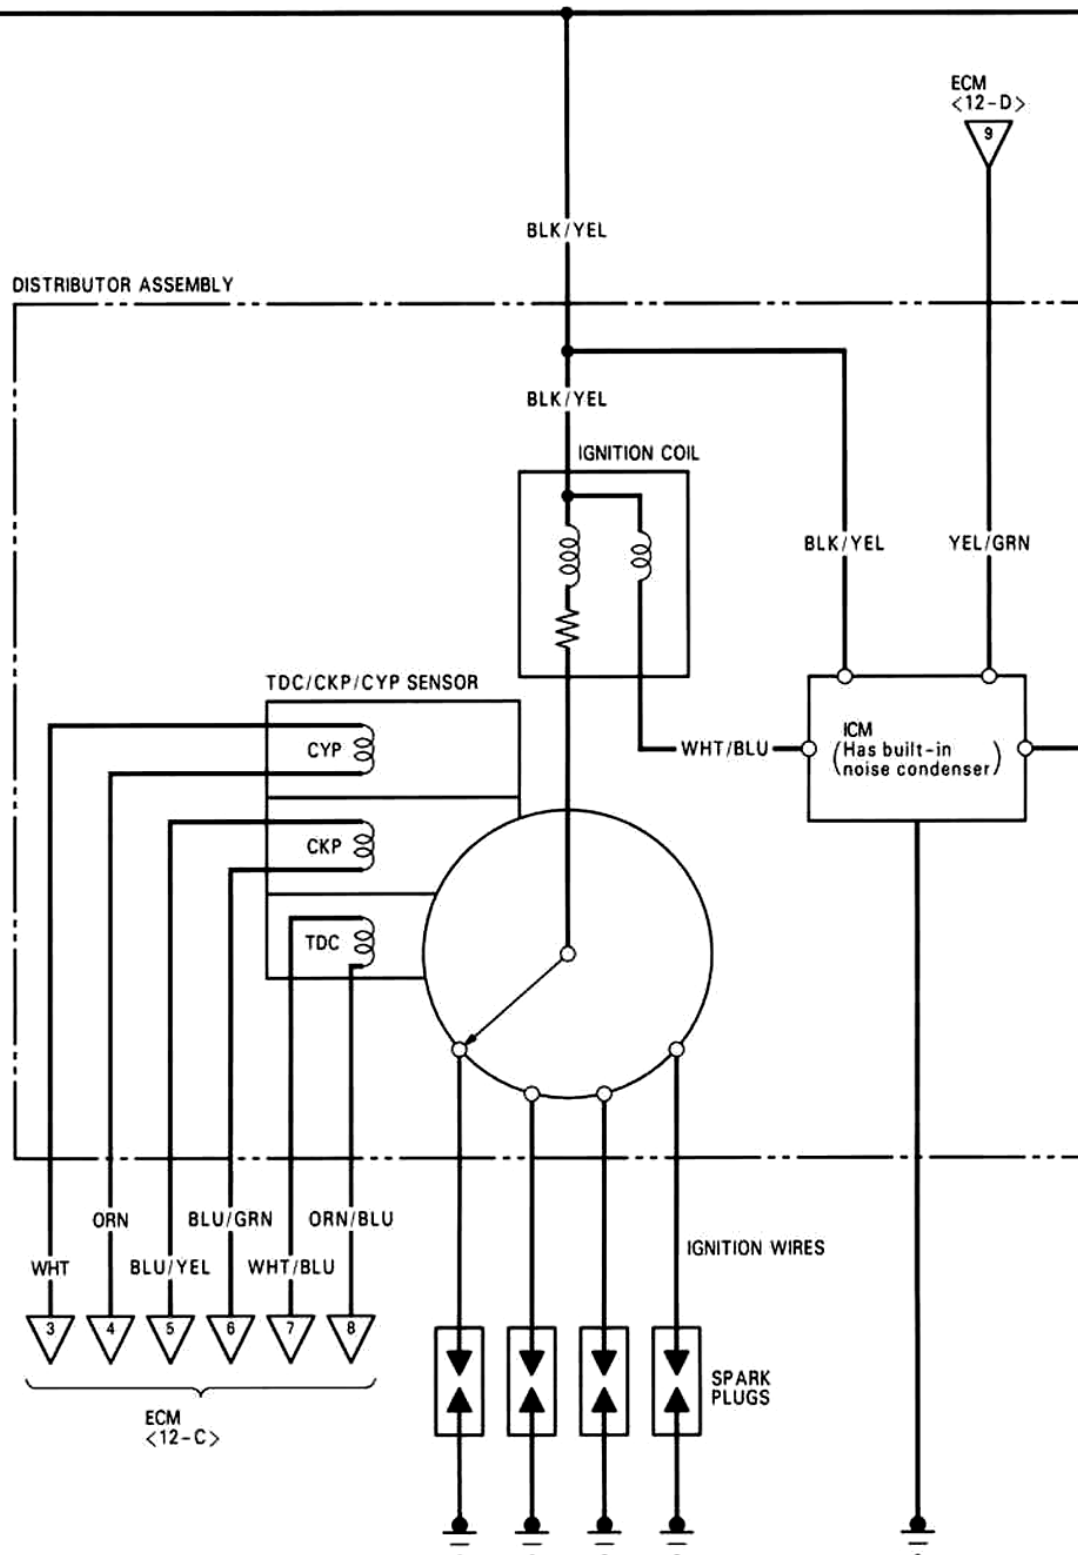


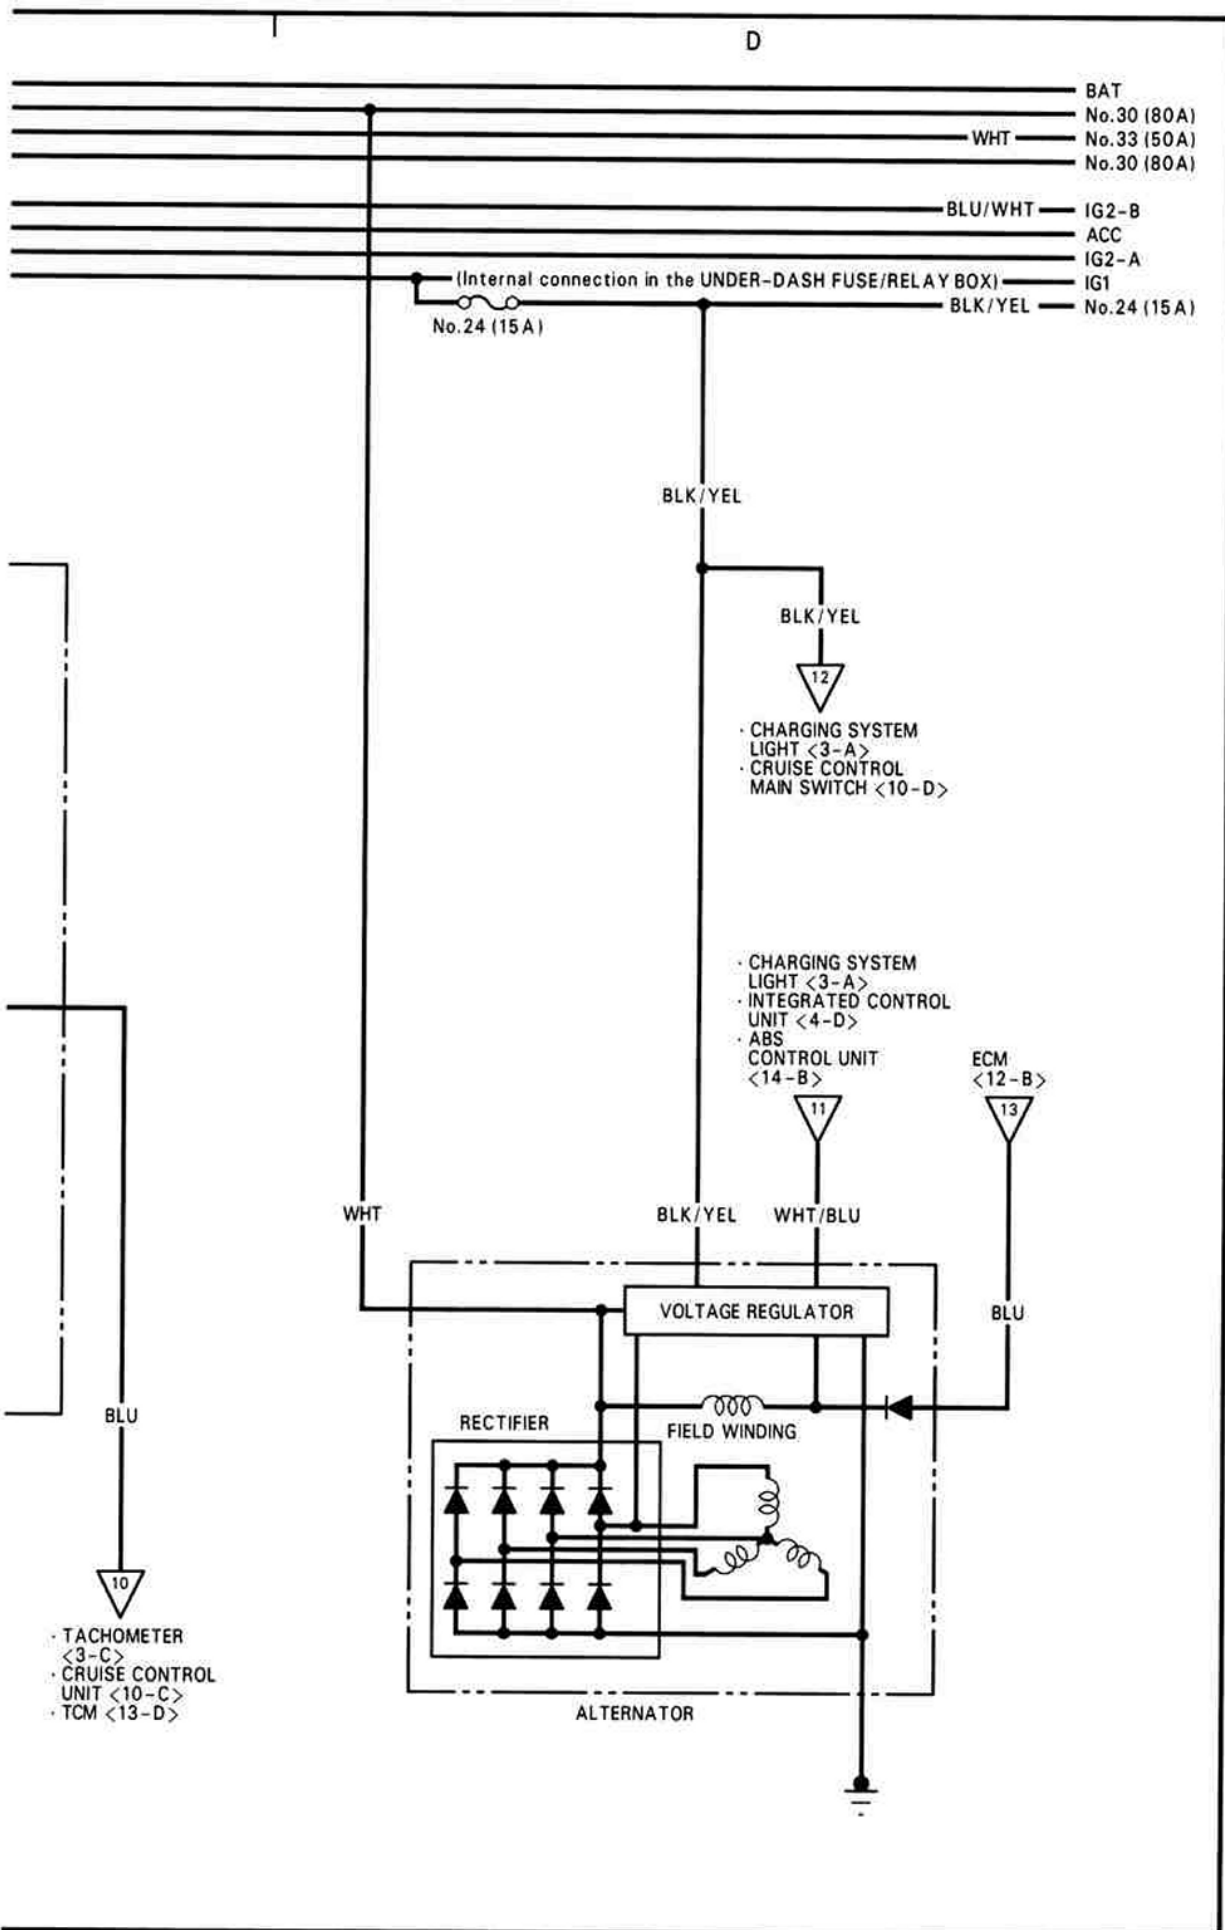


A

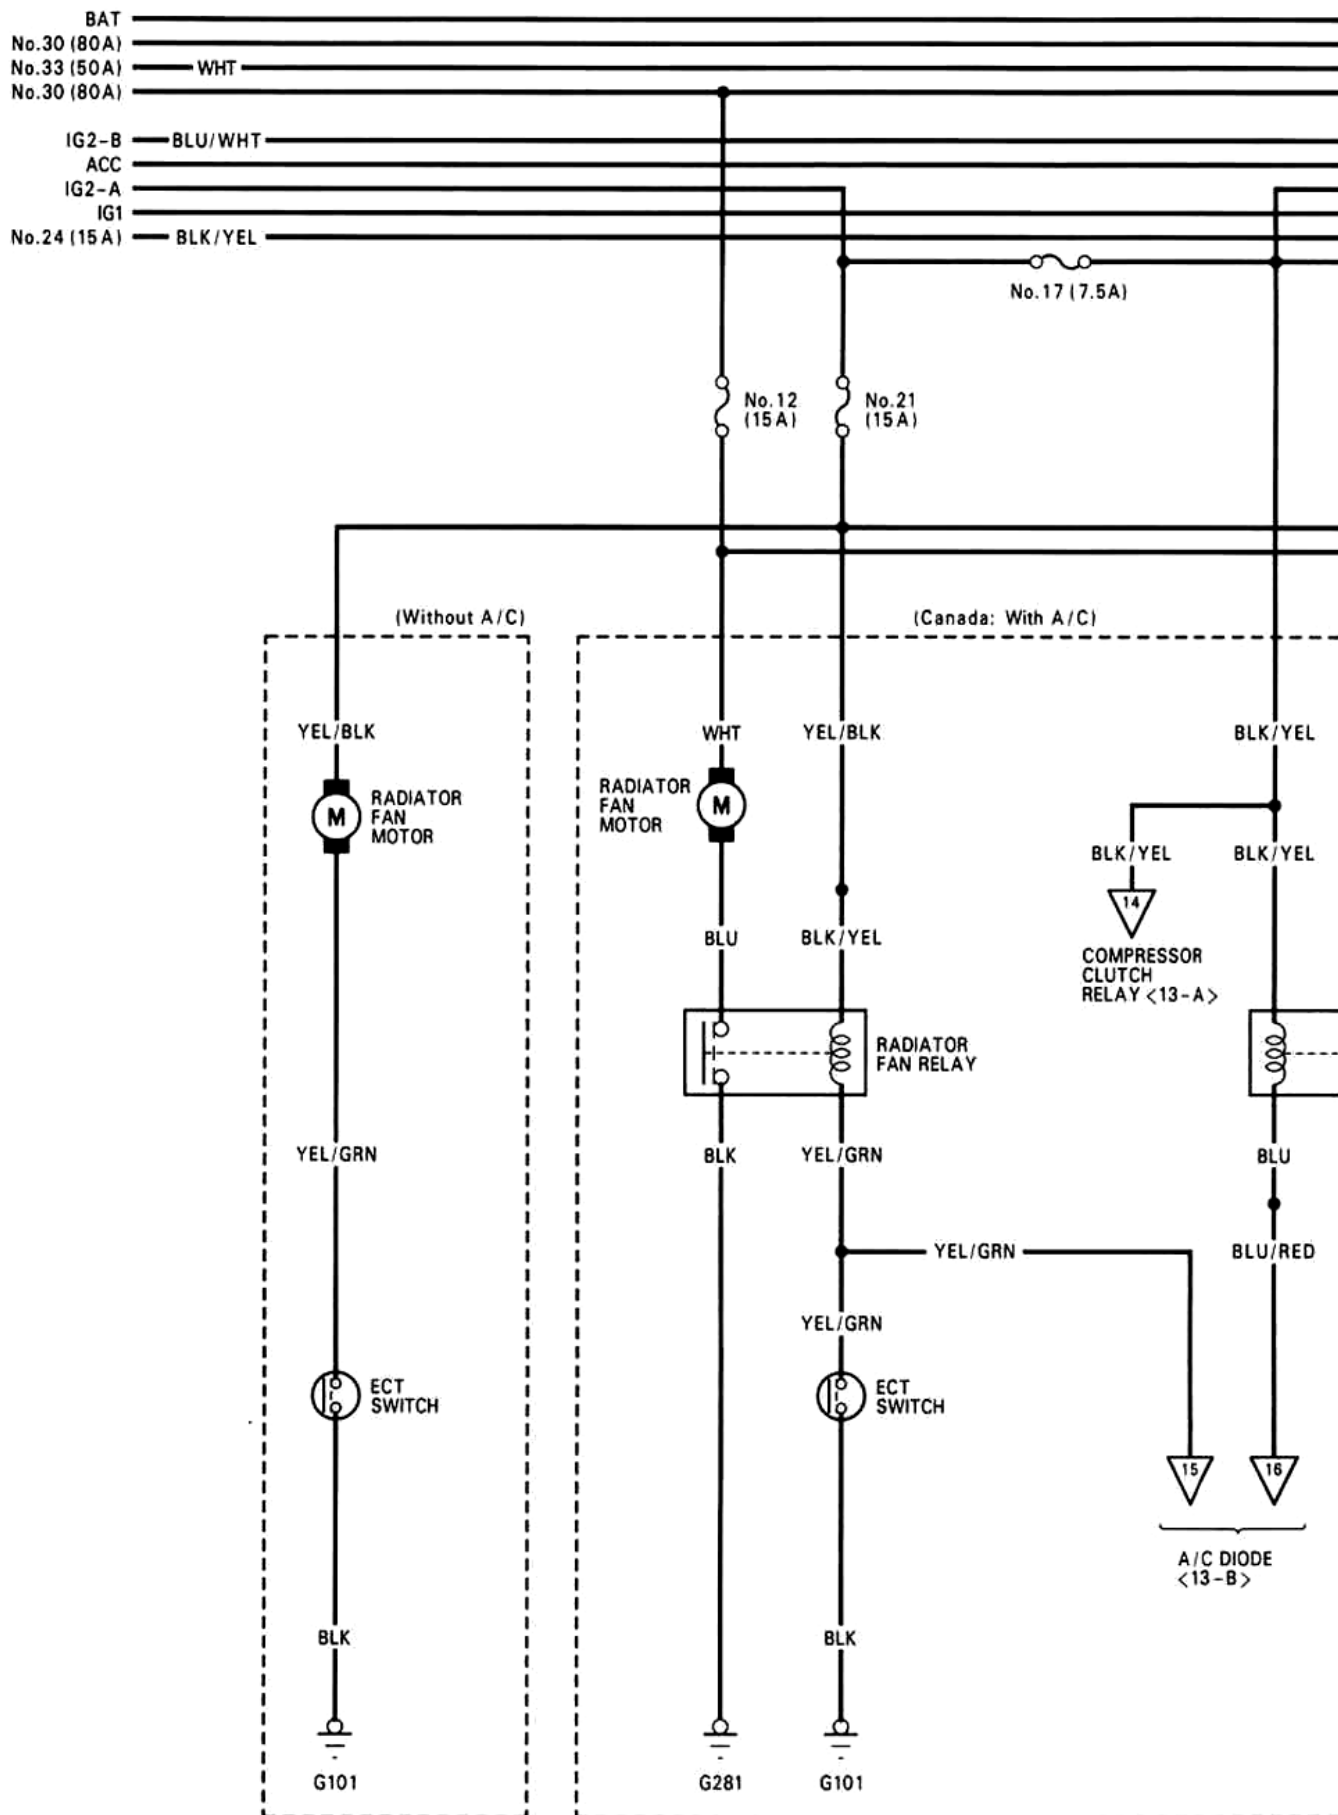

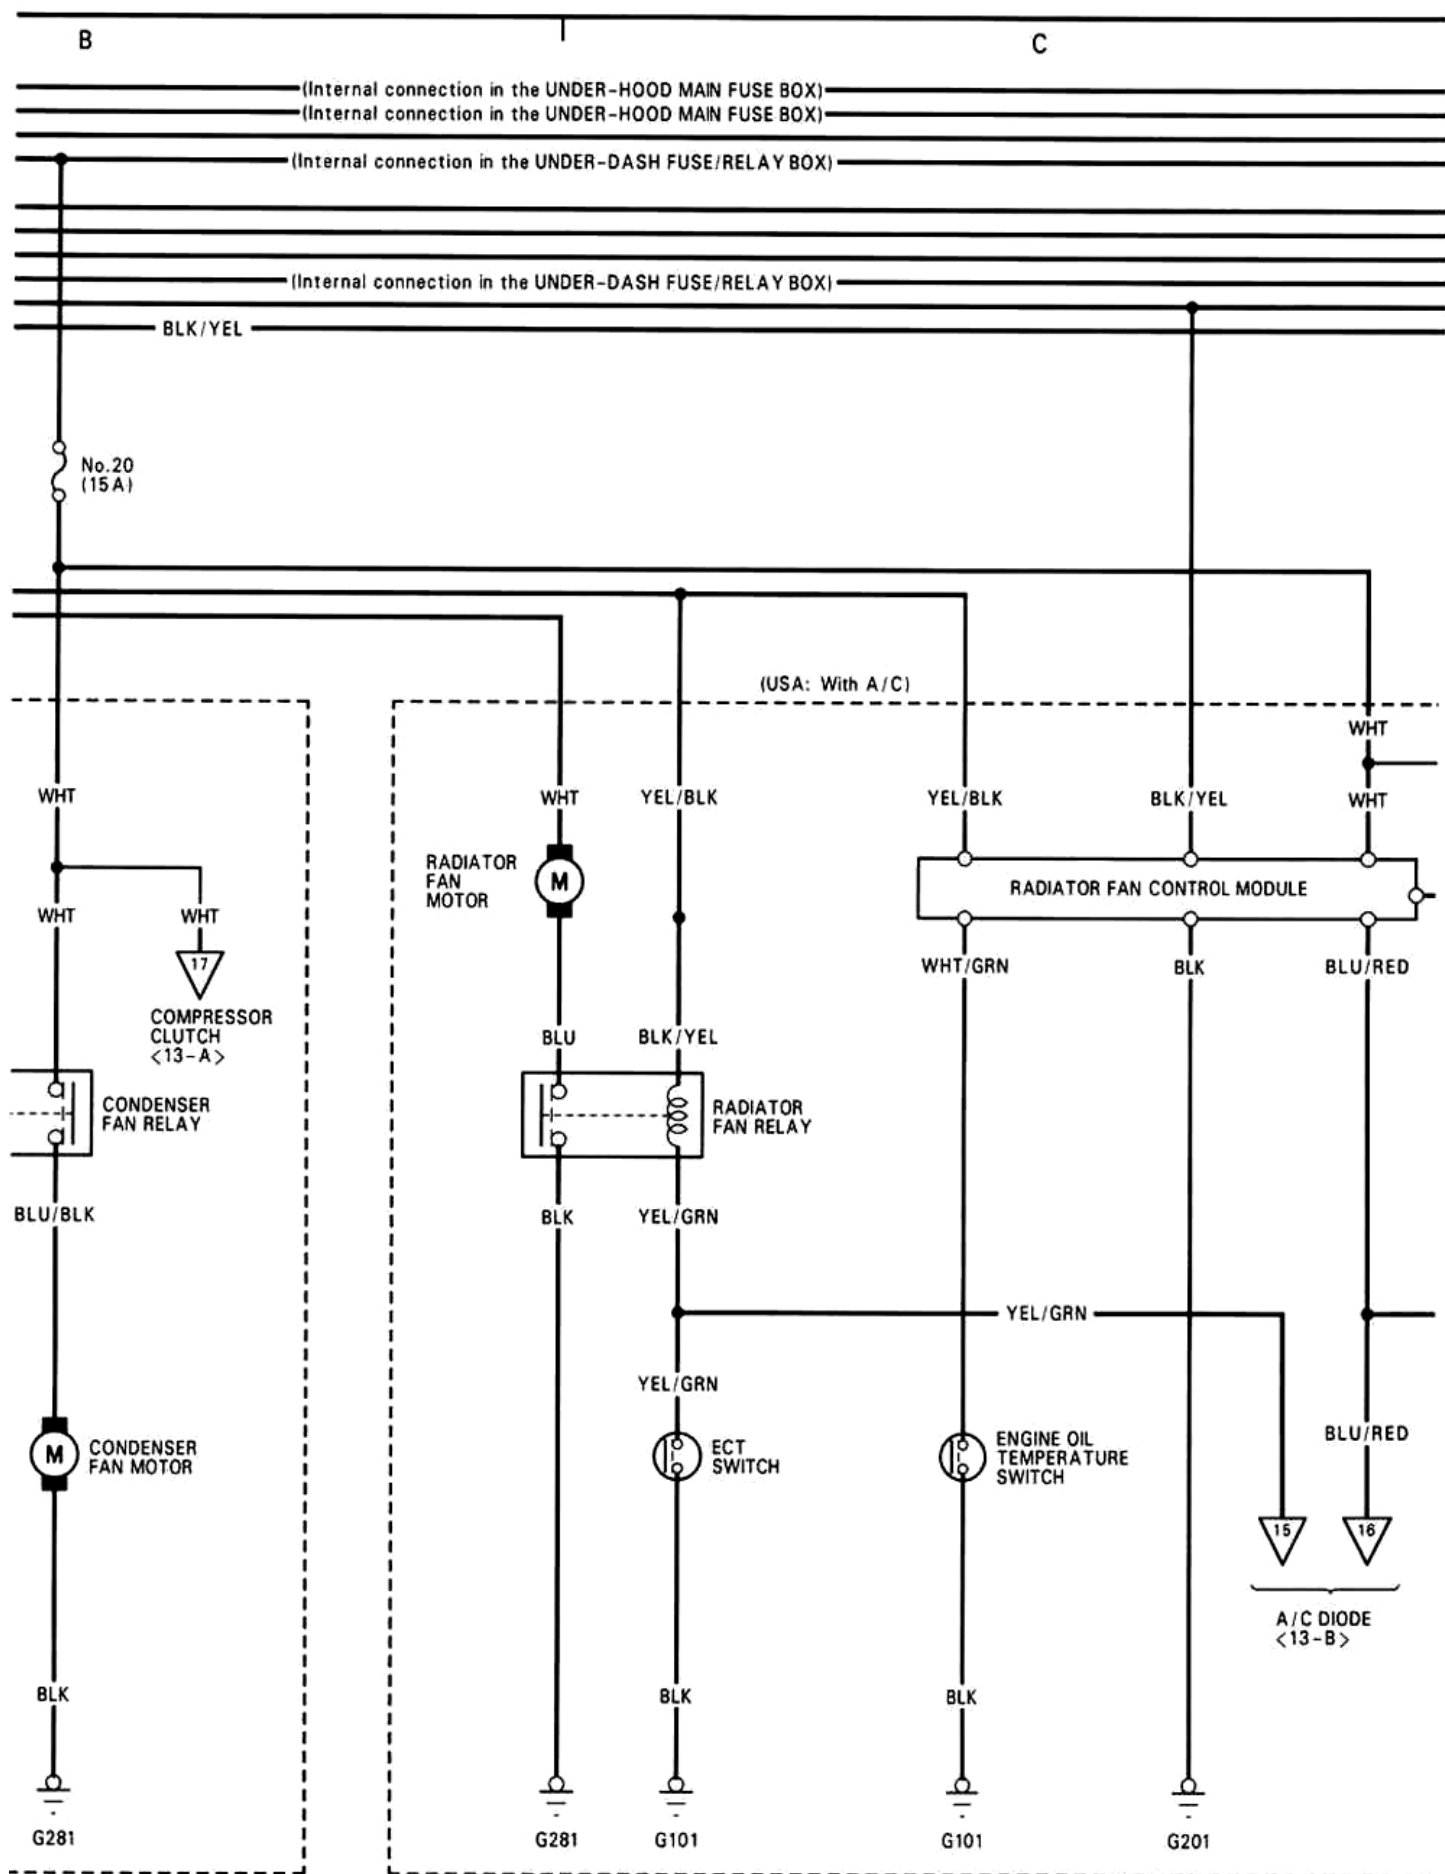

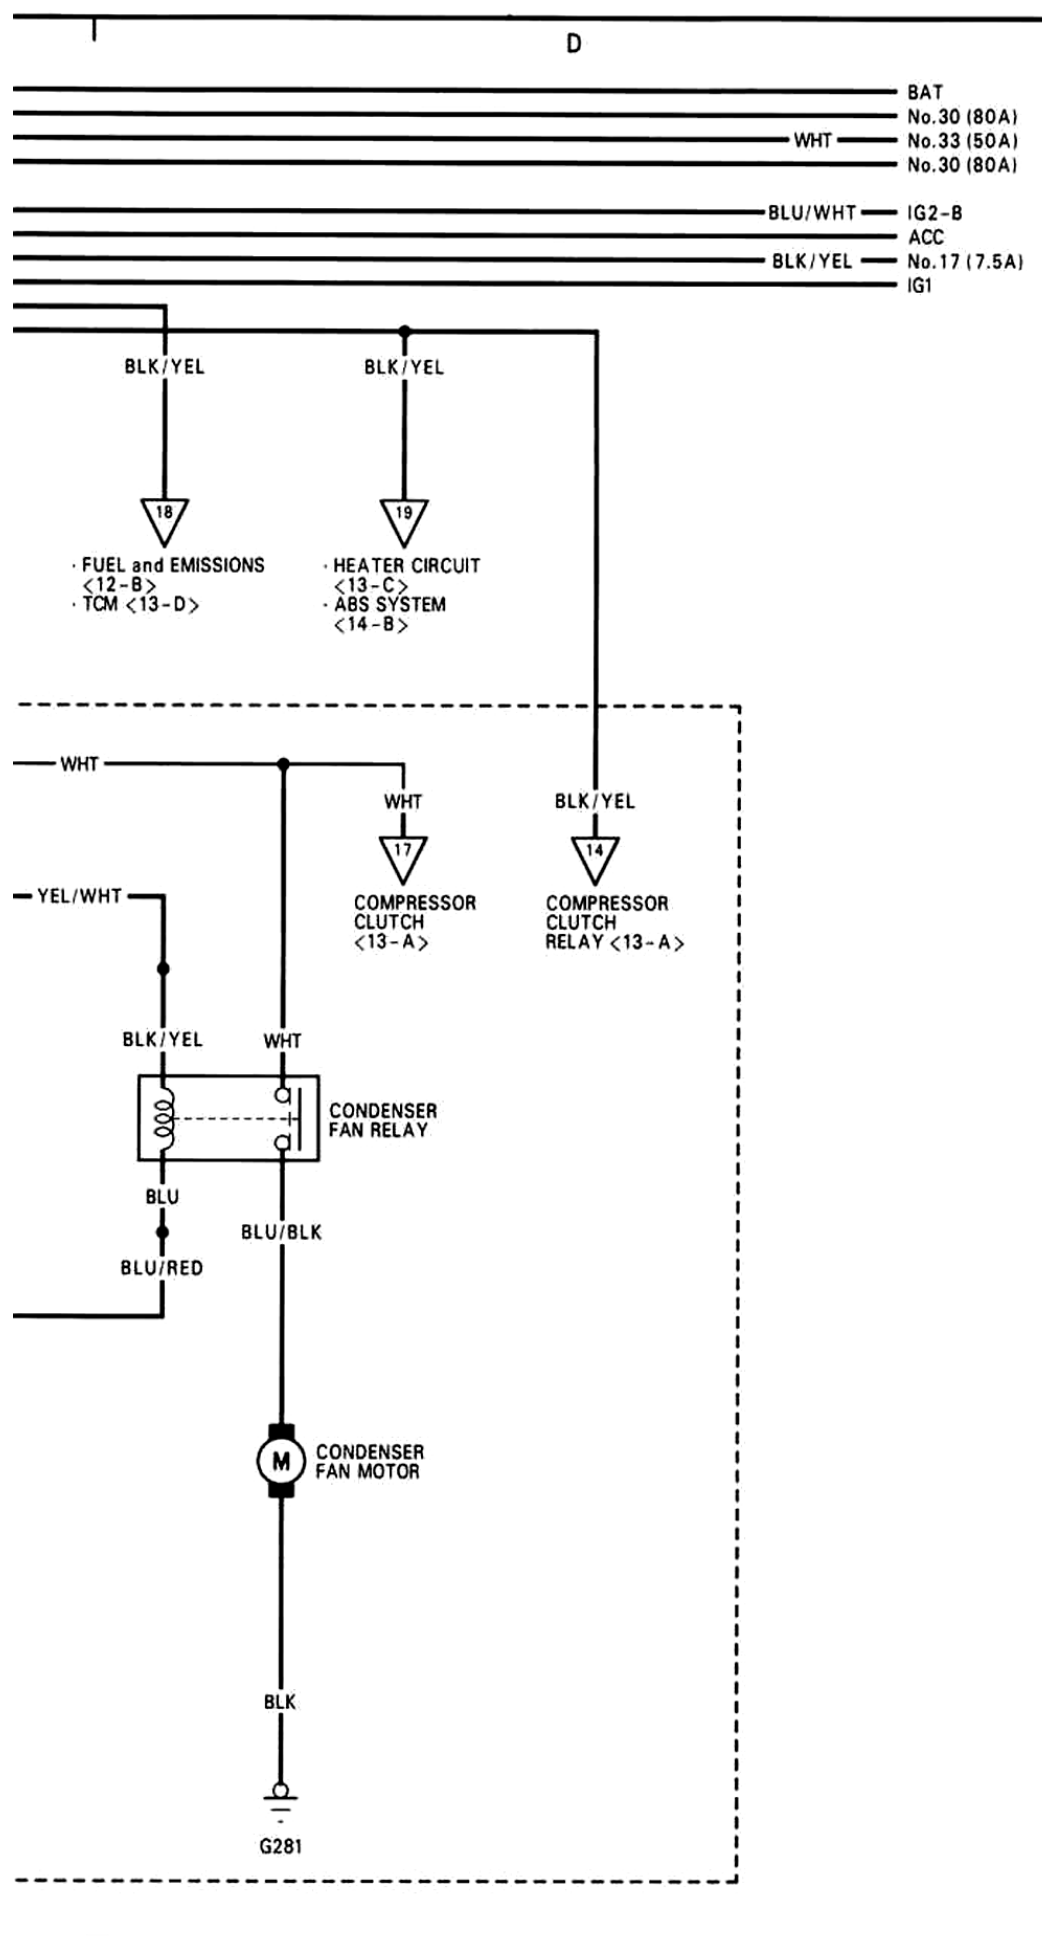

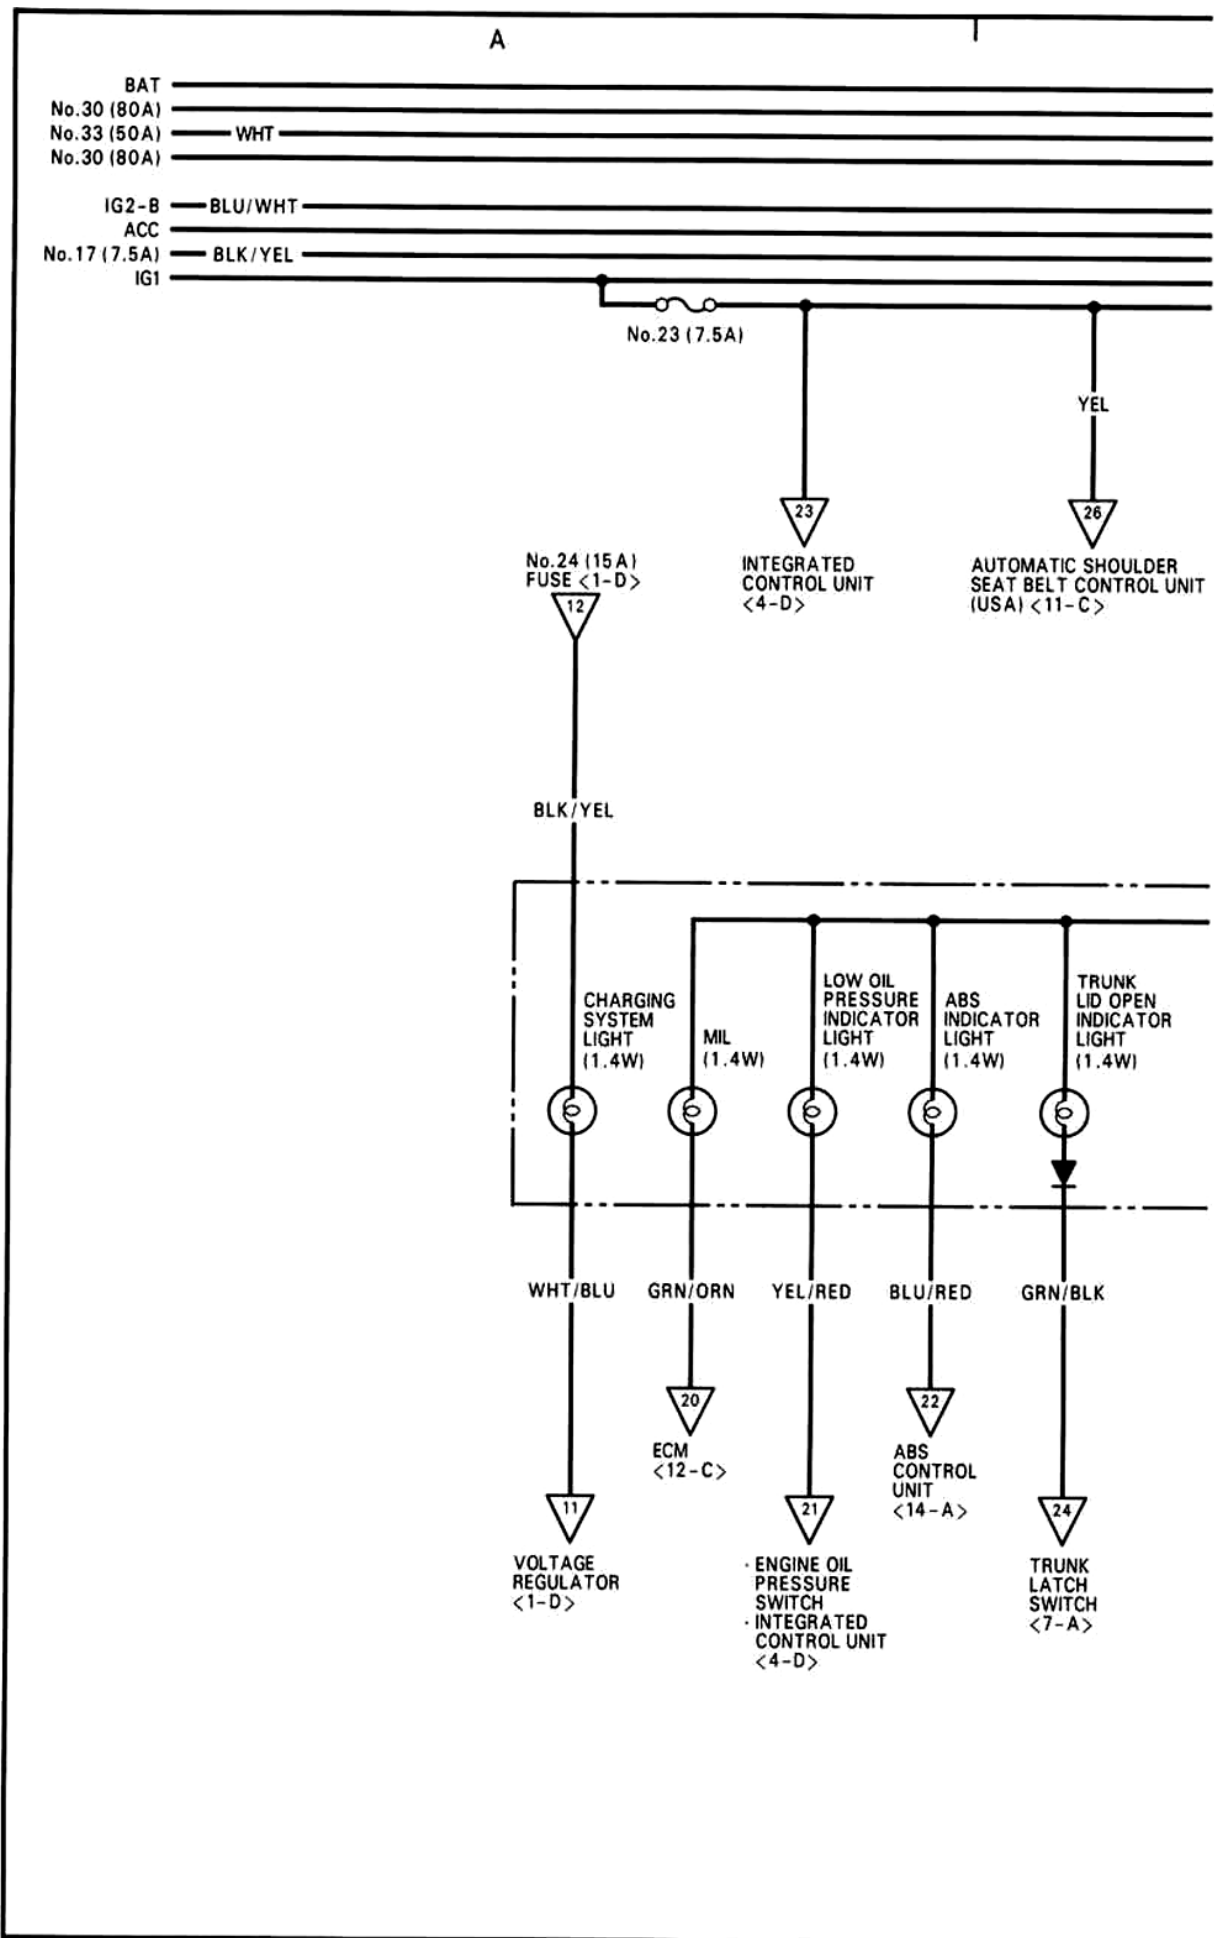

B

C

(Internal connection in the UNDER-HOOD MAIN FUSE BOX)

(Internal connection in the UNDER-HOOD MAIN FUSE BOX)

(Internal connection in the UNDER-DASH FUSE/RELAY BOX)

(Internal connection in the UNDER-DASH FUSE/RELAY BOX)

YEL

IGNITION  
COIL <1-C>

10

BLU

GAUGE ASSEMBLY

BRAKE  
SYSTEM  
LIGHT  
(1.4W)SEAT  
BELT  
REMINDER  
LIGHT  
(1.4W)DOOR OPEN  
INDICATOR  
LIGHT  
(USA)  
(1.4W)LOW FUEL  
INDICATOR  
LIGHT  
(1.4W)FUEL  
GAUGEECT  
GAUGETACHO-  
METER

GRN/RED

ABS  
CONTROL  
UNIT <14-C>

73

GRN/RED

YEL/RED

GRN/RED

GRN/RED

YEL/WHT

YEL/GRN

GRN/RED

INTEGRATED  
CONTROL UNIT  
<4-D>  
DAYTIME  
RUNNING  
LIGHTS RELAY  
(Canada)  
<6-D>

25

PARKING  
BRAKE  
SWITCH  
(USA)

BLK

G301

BRAKE  
FLUID  
LEVEL  
SWITCHAUTOMATIC  
SHOULDER  
SEAT BELT  
CONTROL  
UNIT (USA)  
<11-B>  
DRIVER'S  
SEAT BELT  
SWITCH  
(Canada)  
<4-C>PASSENGER'S  
DOOR SWITCH  
<7-B>

28

27

LOW  
FUEL  
SENSOR


BLK/WHT

G521 (Hatchback)  
G552 (Sedan)FUEL GAUGE  
SENDING UNITFUEL GAUGE  
SENDING UNITECT  
SENDING UNIT





A

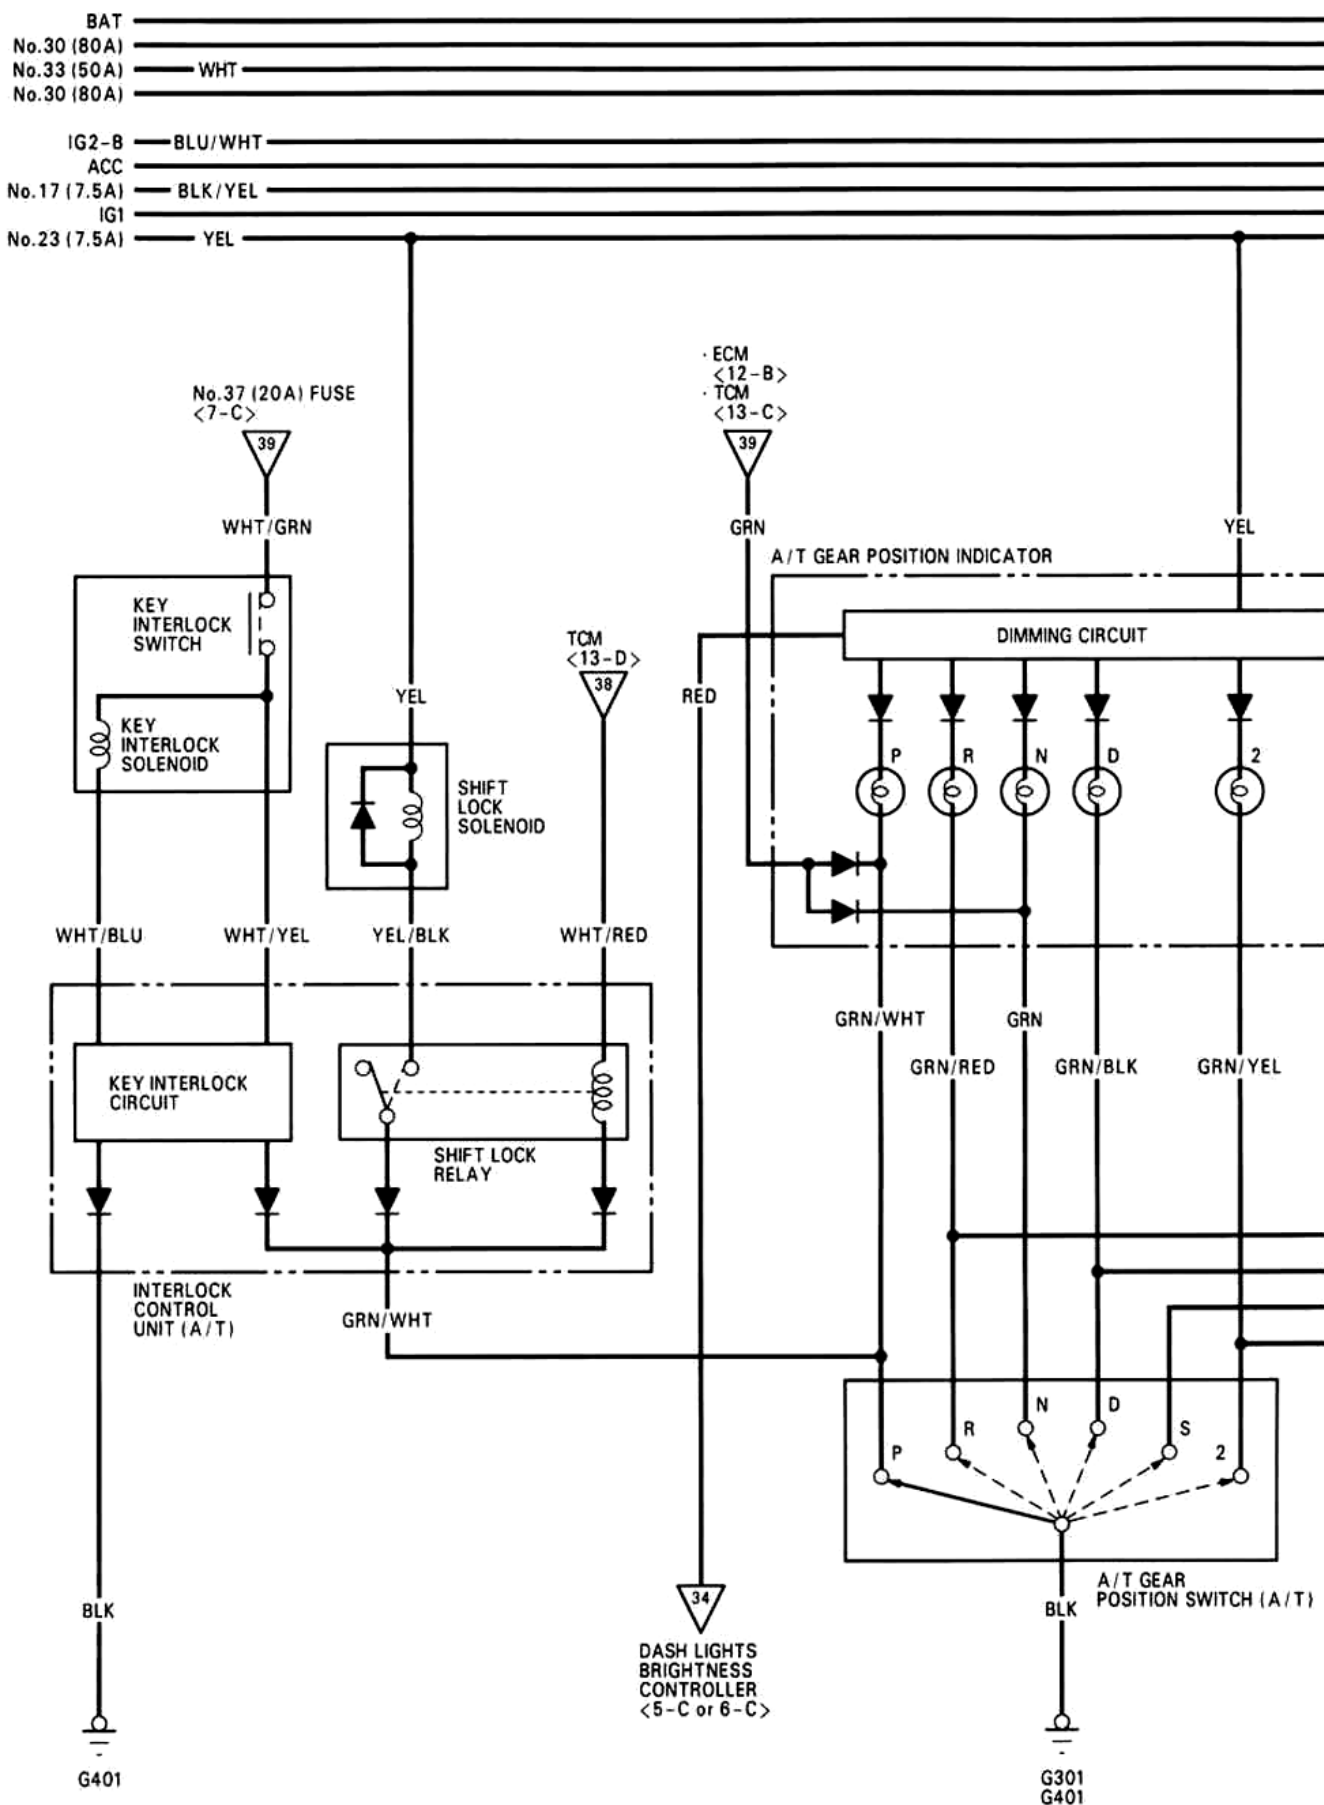

B


C

(Internal connection in the UNDER-HOOD MAIN FUSE BOX)

(Internal connection in the UNDER-HOOD MAIN FUSE BOX)


(Internal connection in the UNDER-DASH FUSE/RELAY BOX)

(Internal connection in the UNDER-DASH FUSE/RELAY BOX)

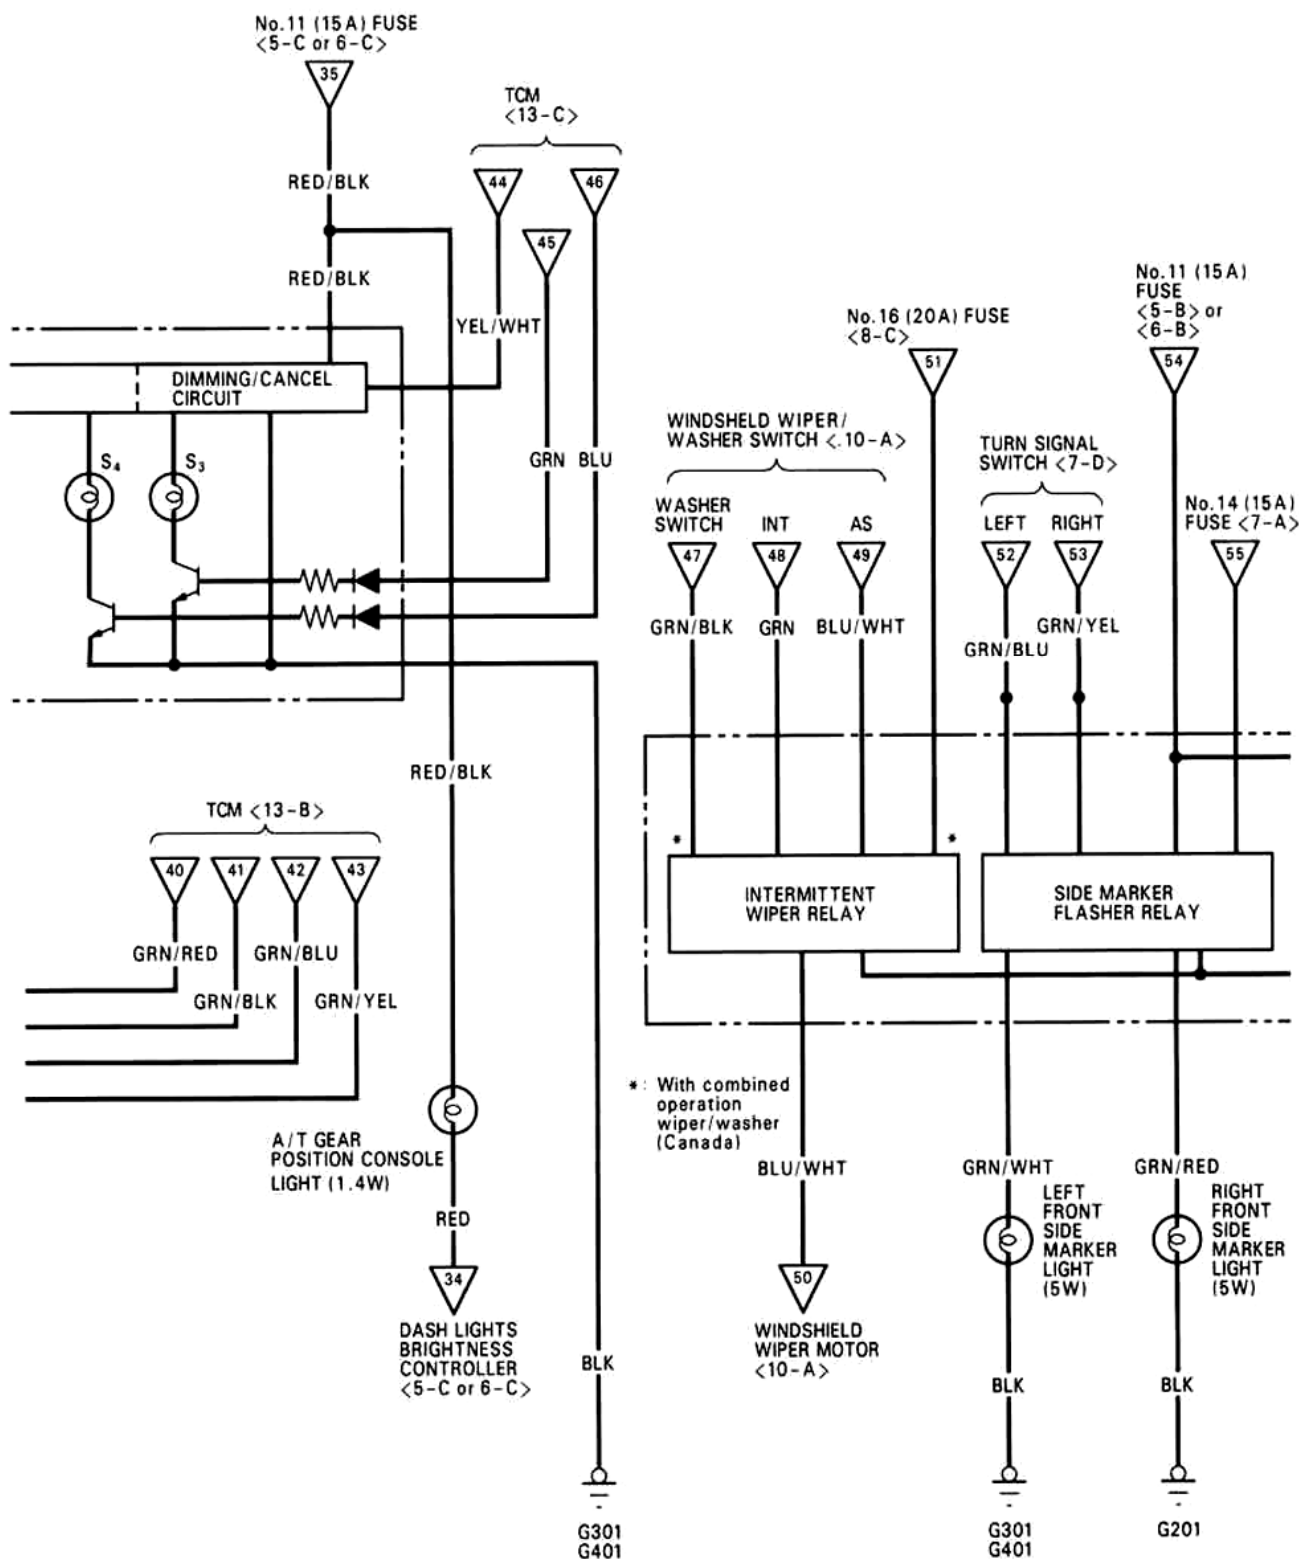


D


	BAT
	No.30 (80A)
WHT	No.33 (50A)
	No.30 (80A)
BLU/WHT	IG2-B
	ACC
BLK/YEL	No.17 (7.5A)
	IG1
YEL	No.23 (7.5A)

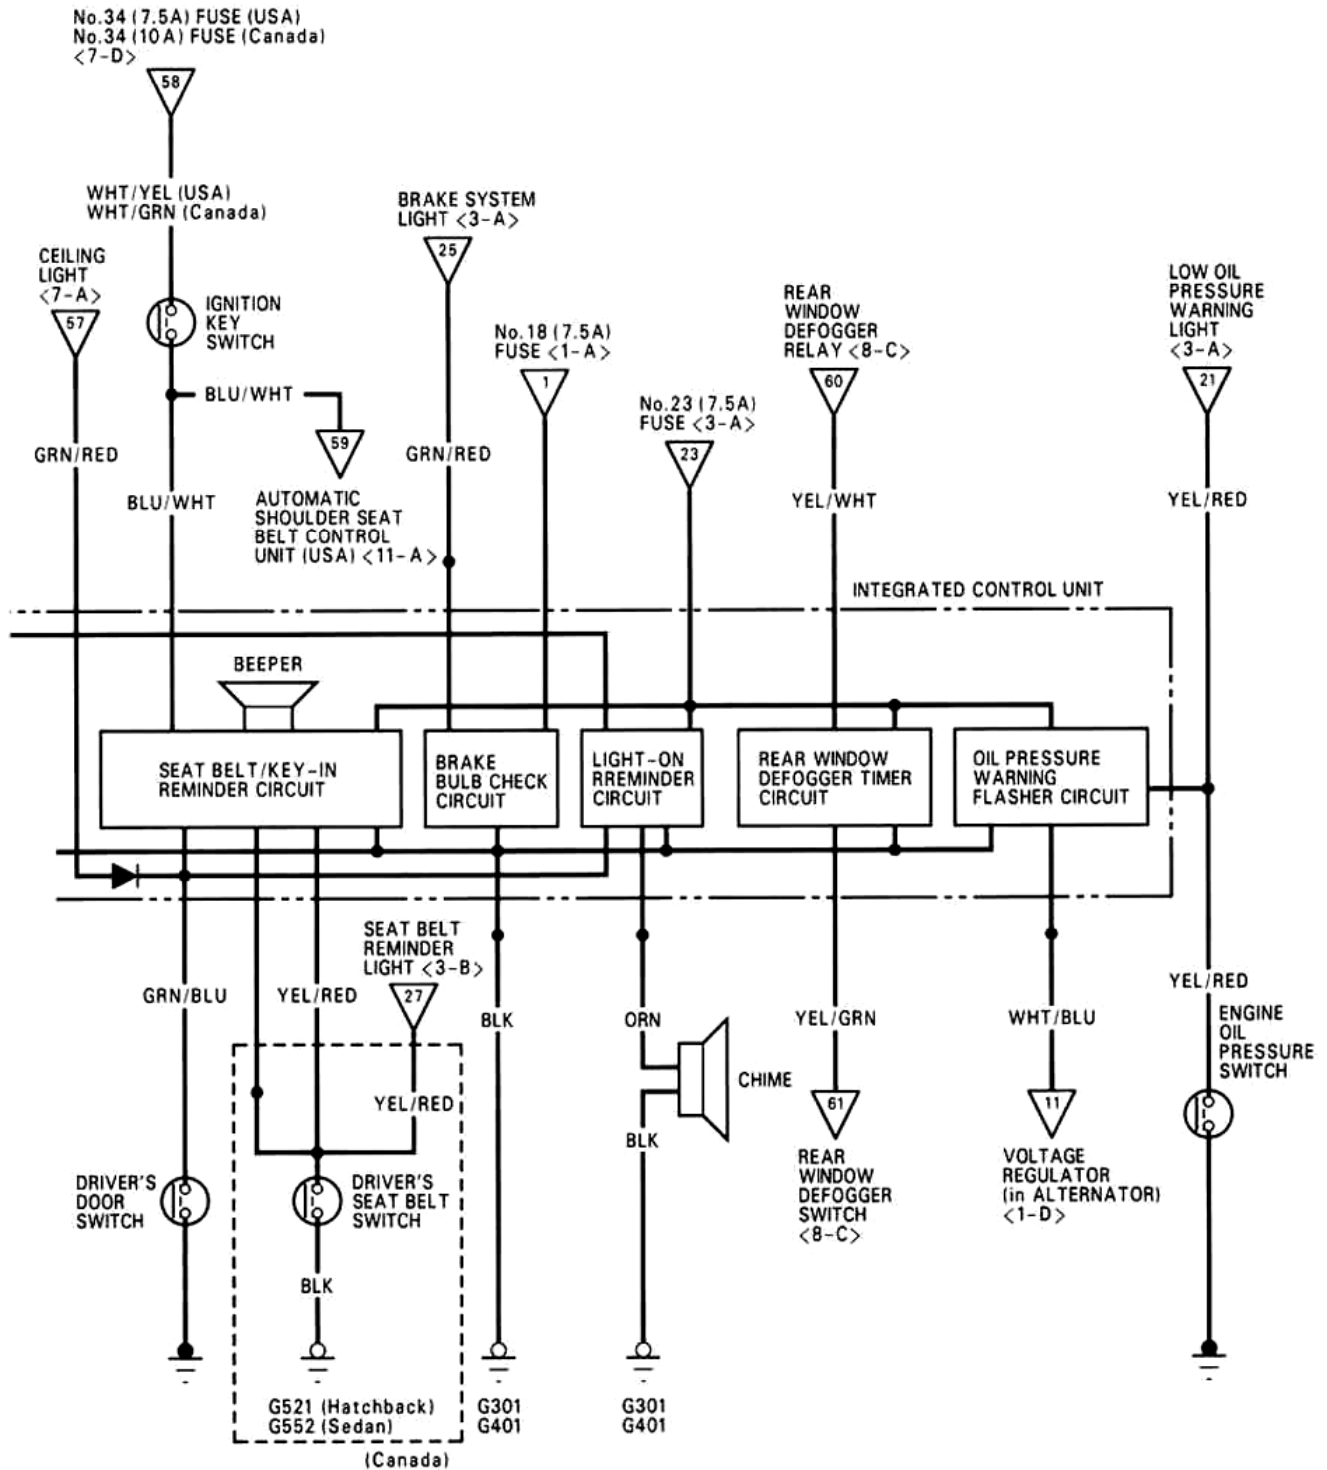

A

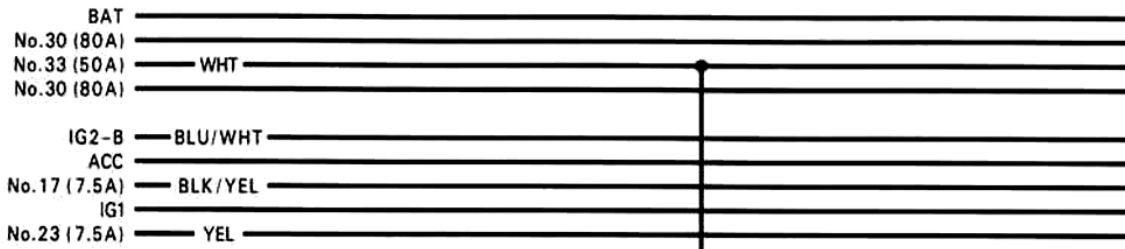

# **LIGHTING SYSTEM (USA):**

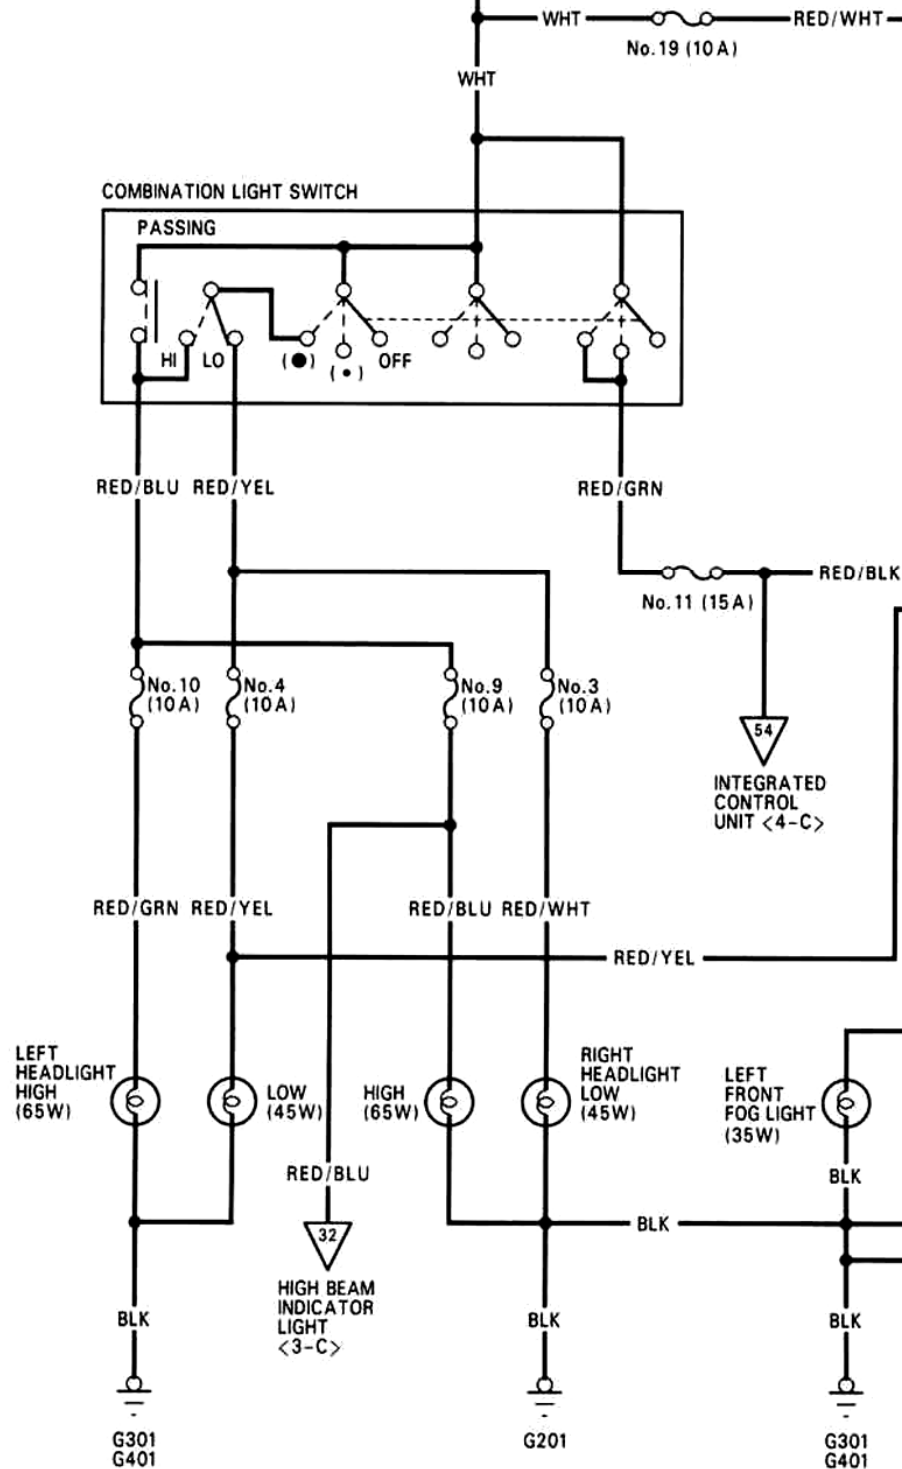


B

C


(Internal connection in the UNDER-HOOD MAIN FUSE BOX)  
 (Internal connection in the UNDER-HOOD MAIN FUSE BOX)  
 (Internal connection in the UNDER-DASH FUSE/RELAY BOX)  
 (Internal connection in the UNDER-DASH FUSE/RELAY BOX)


(Internal connection in the UNDER-DASH FUSE/RELAY BOX)

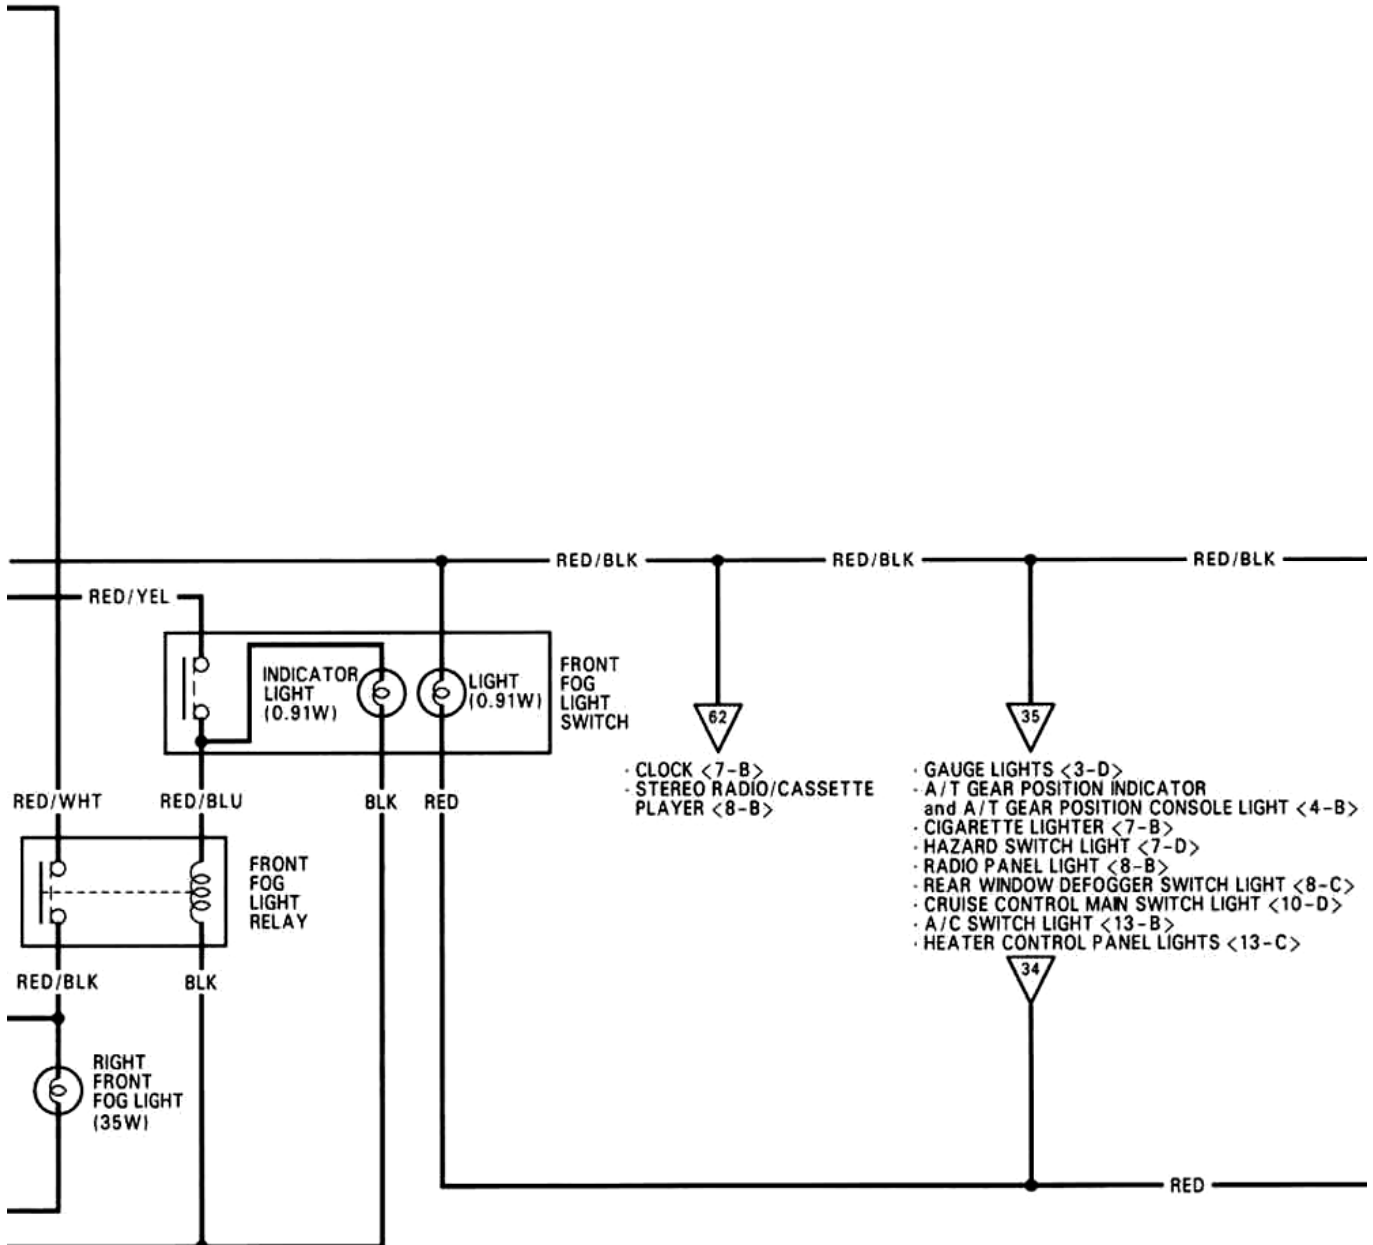


D

BAT  
No.30 (80A)  
No.33 (50A)  
No.30 (80A)  
BLU/WHT IG2-B  
ACC  
BLK/YEL No.17 (7.5A)  
IG1  
YEL No.23 (7.5A)

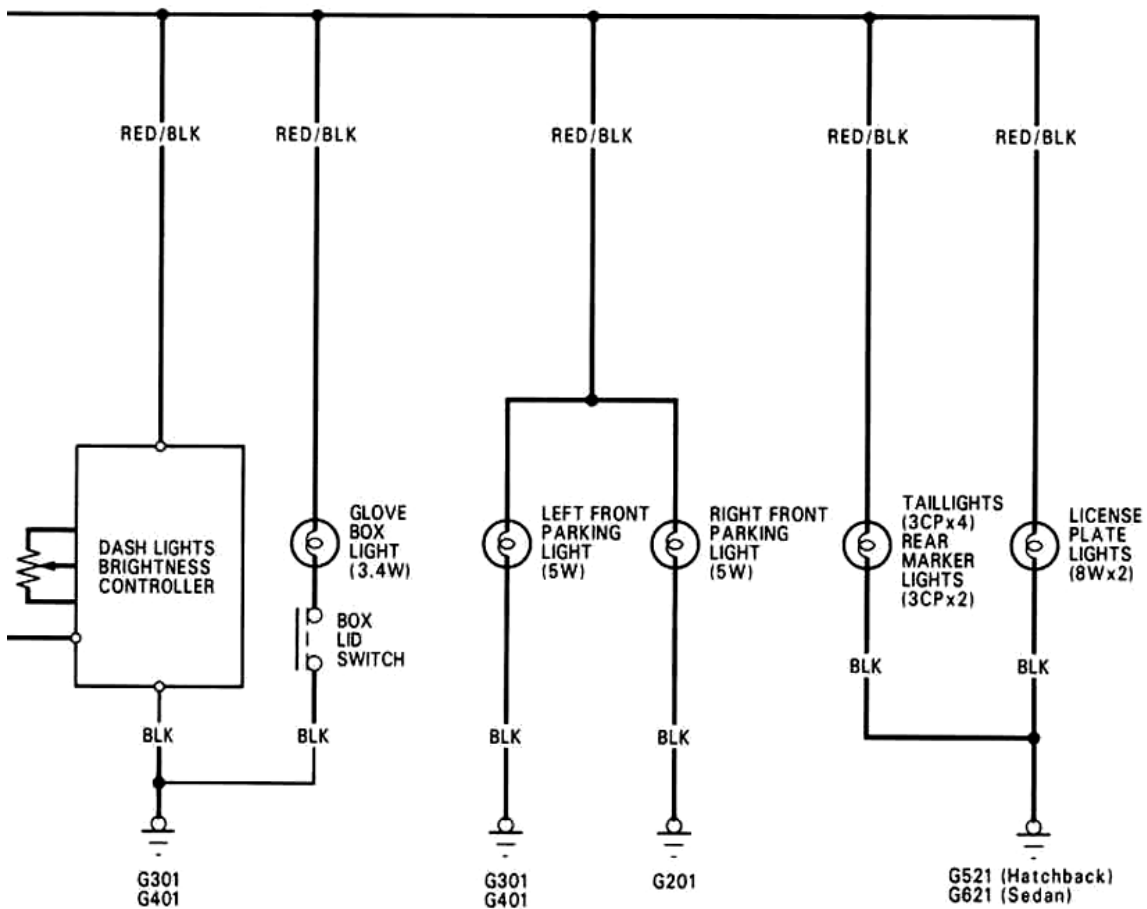


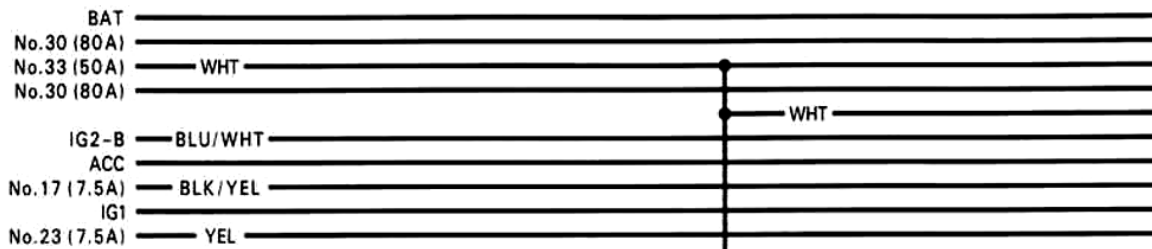


**LIGHTING SYSTEM (Canada):**

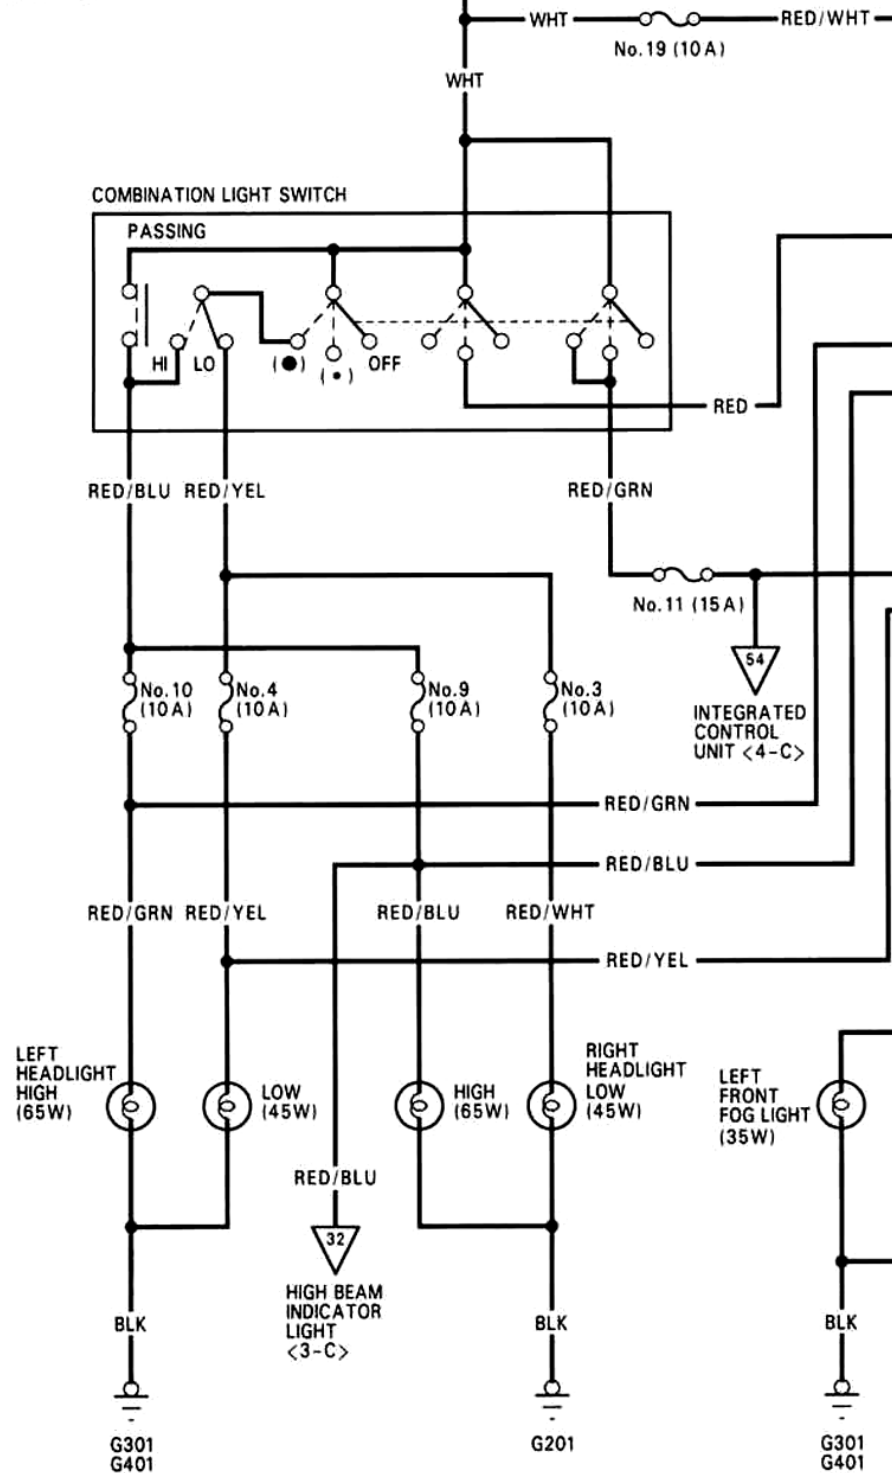





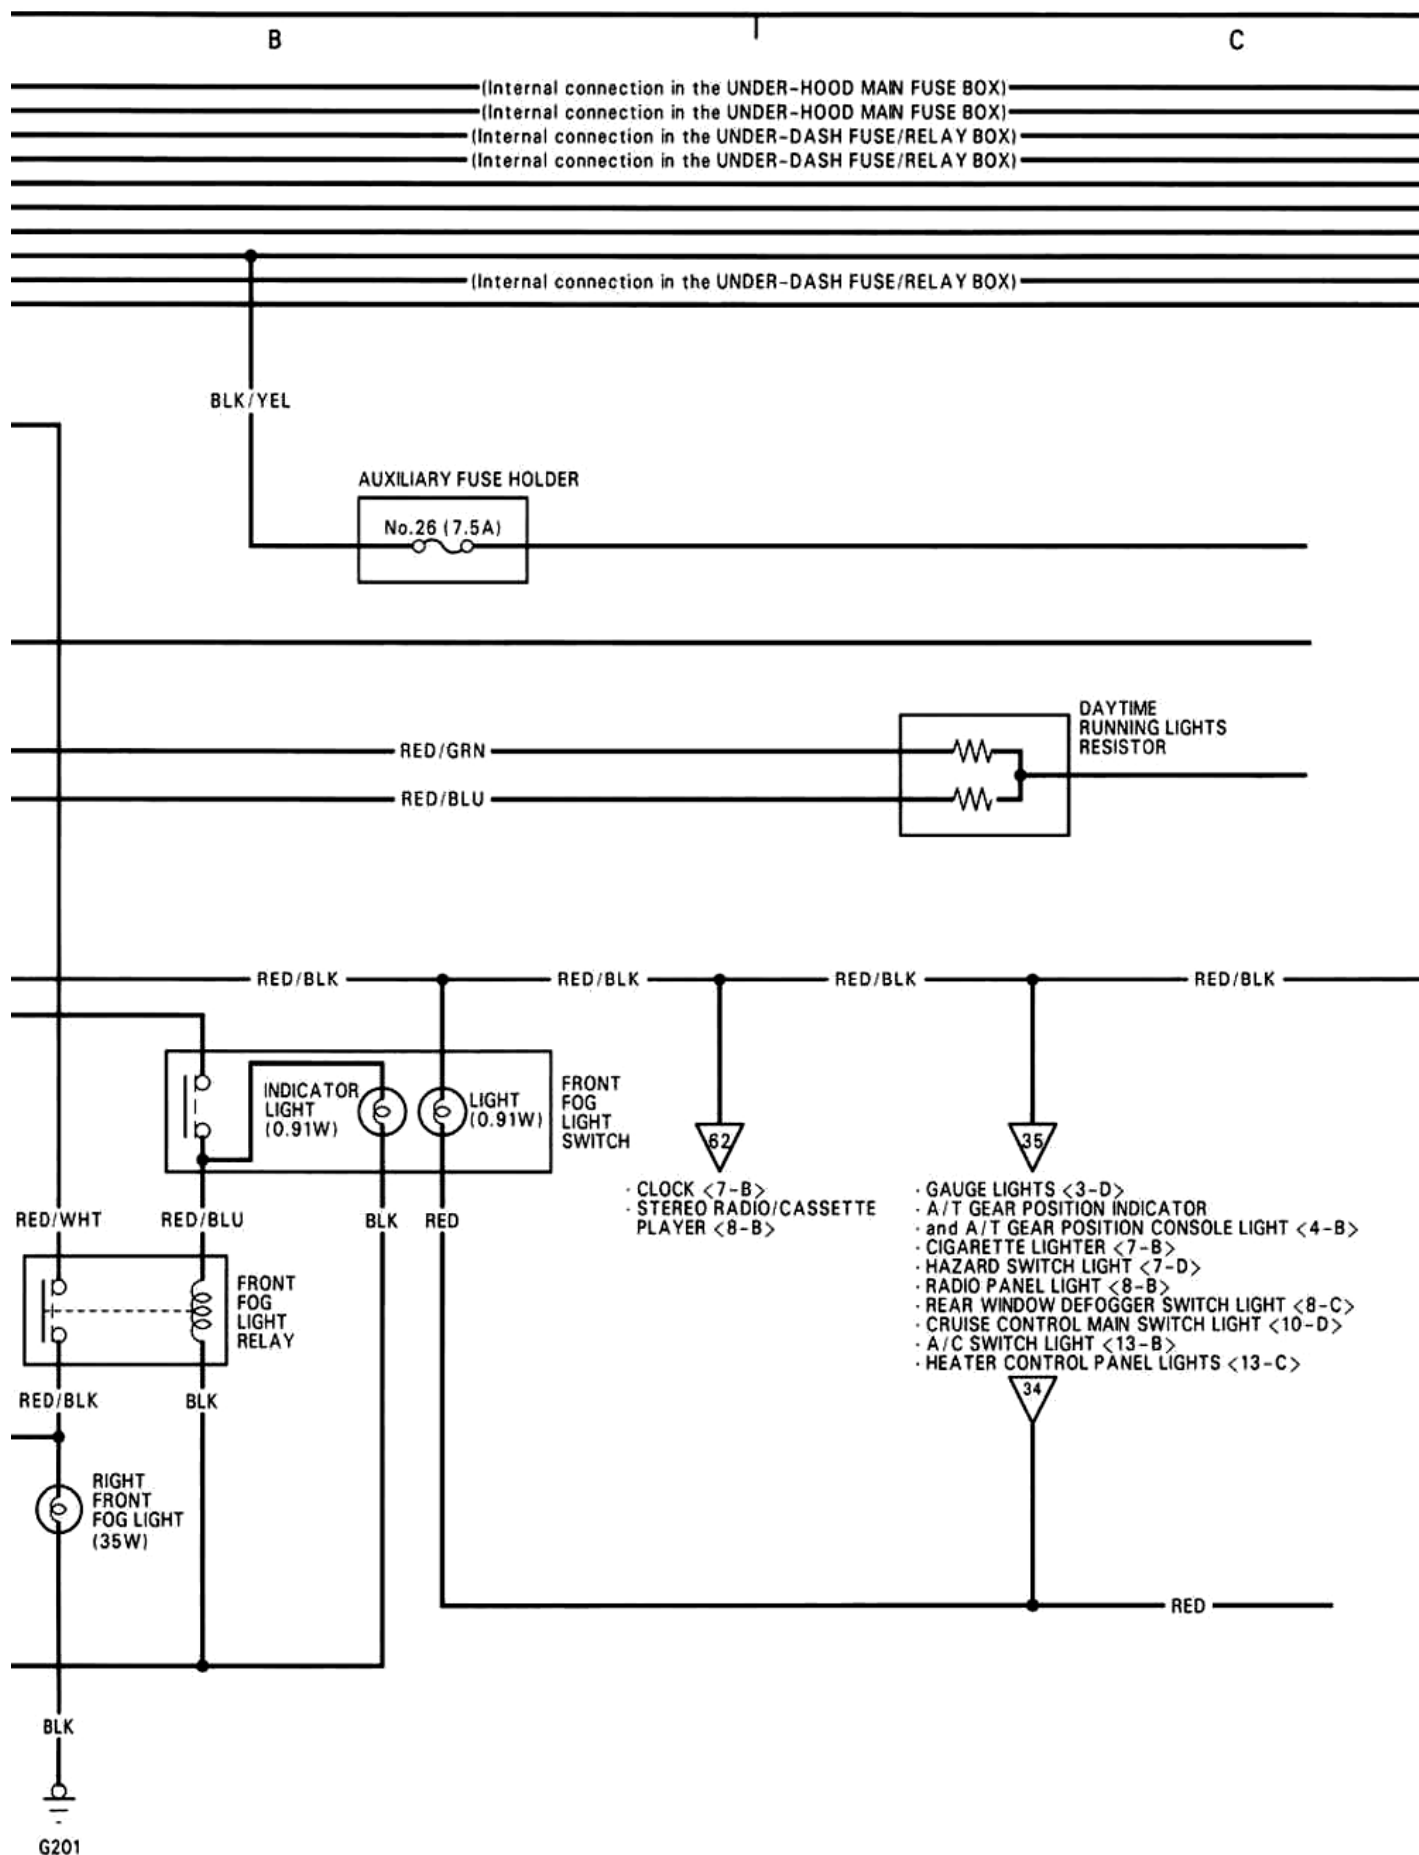



D

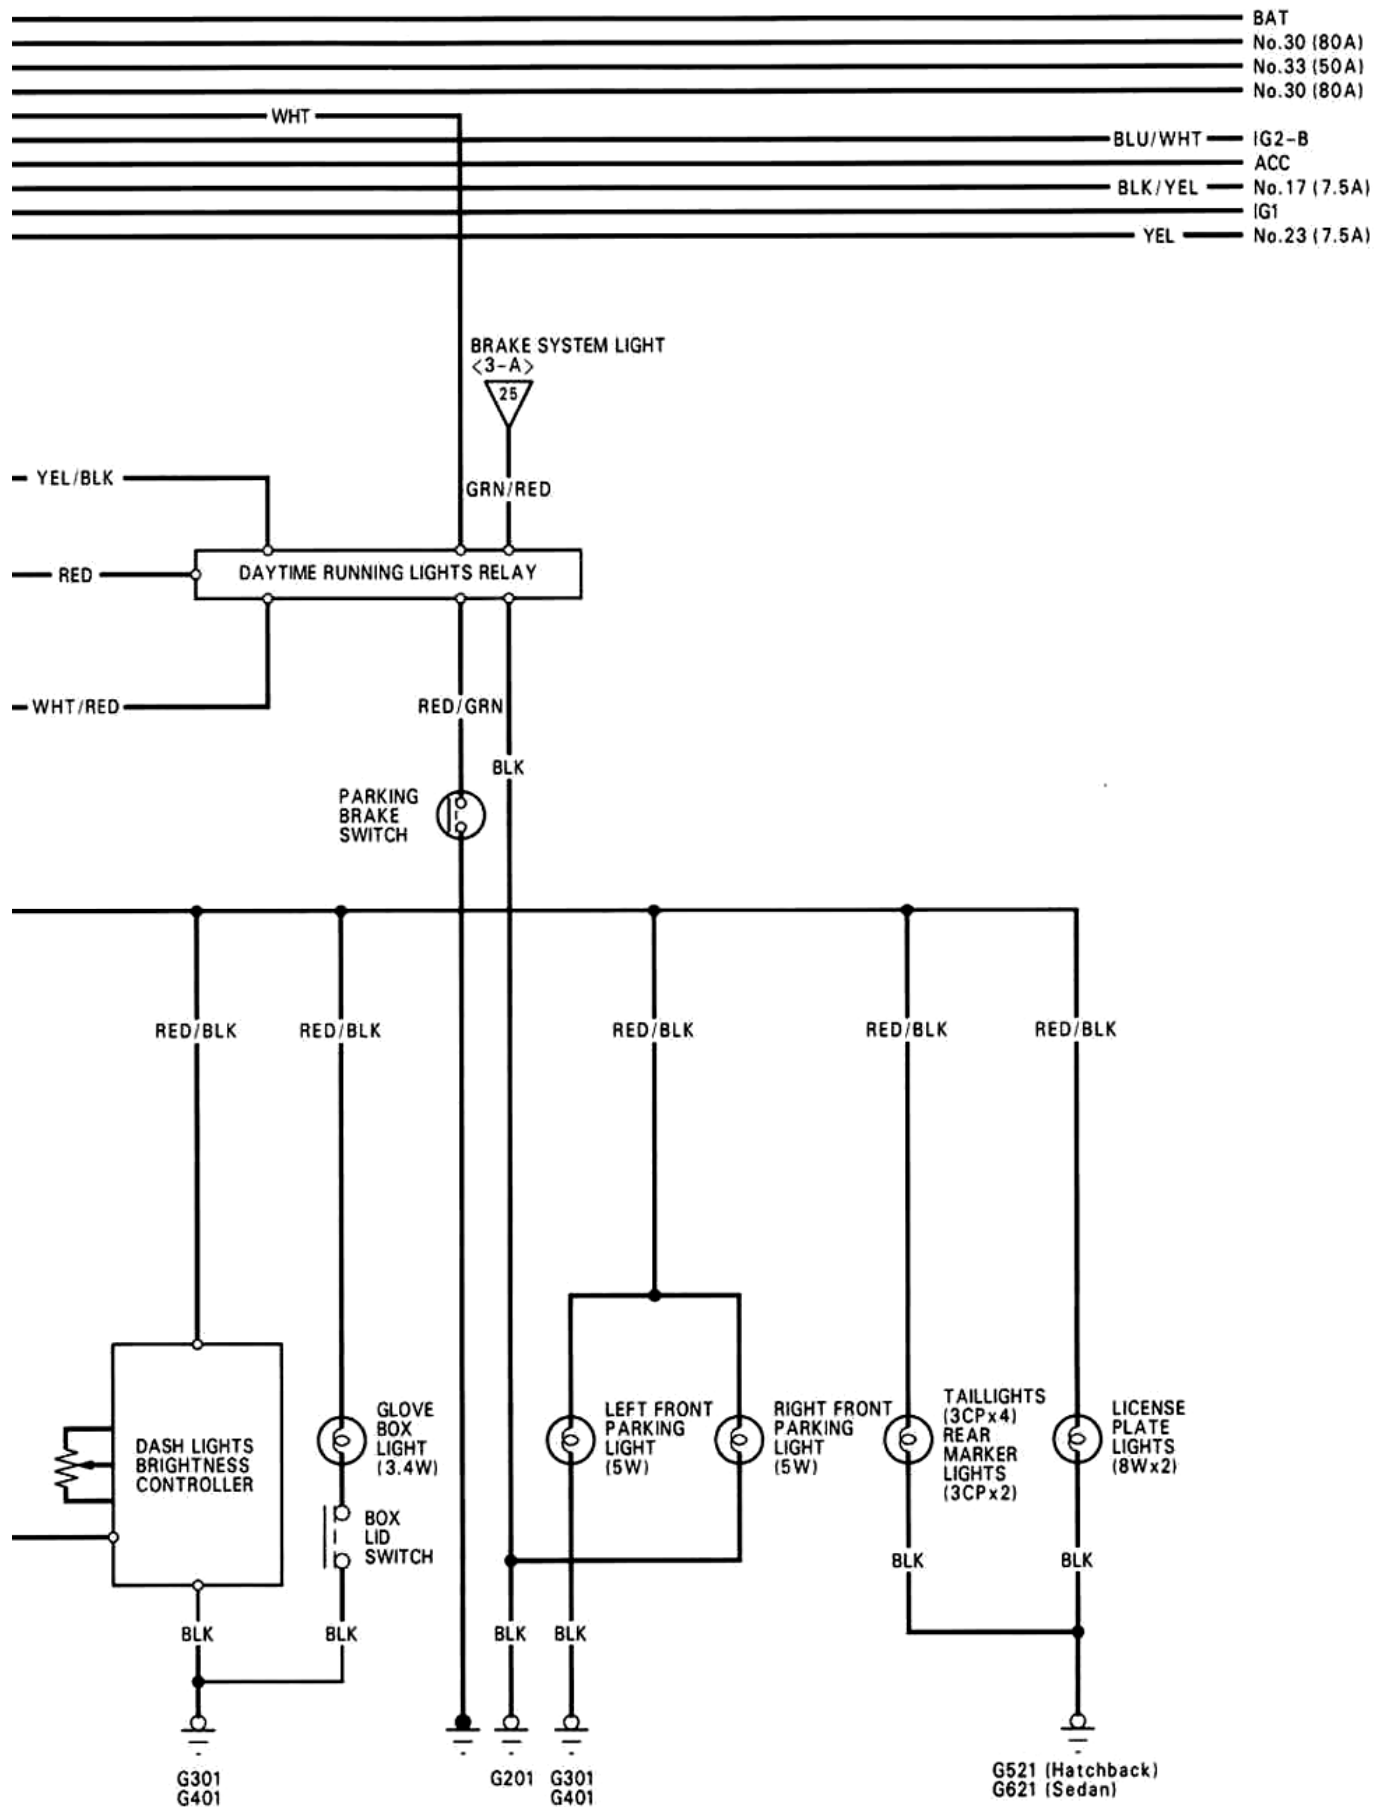


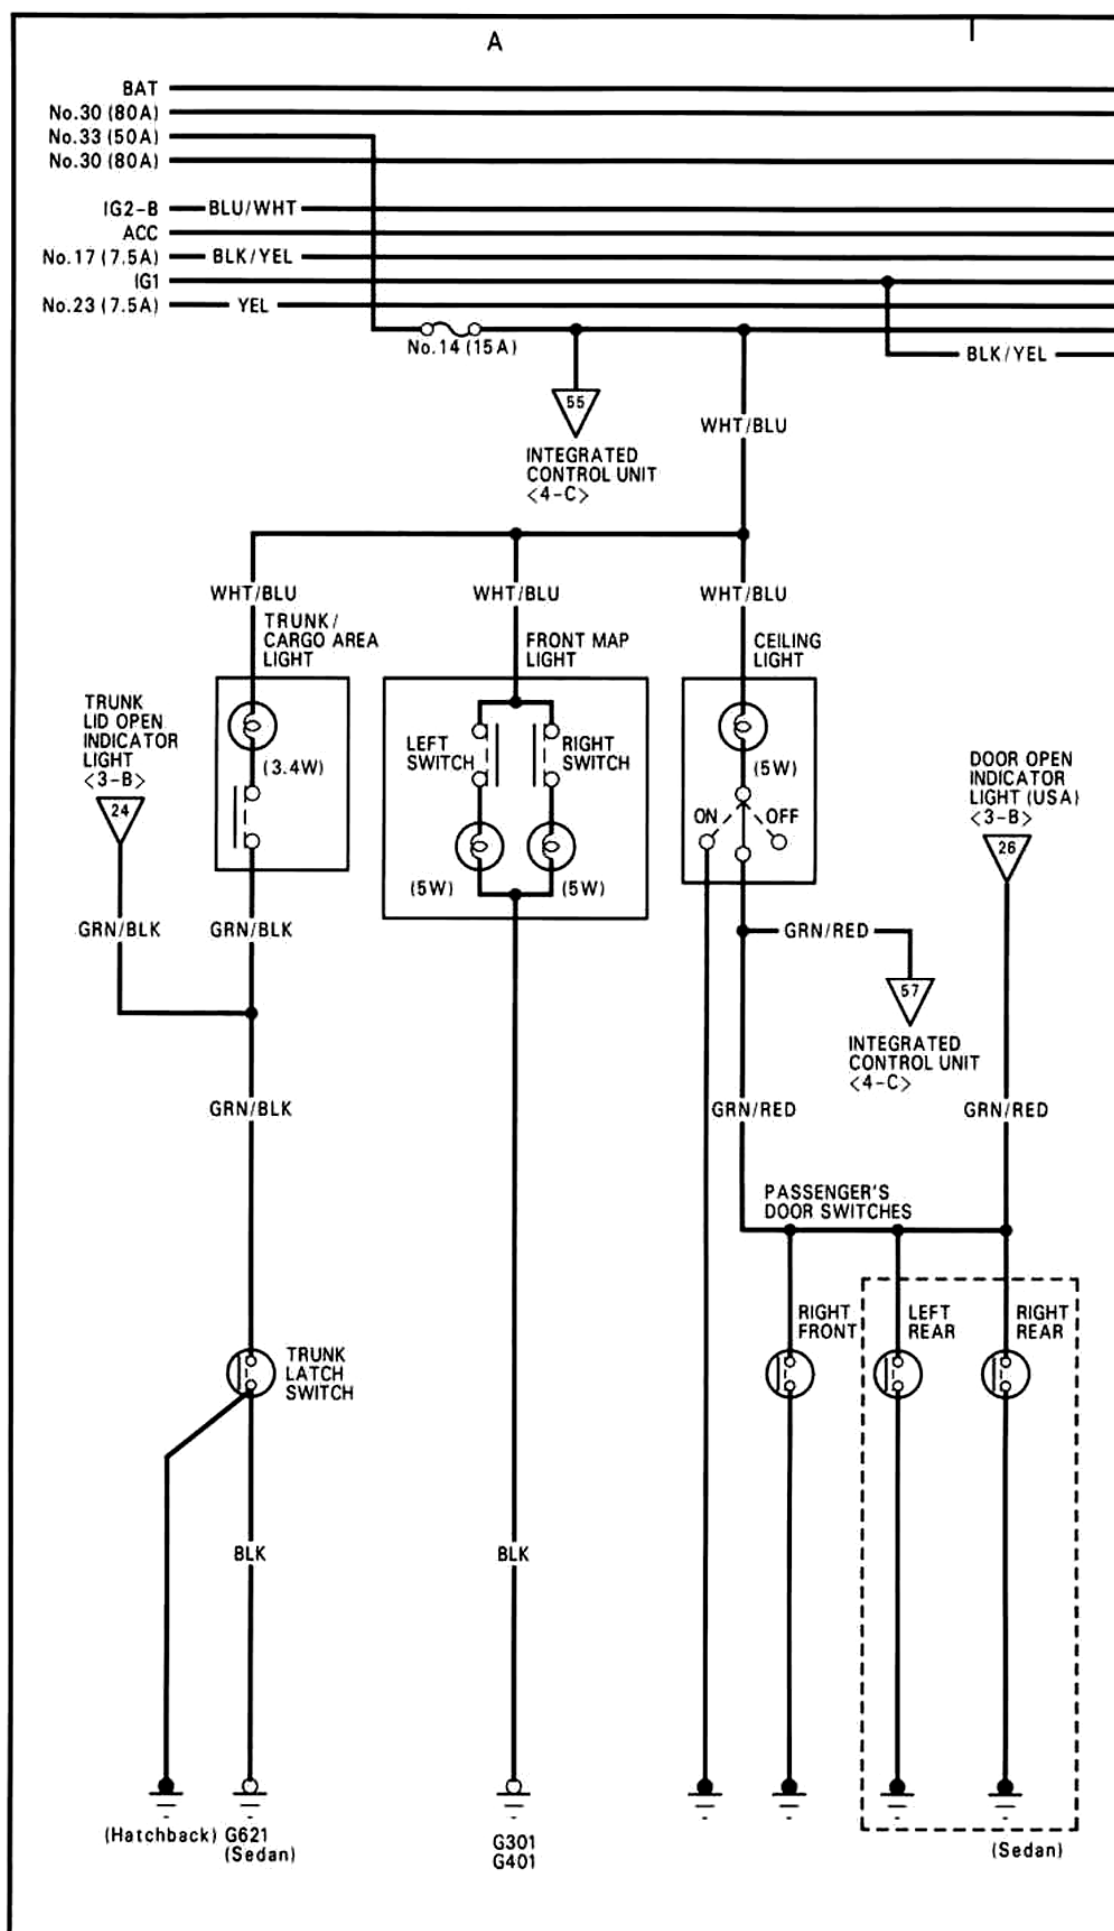


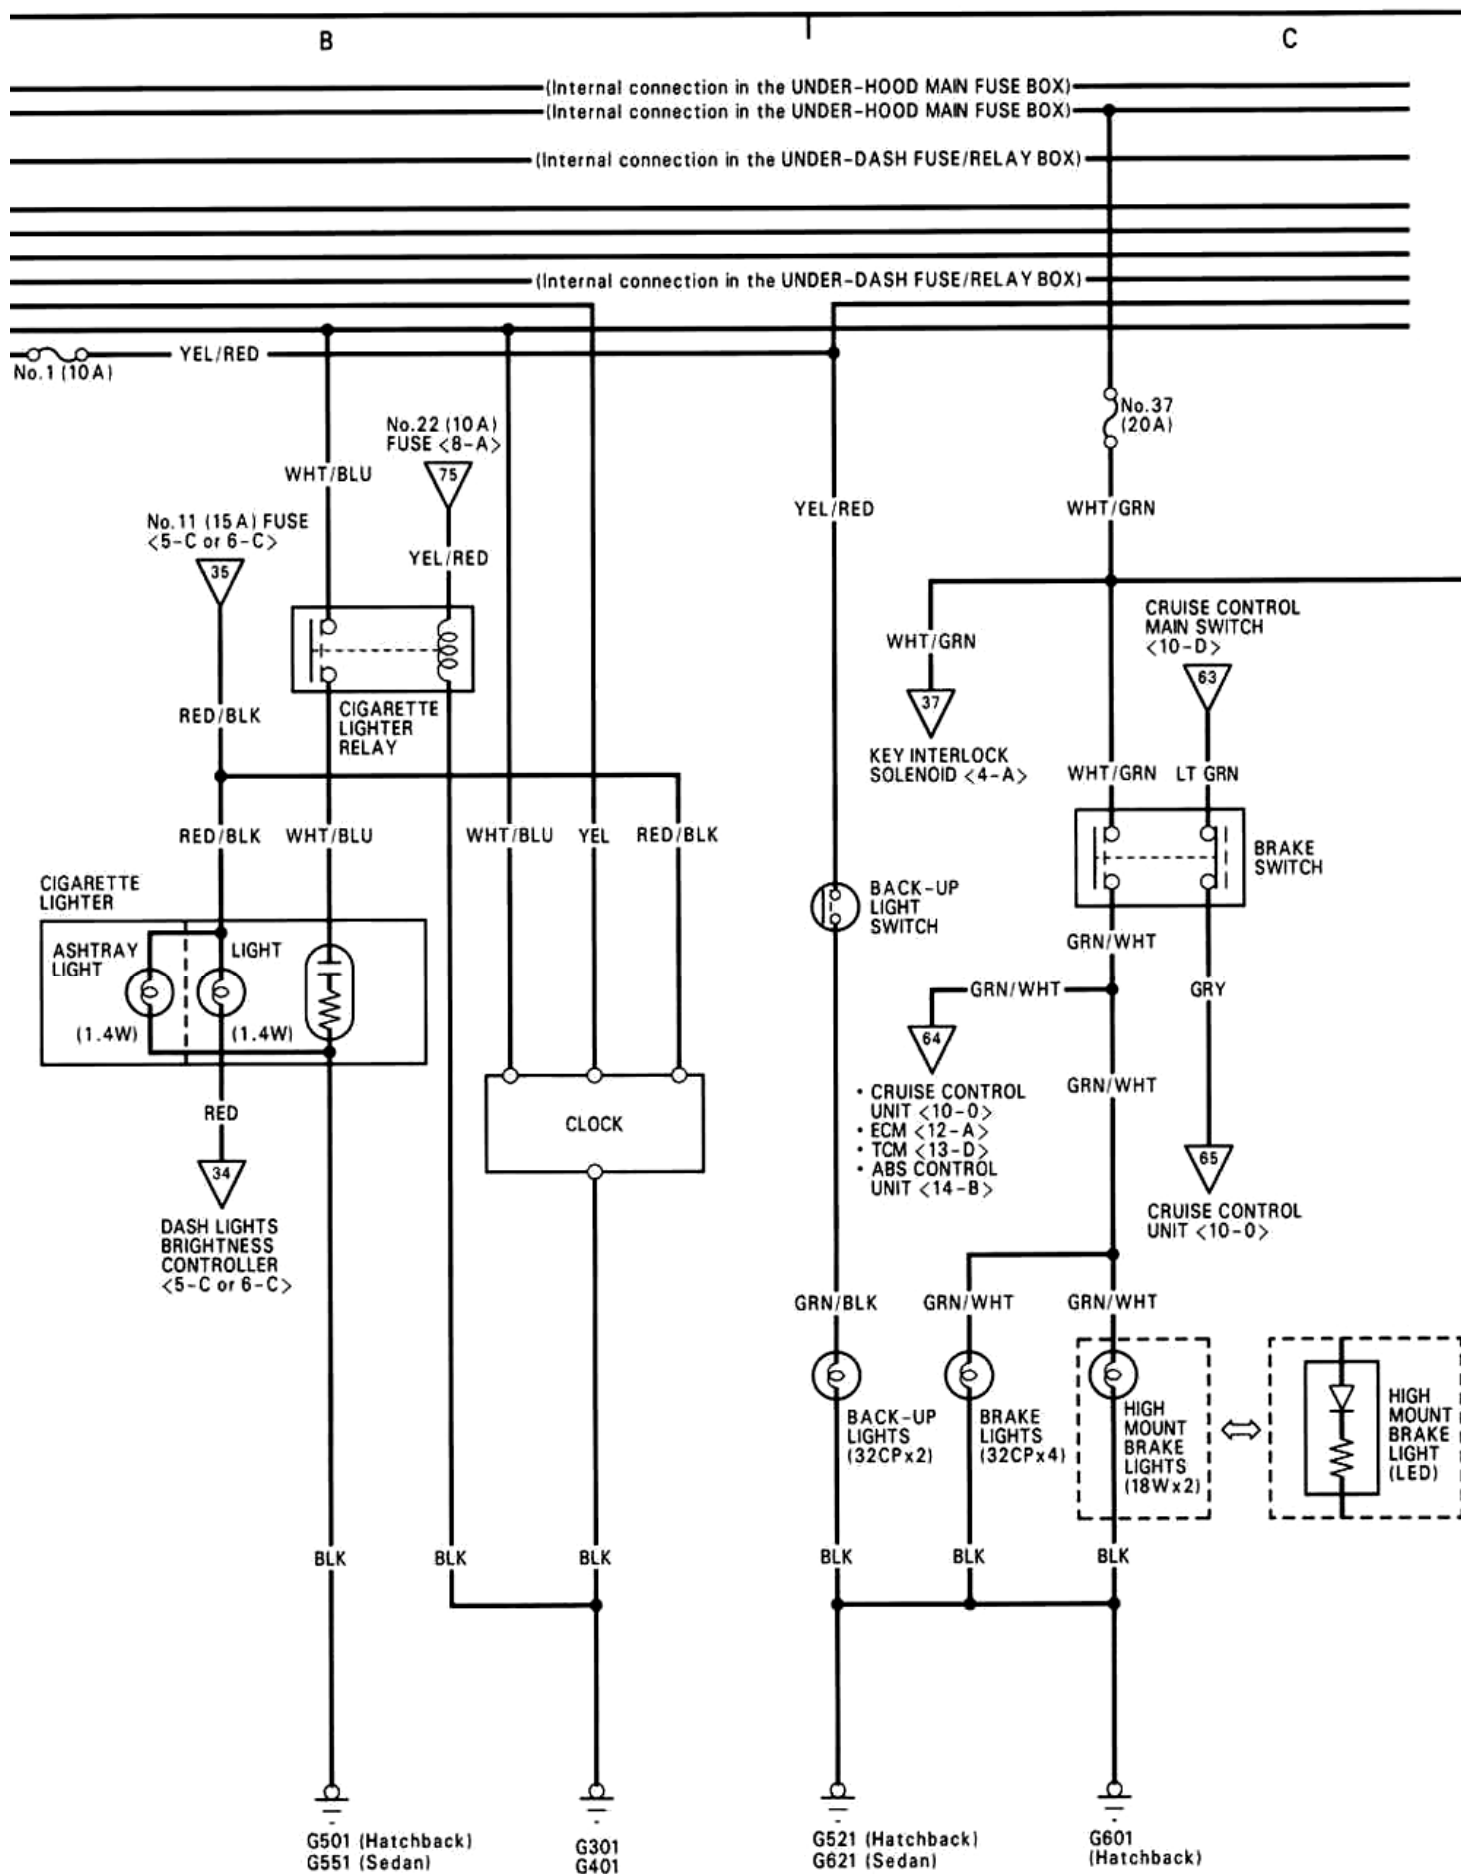

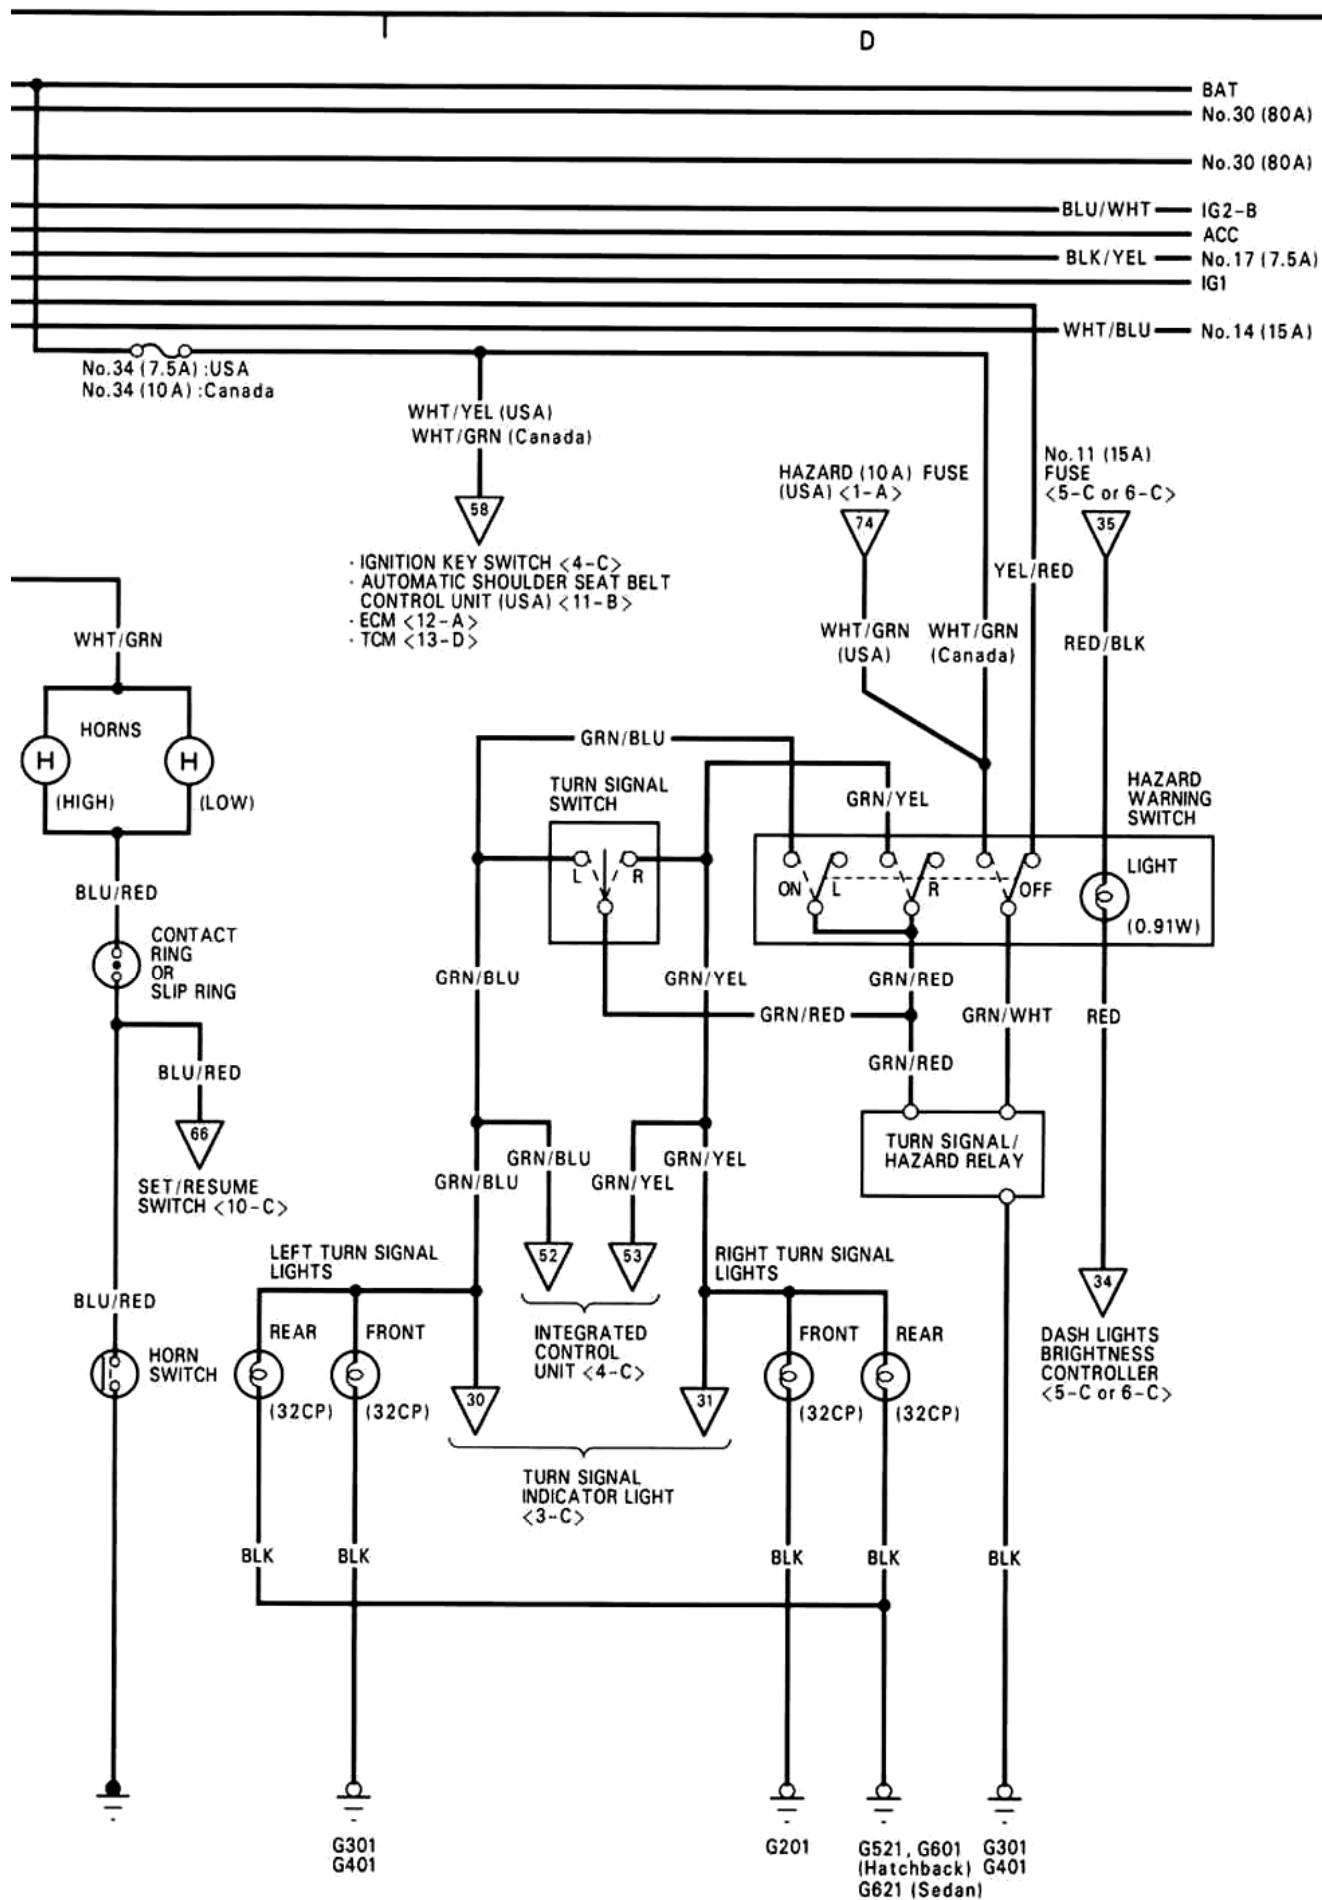

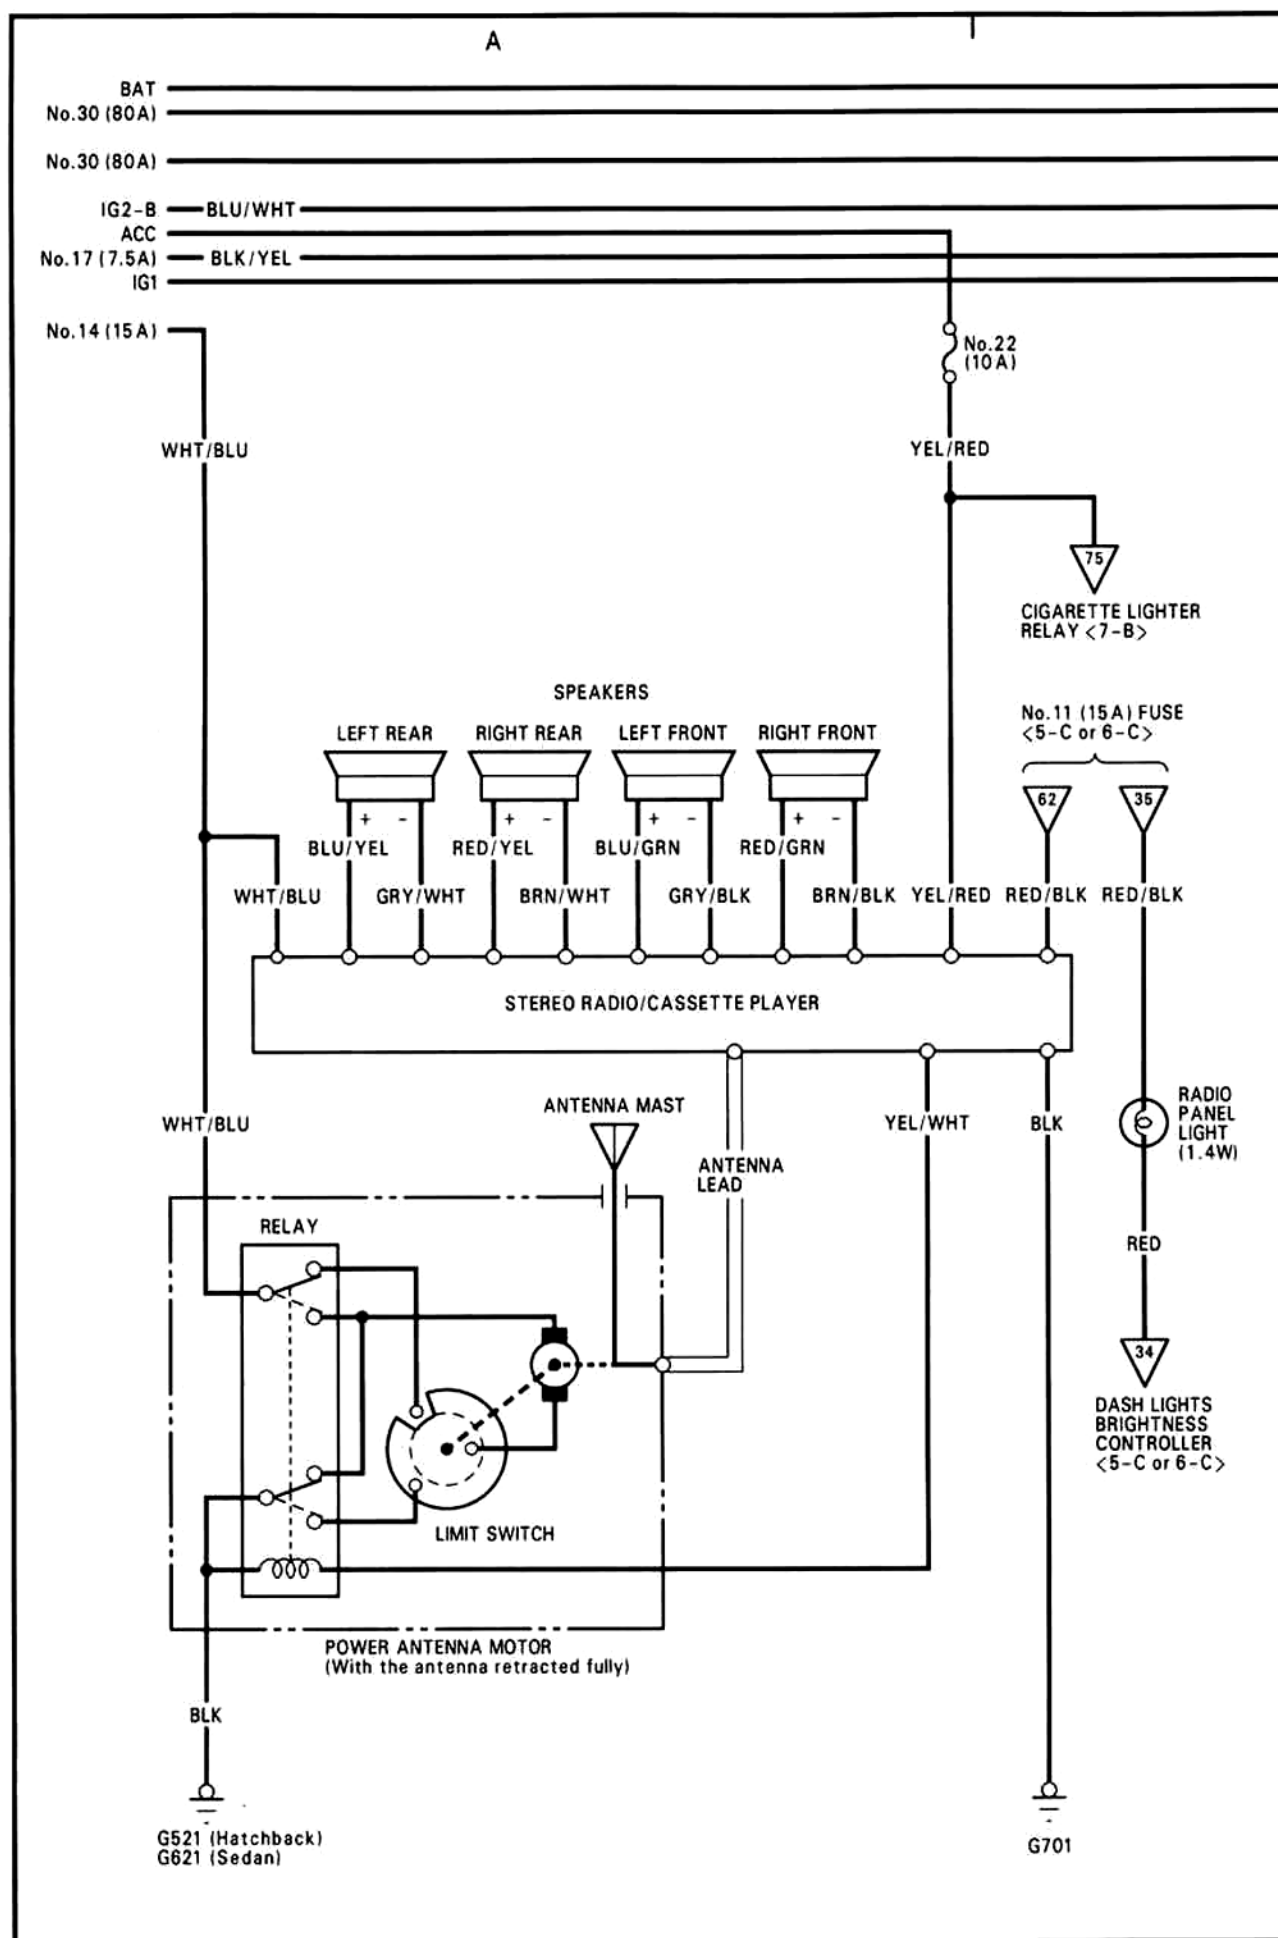


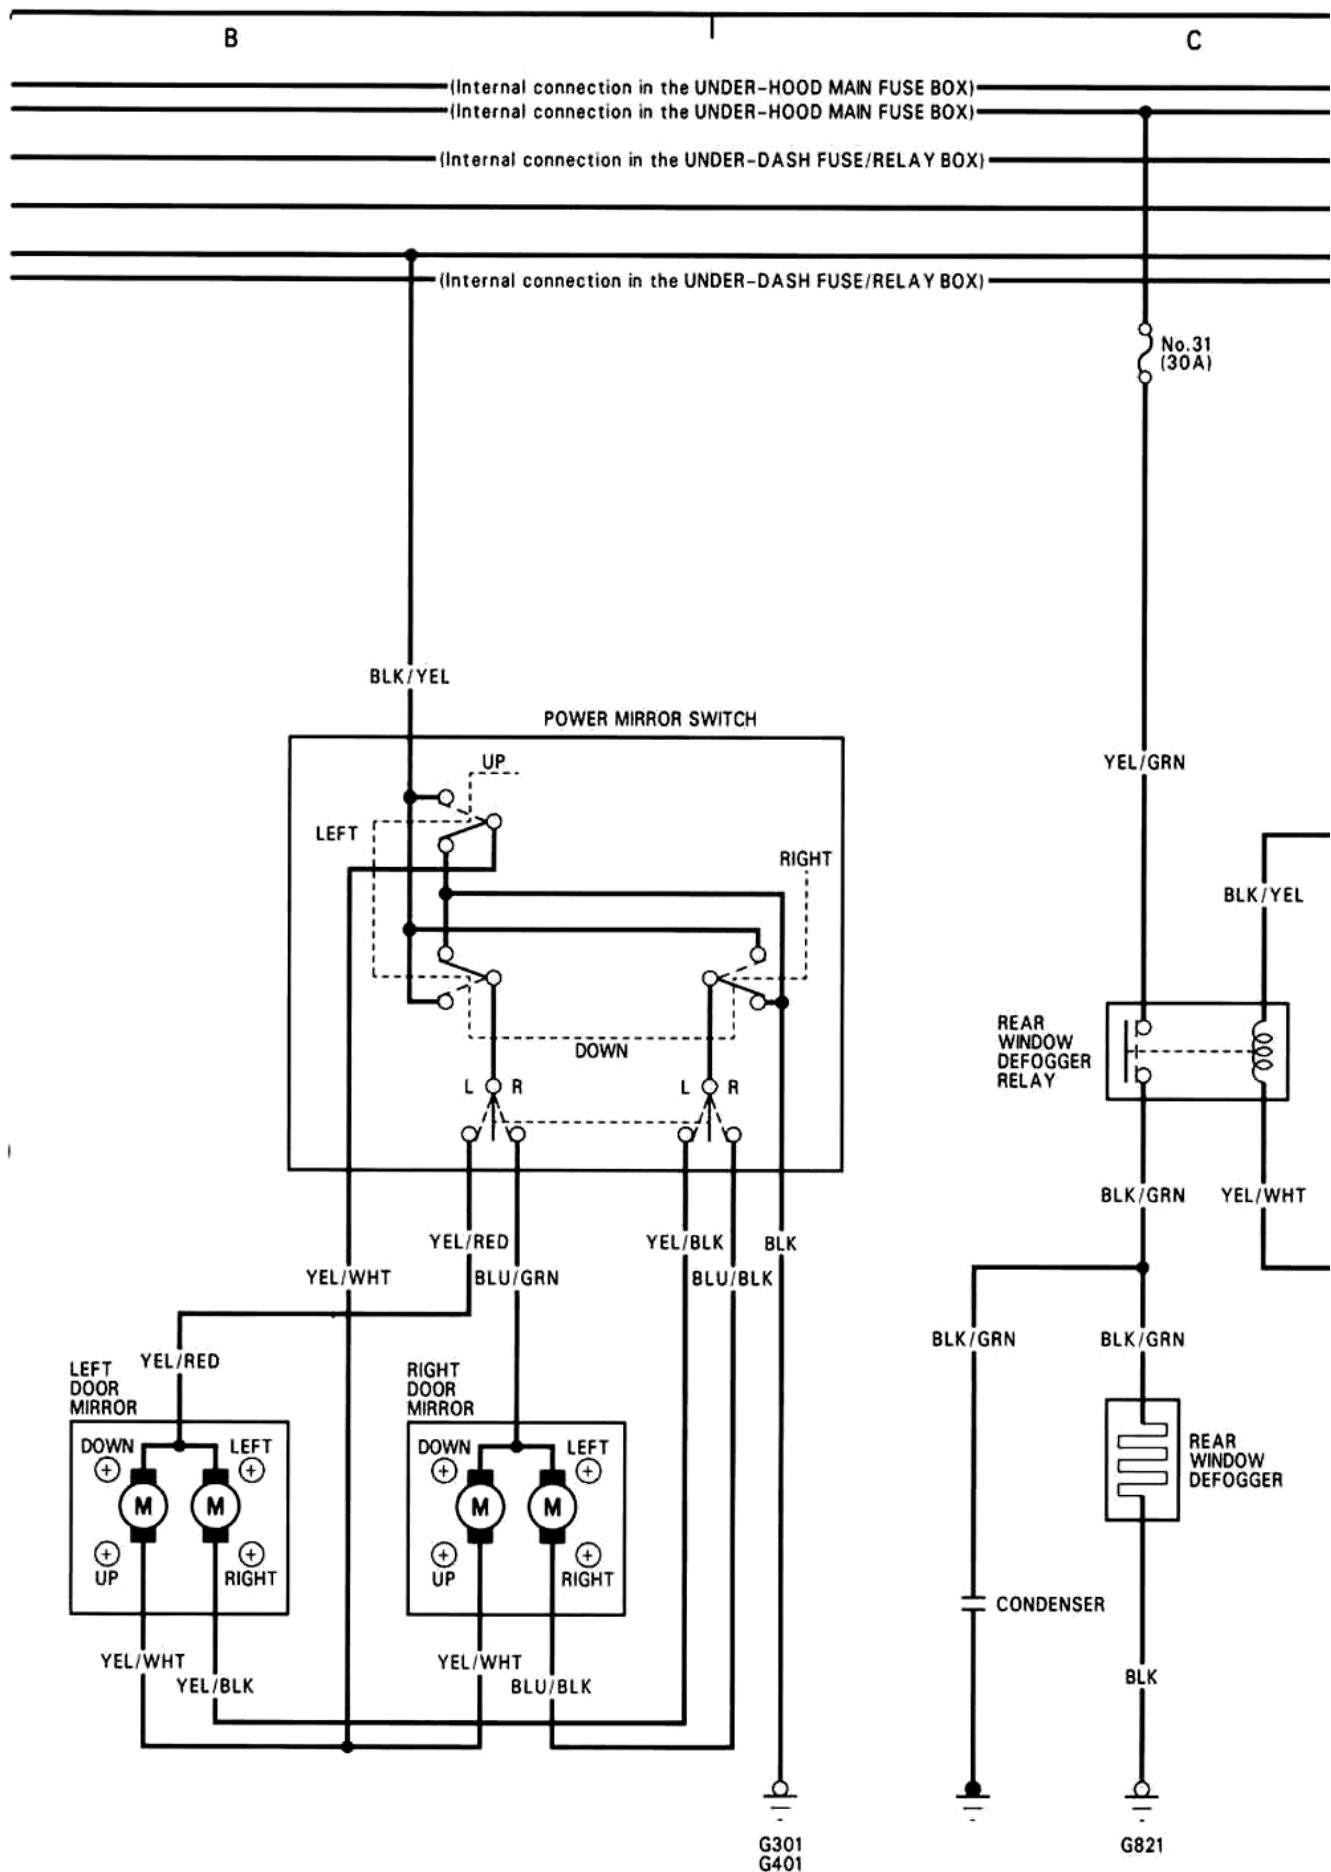

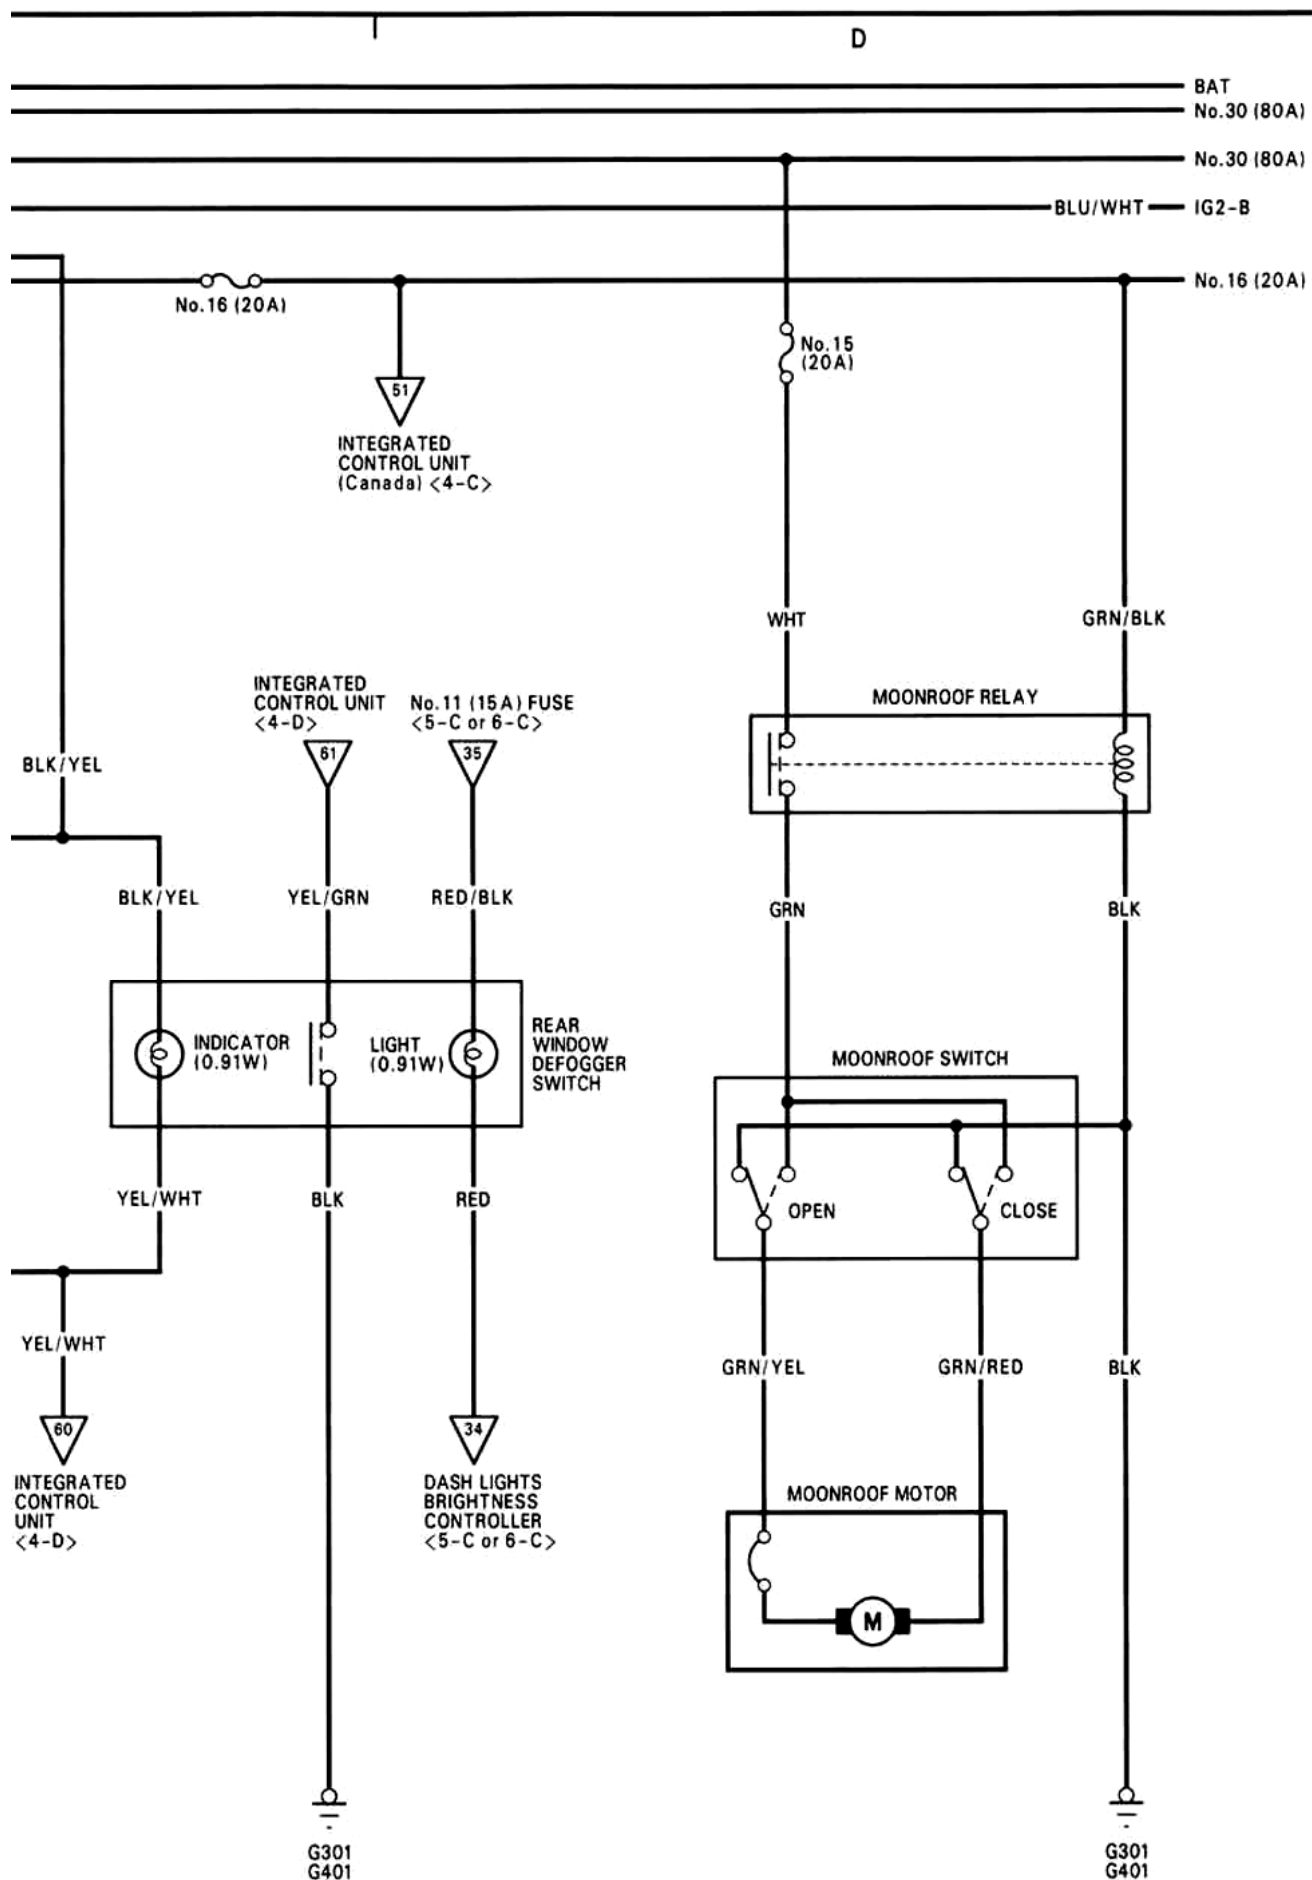




A

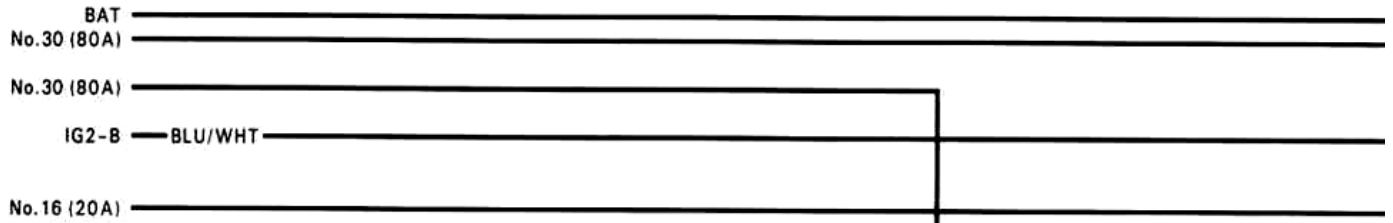

No.5  
(20A)

WHT/YEL

(Sedan)

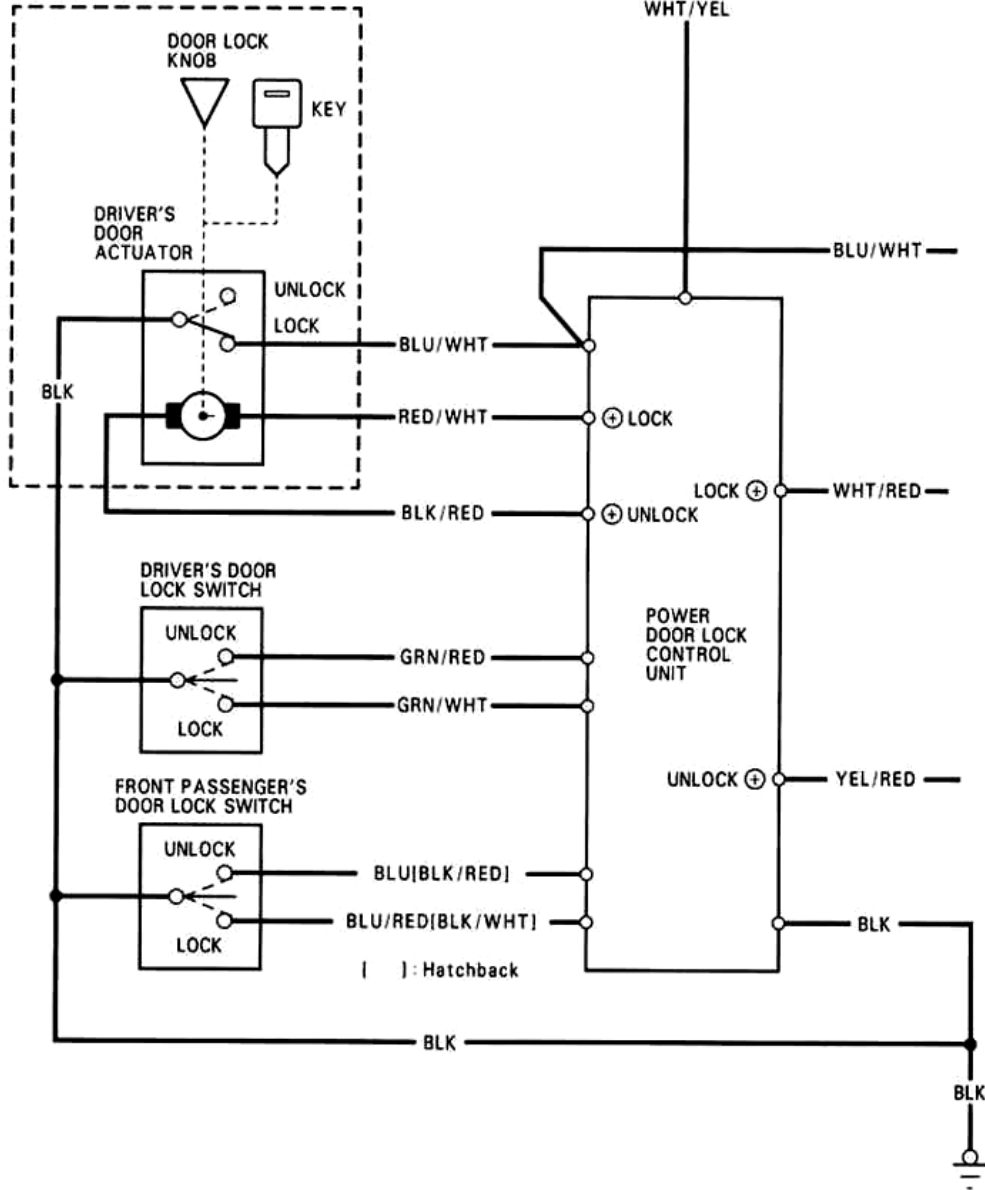


G501, G502 (Hatchback)  
G551, G552 (Sedan)


(Internal connection in the UNDER-HOOD MAIN FUSE BOX)

(Internal connection in the UNDER-HOOD MAIN FUSE BOX)


(Internal connection in the UNDER-DASH FUSE/RELAY BOX)

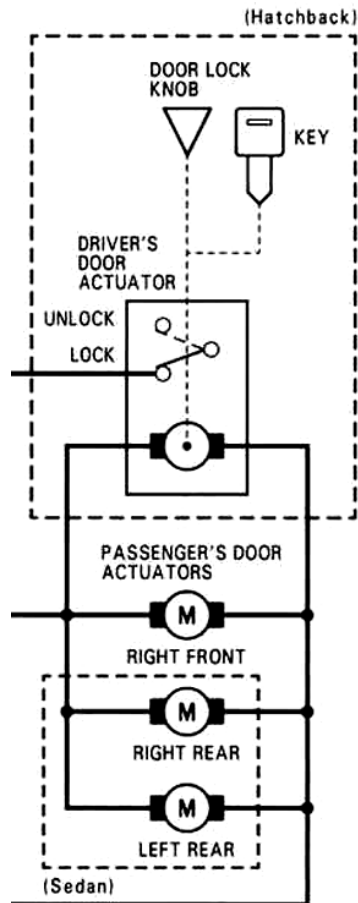


(Sedan)

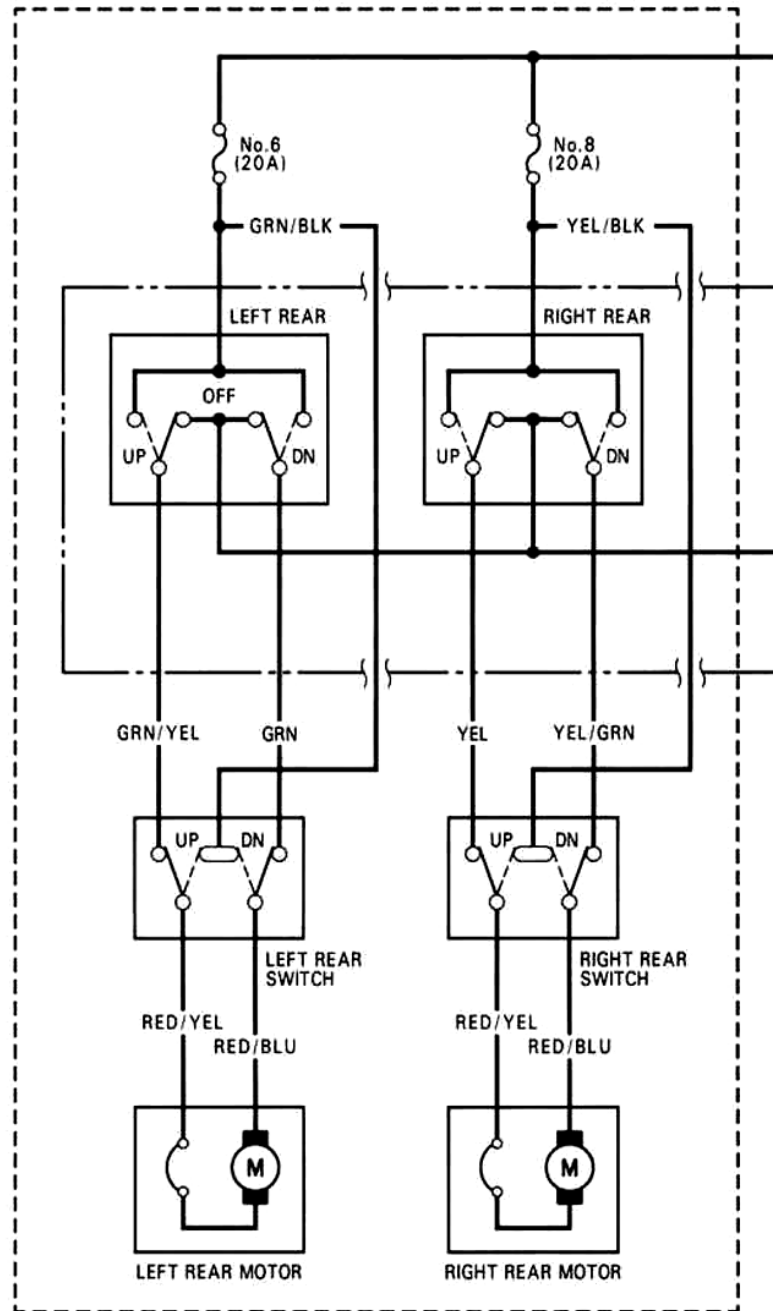

D

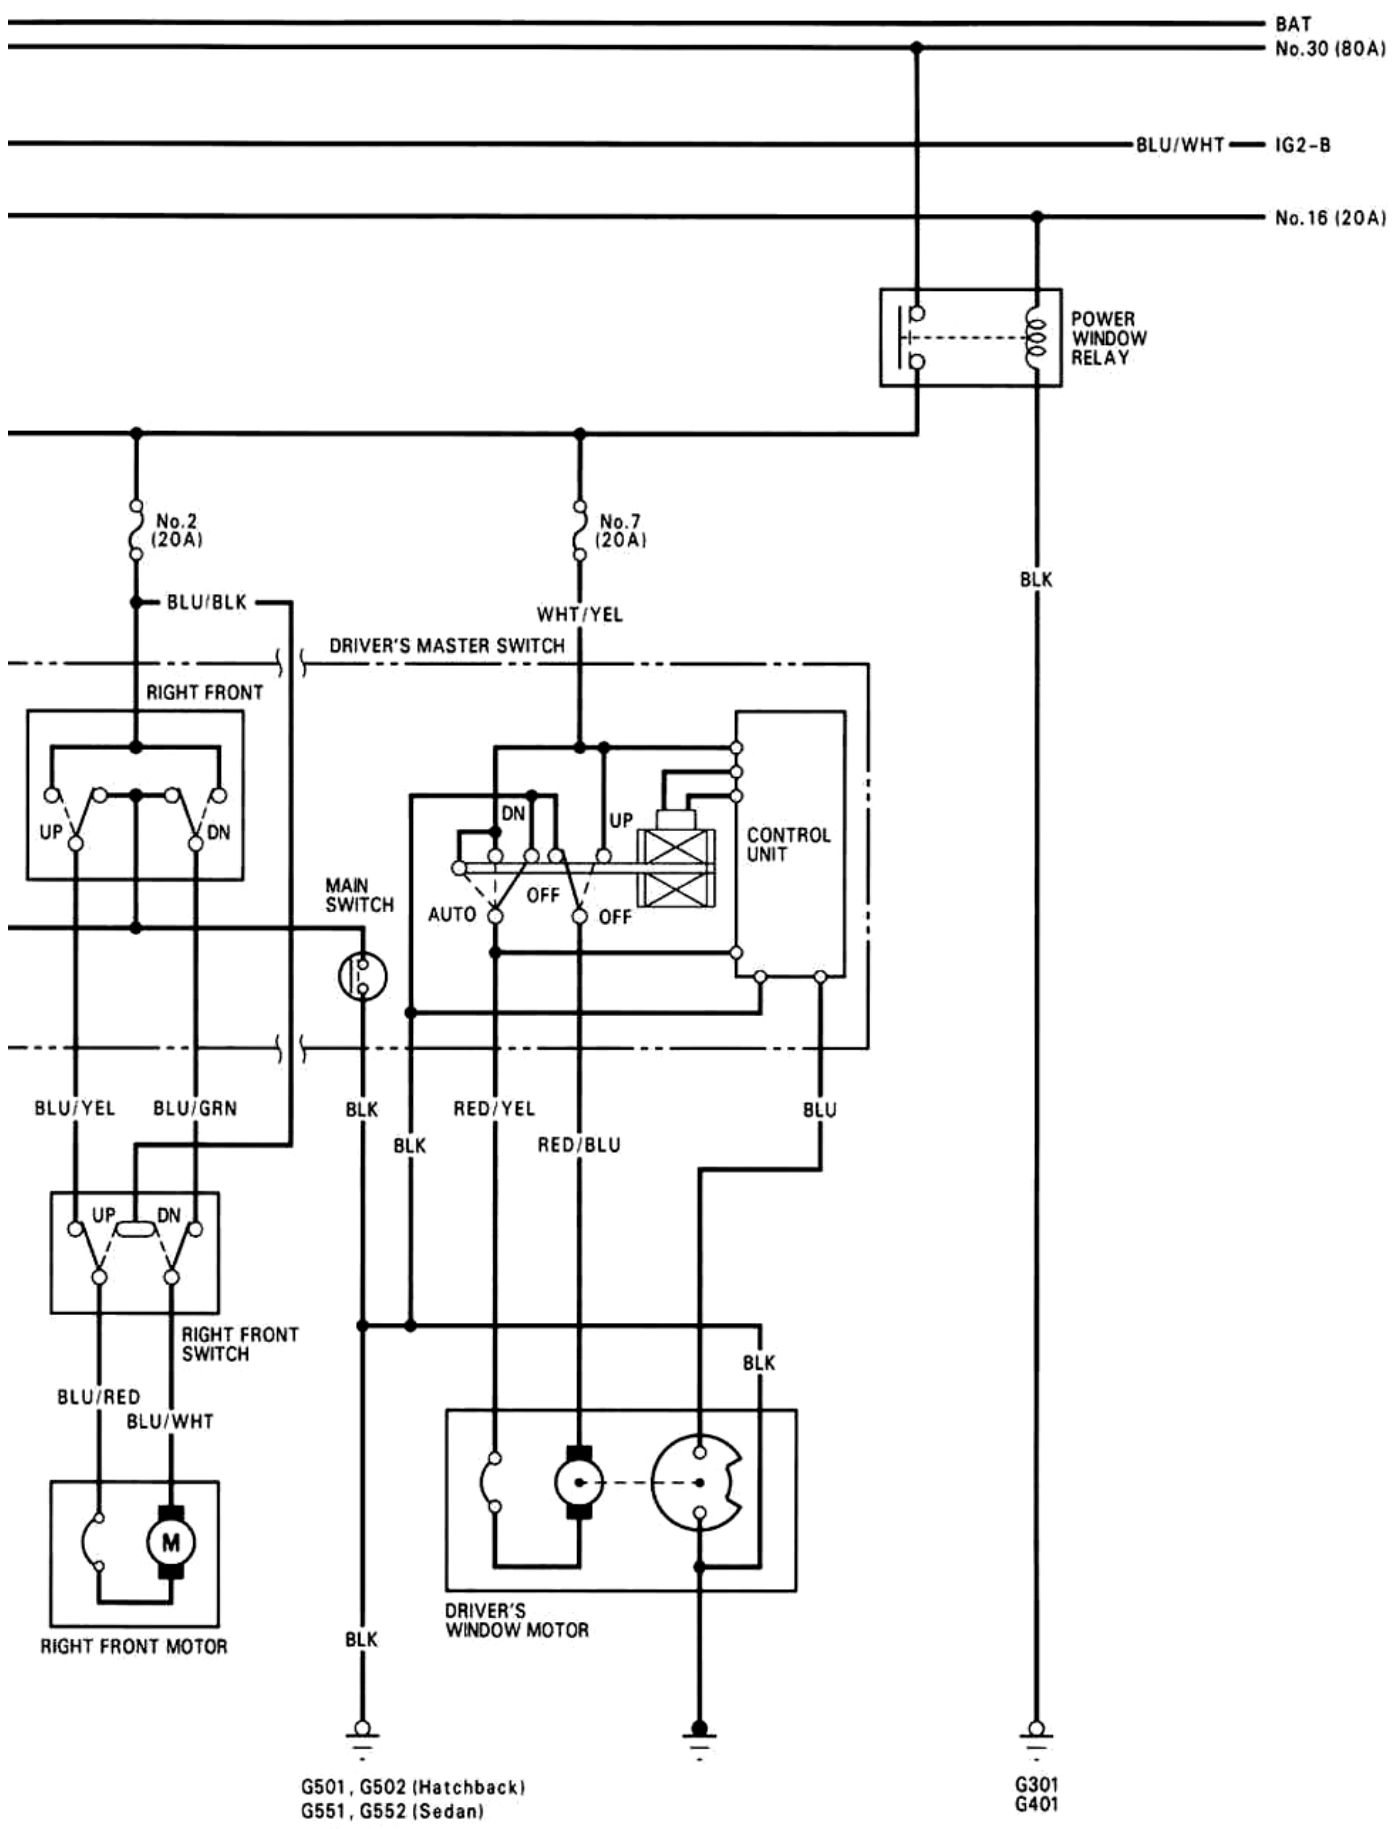

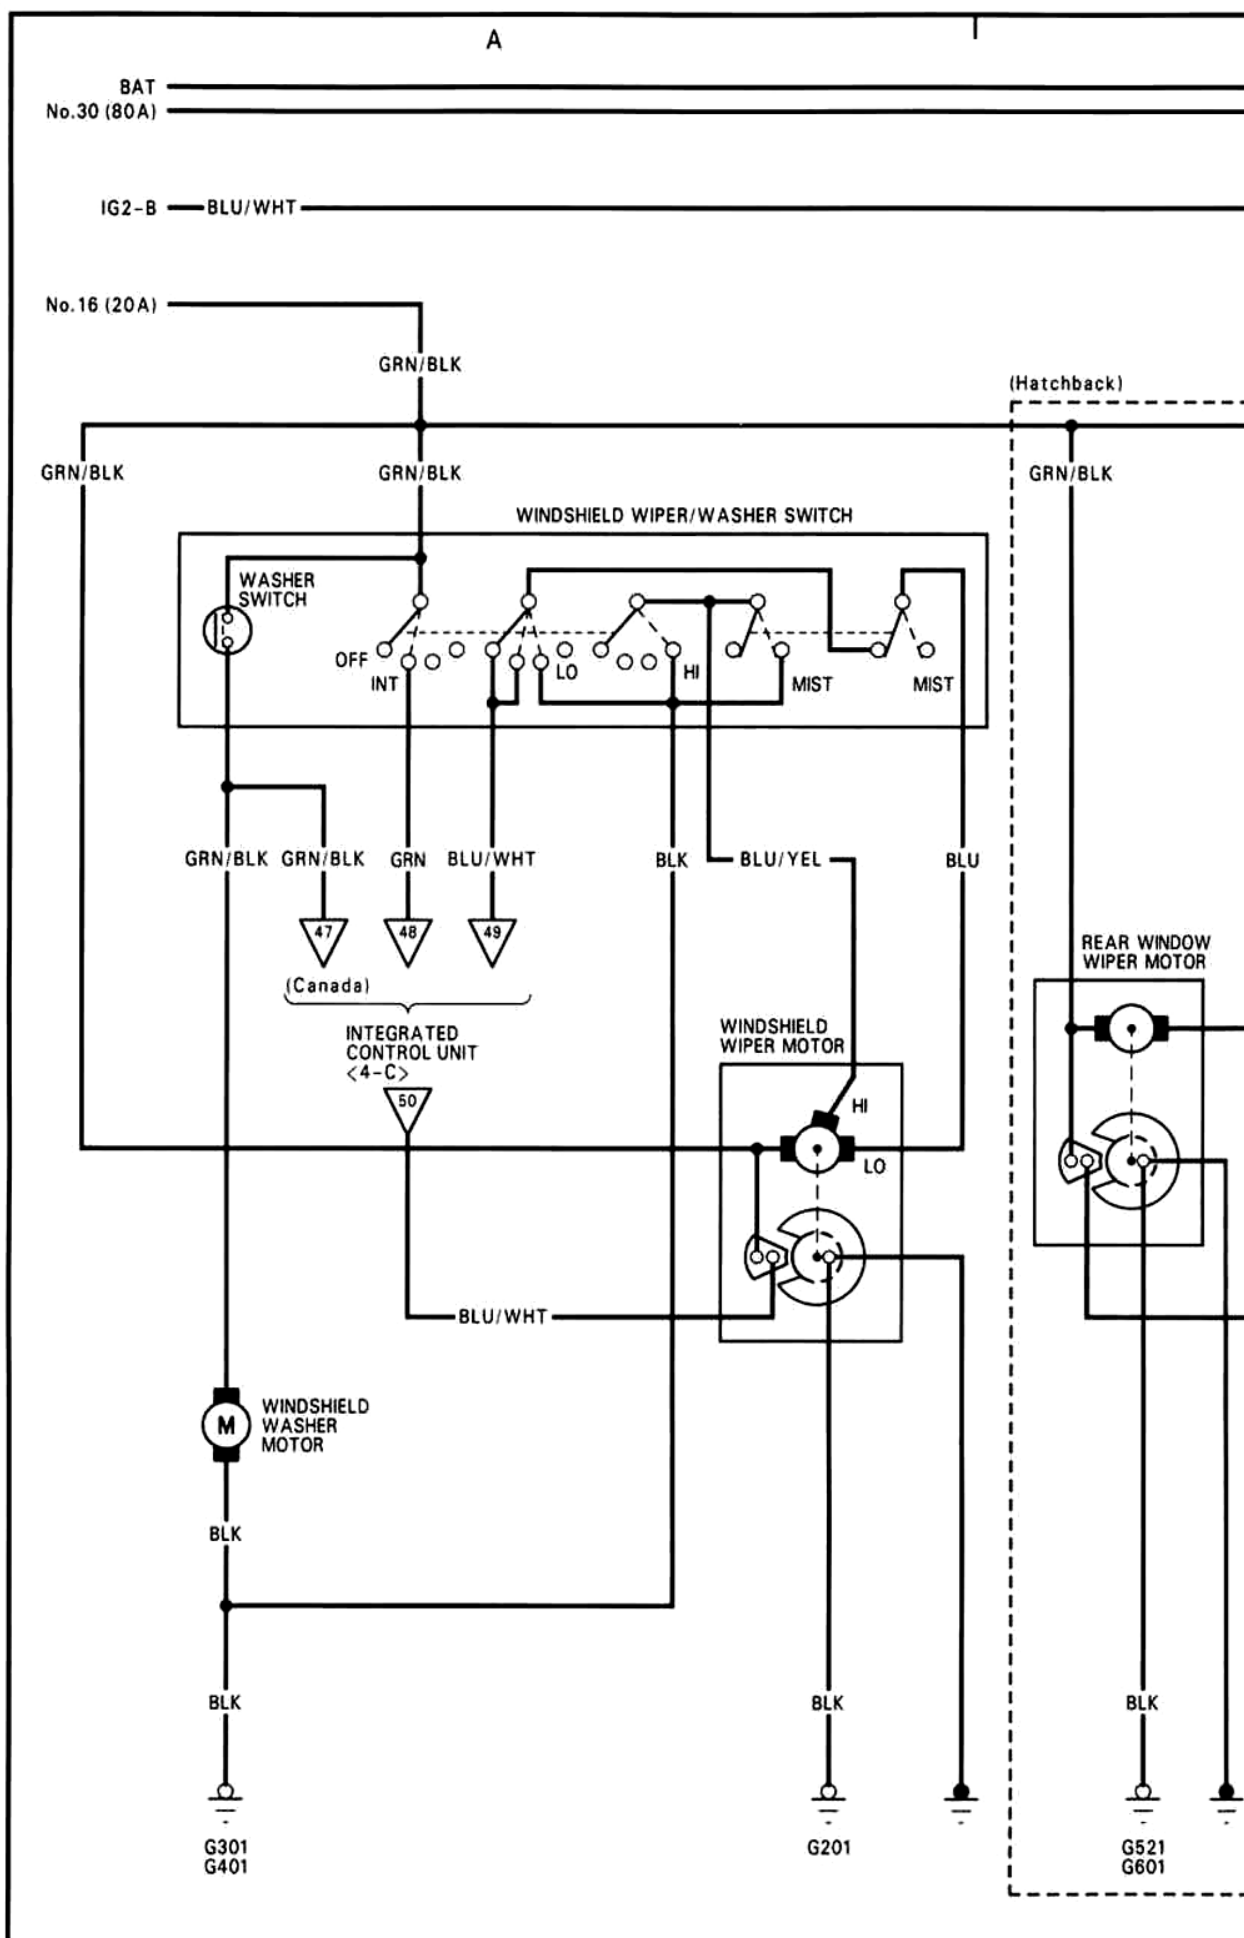


B

C

(Internal connection in the UNDER-HOOD MAIN FUSE BOX)


(Internal connection in the UNDER-HOOD MAIN FUSE BOX)

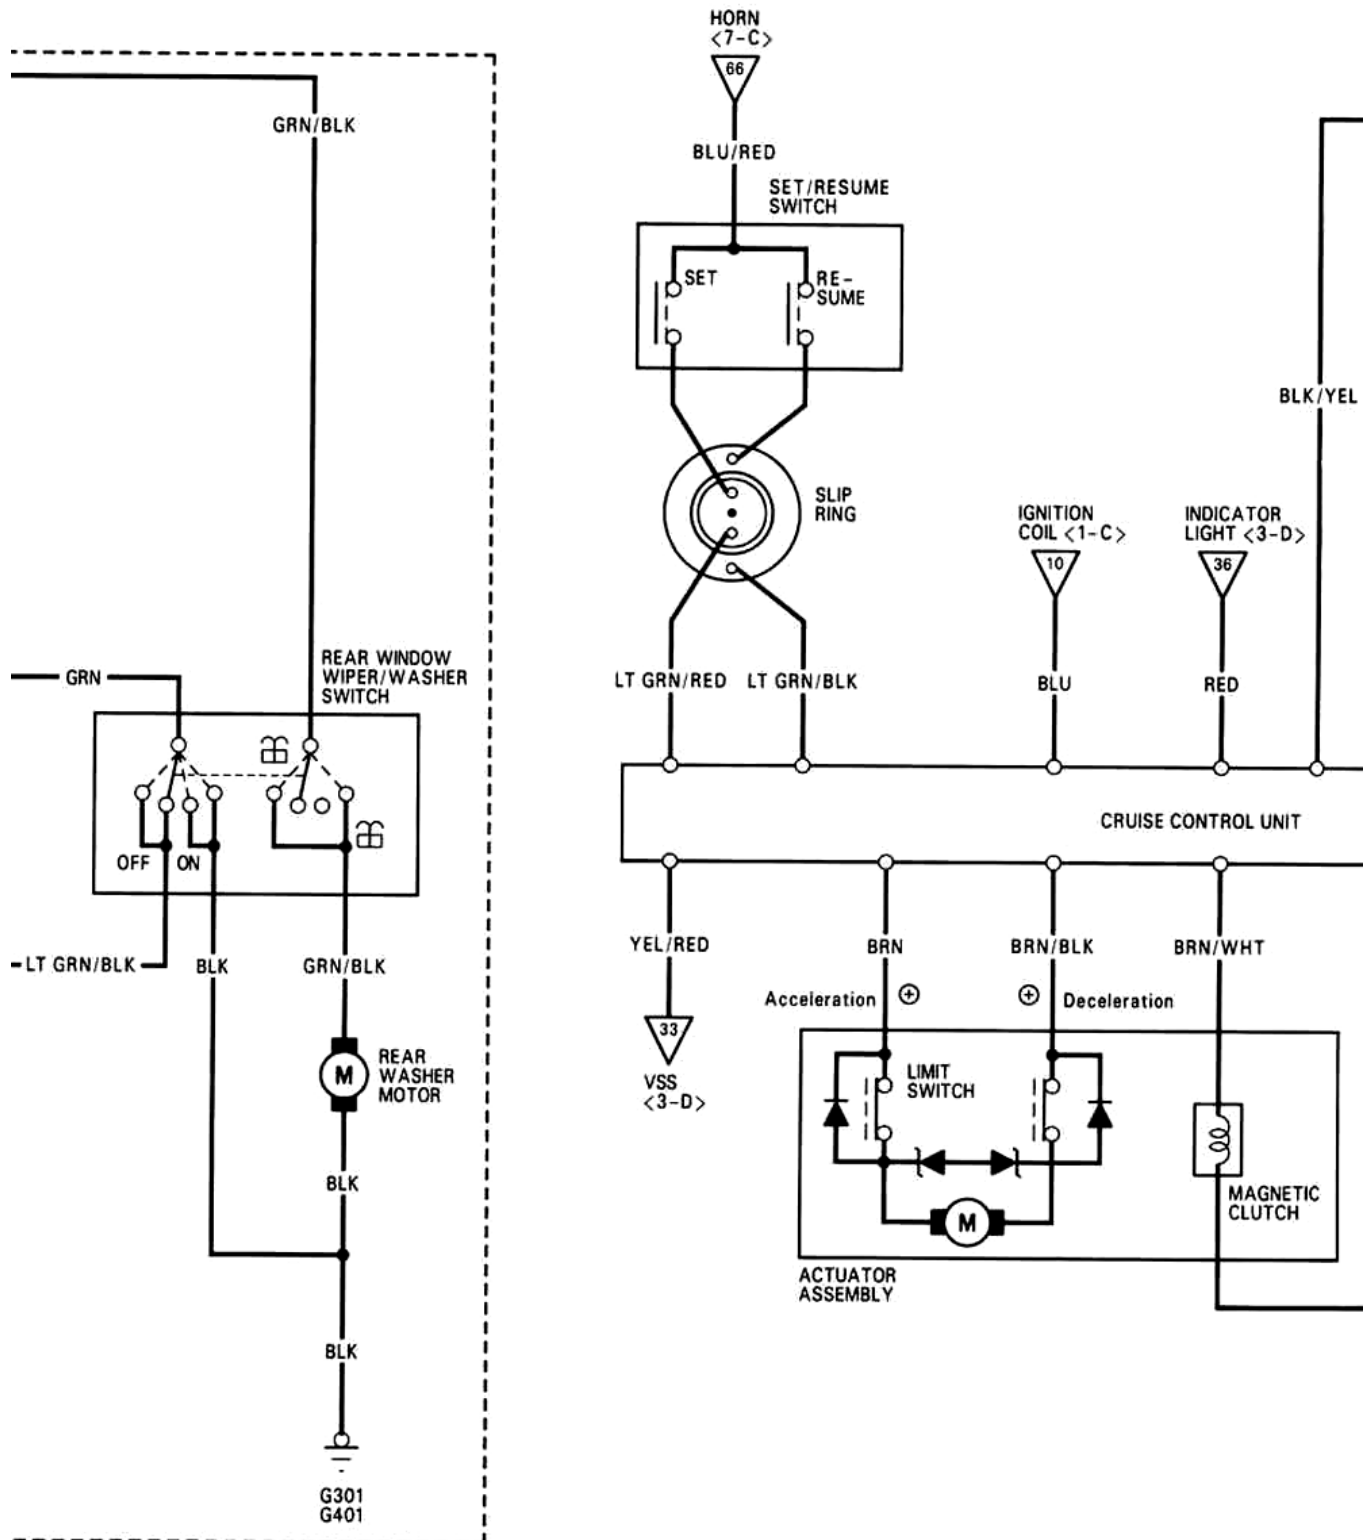

D

BAT  
No.30 (80A)

BLU/WHT IG2-B

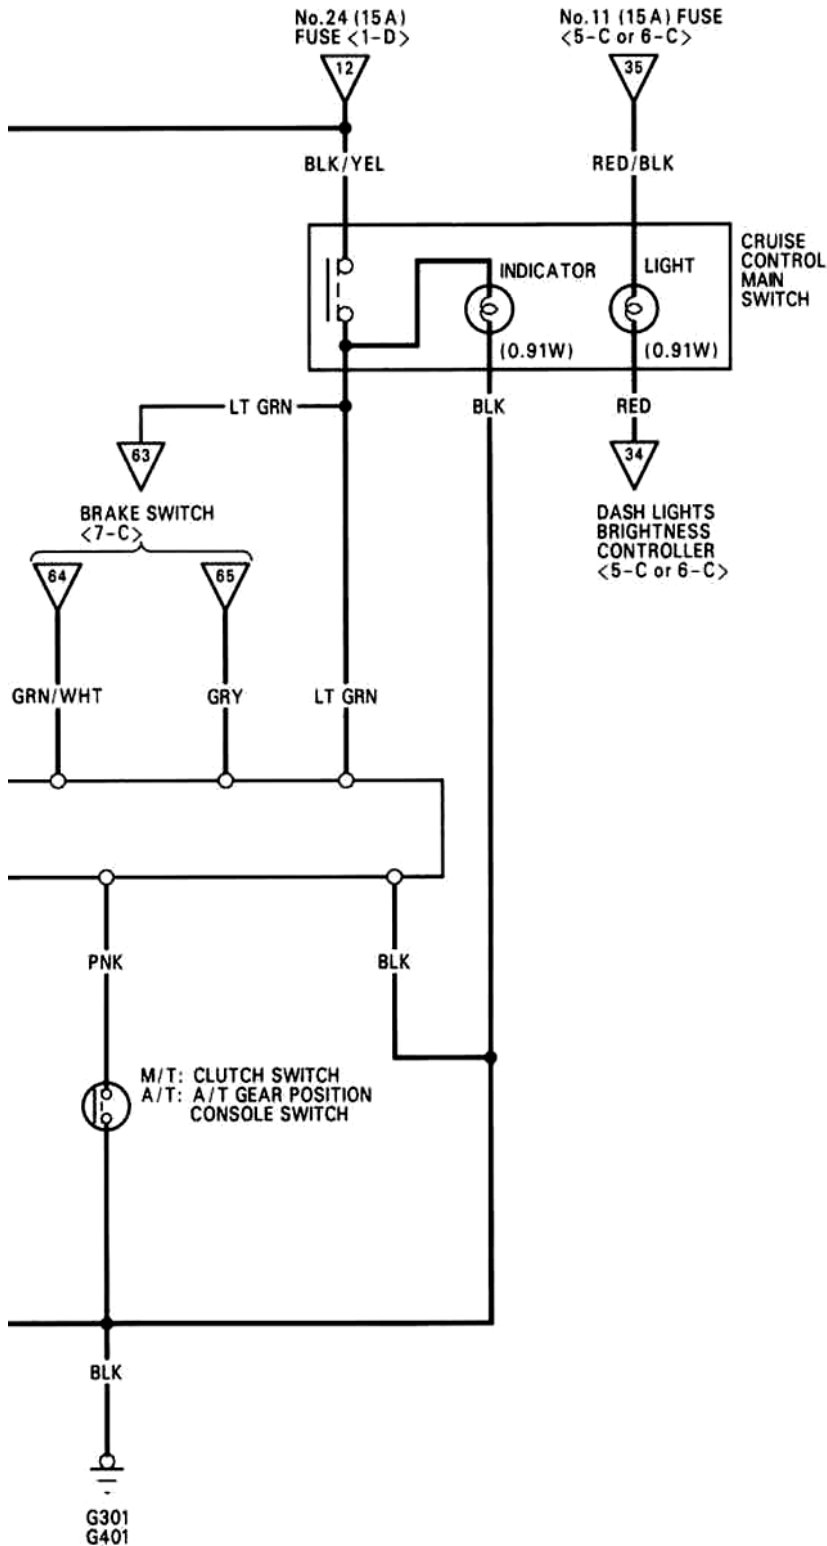

BAT  
No.30 (80A)

IG2-B — BLU/WHT

A

IGNITION KEY  
SWITCH <4-C>

59

No.36  
(30A)

BLU/WHT

WHT/GRN

GRN/BLU  
WHT/YEL  
DRIVER'S  
DOOR  
LATCH  
SWITCH

CLOSE OPEN

BLU/WHT

WHT/BLK

WHT/BLU

BLU/WHT

BLU/RED

FRONT  
POSITION  
SWITCH

ANCHOR  
BELT

REAR  
LOCK  
POSITION  
SWITCH

SHOULDER  
BUCKLE  
MOTOR

DRIVER'S SHOULDER  
SEAT BELT RAIL  
ASSEMBLY

BLK


G501 (Hatchback)  
G551 (Sedan)

B


C


(Internal connection in the UNDER-HOOD MAIN FUSE BOX)

(Internal connection in the UNDER-HOOD MAIN FUSE BOX)

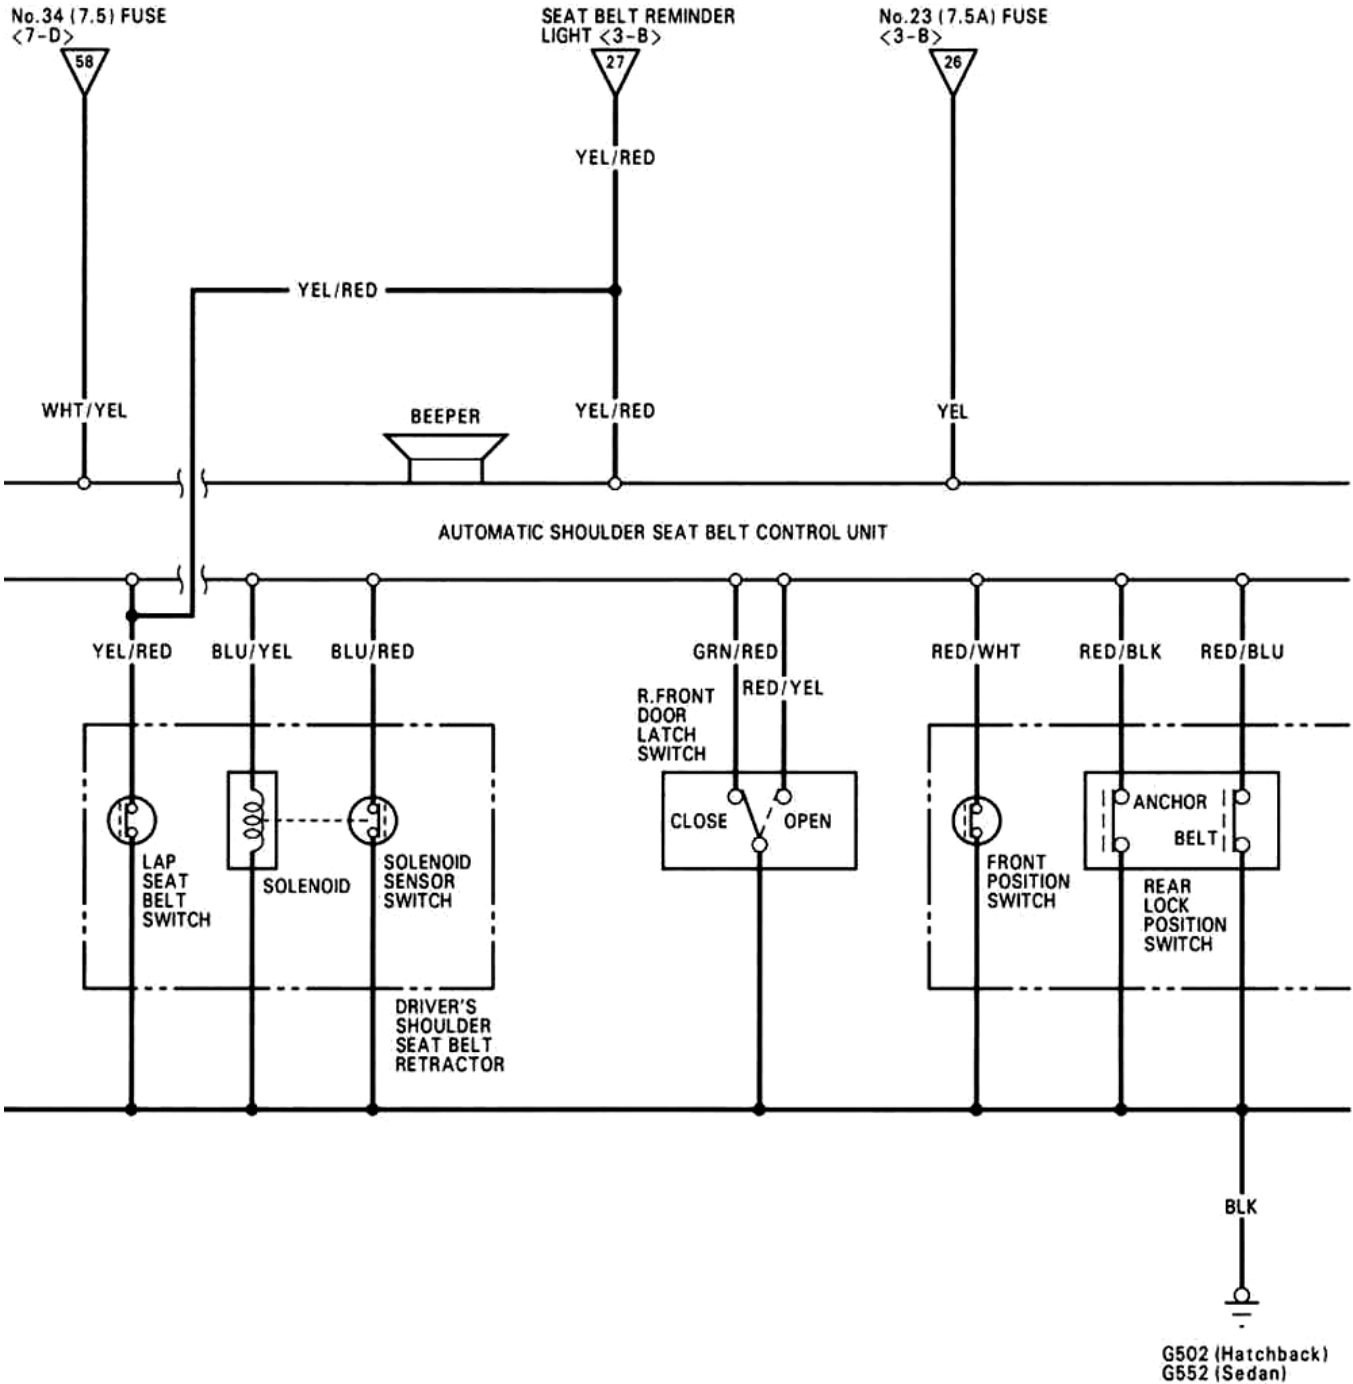




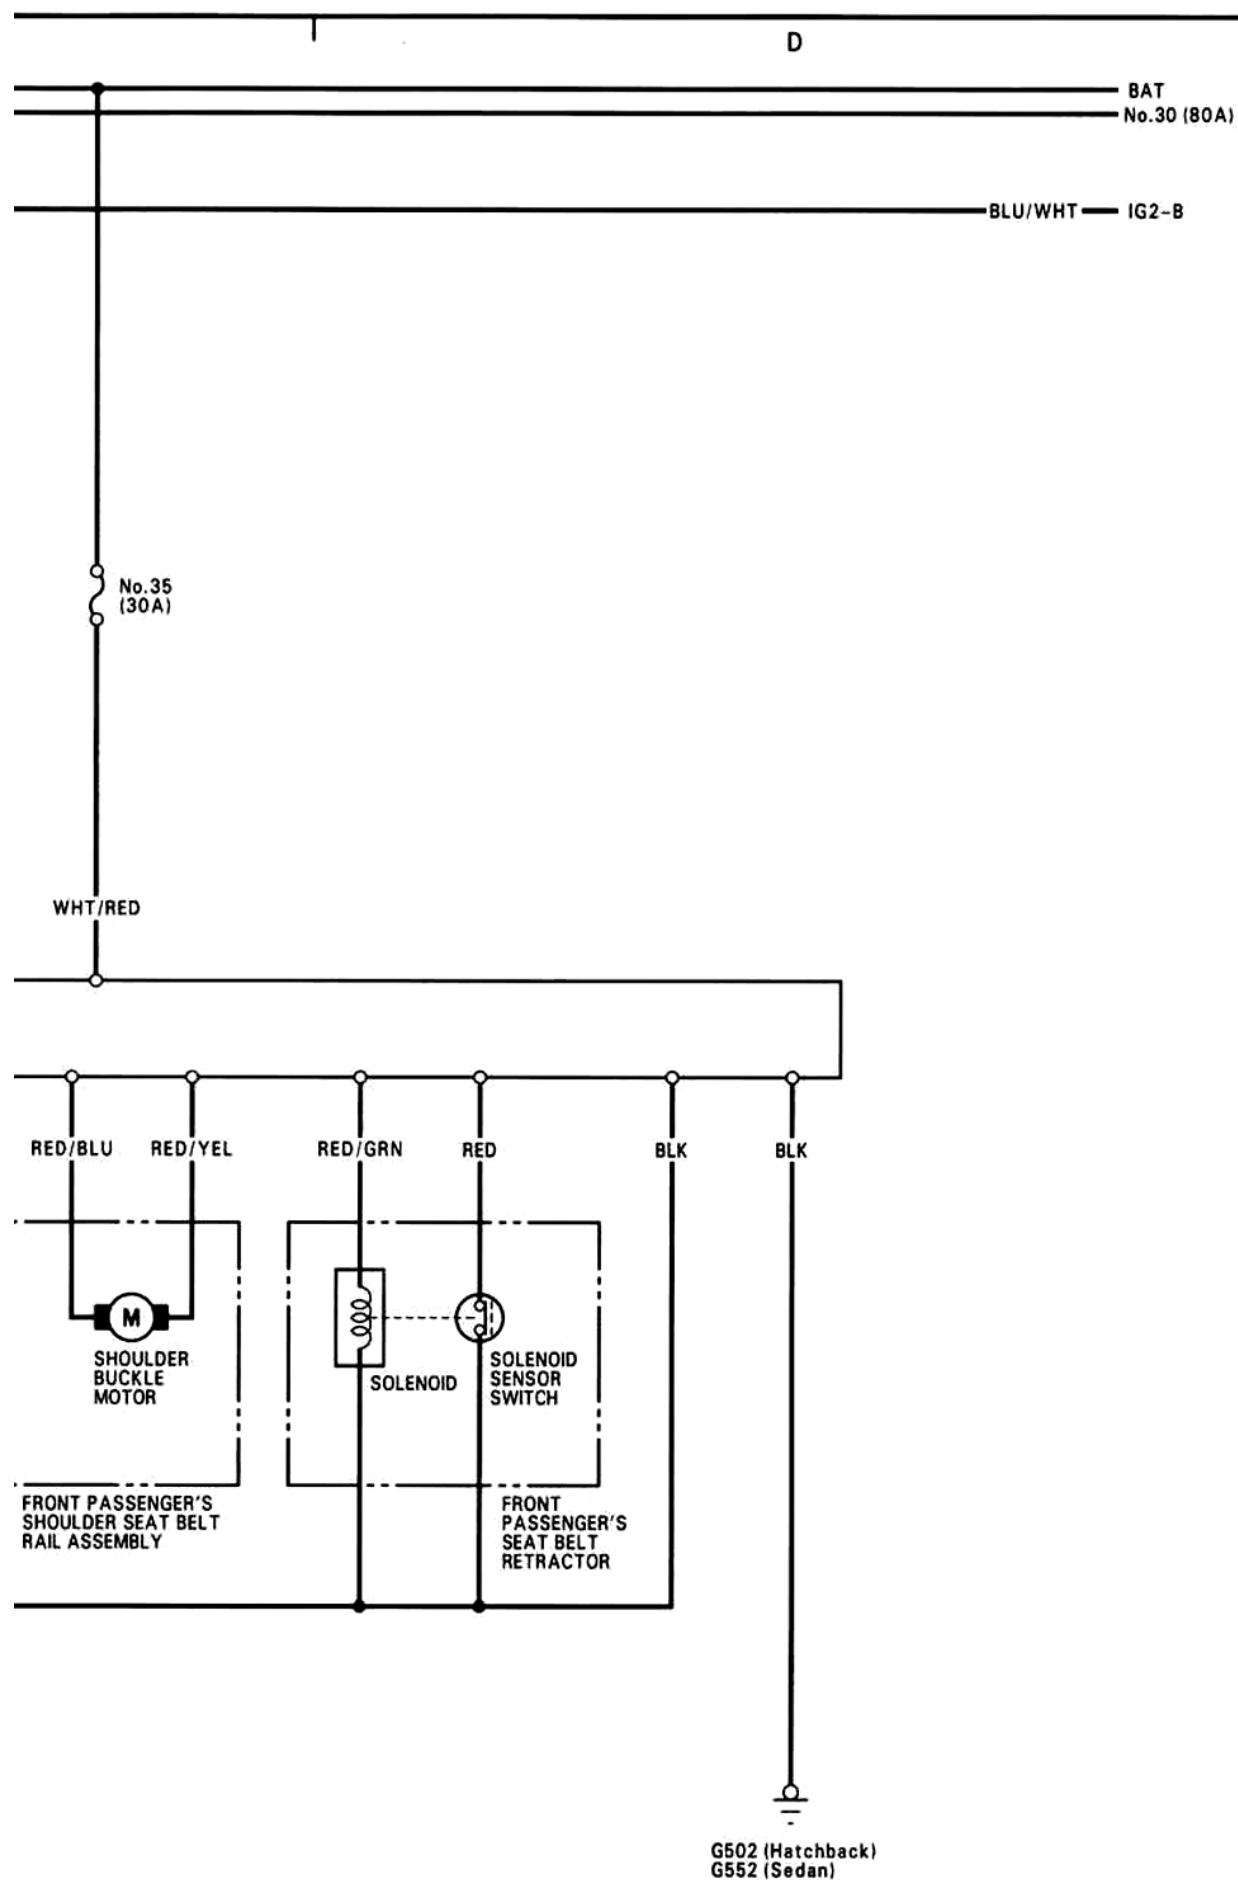

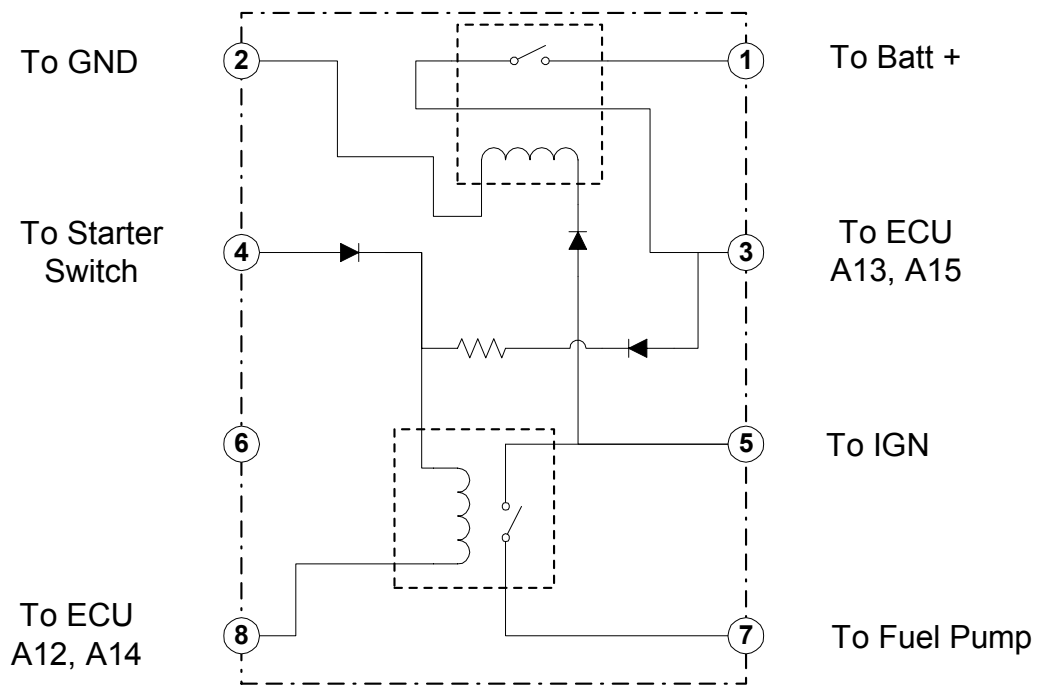


Main Relay Schematic  
(replaces that found on the following page)

Note: This schematic is the actual configuration found in the RZ-0067 used in the 91 Integra

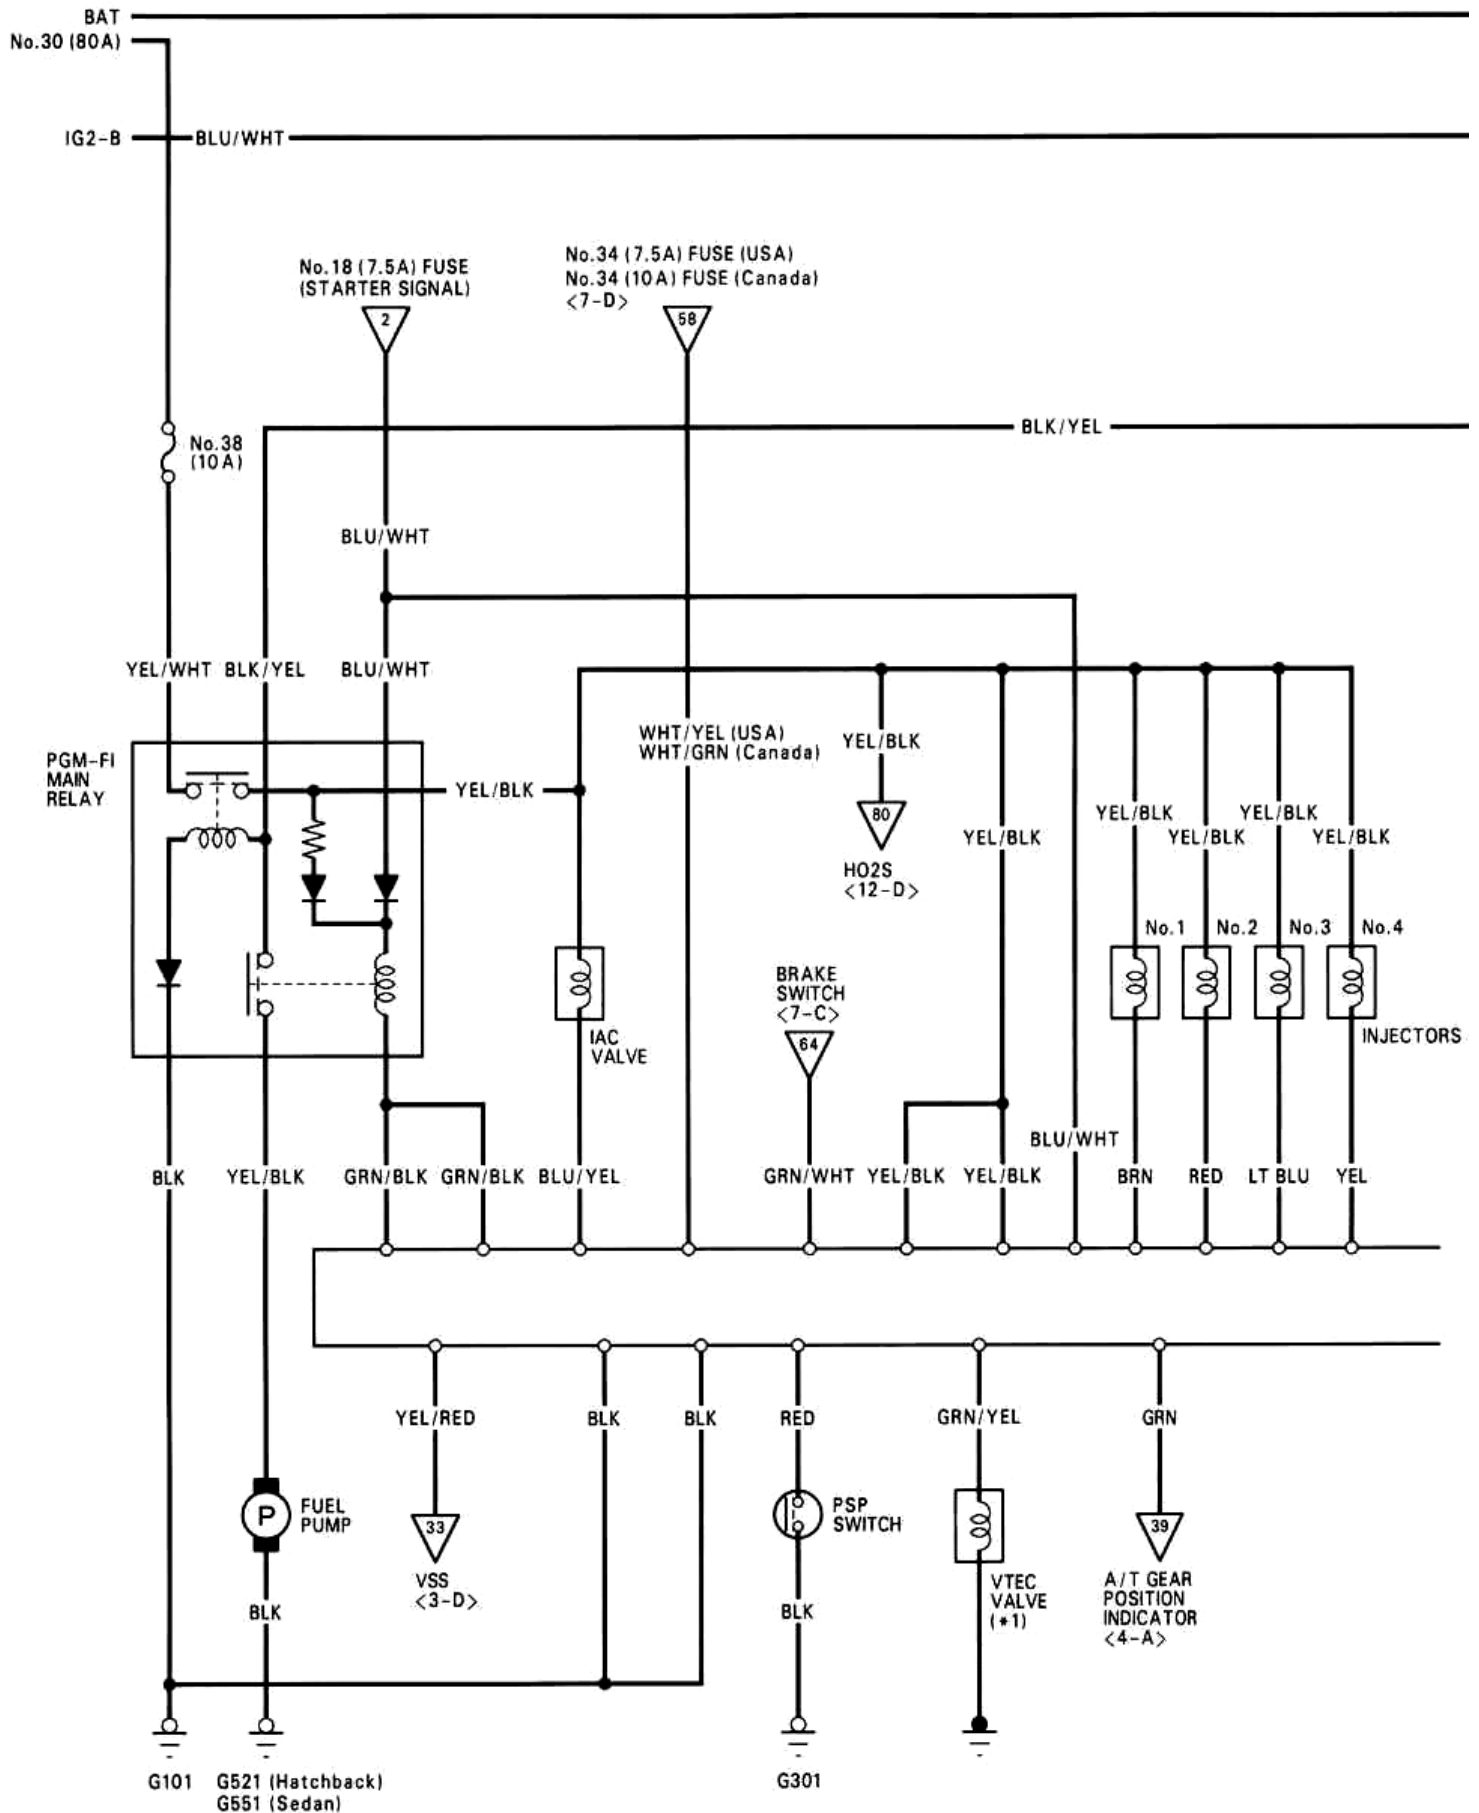


(Internal connection in the UNDER-HOOD MAIN FUSE BOX)

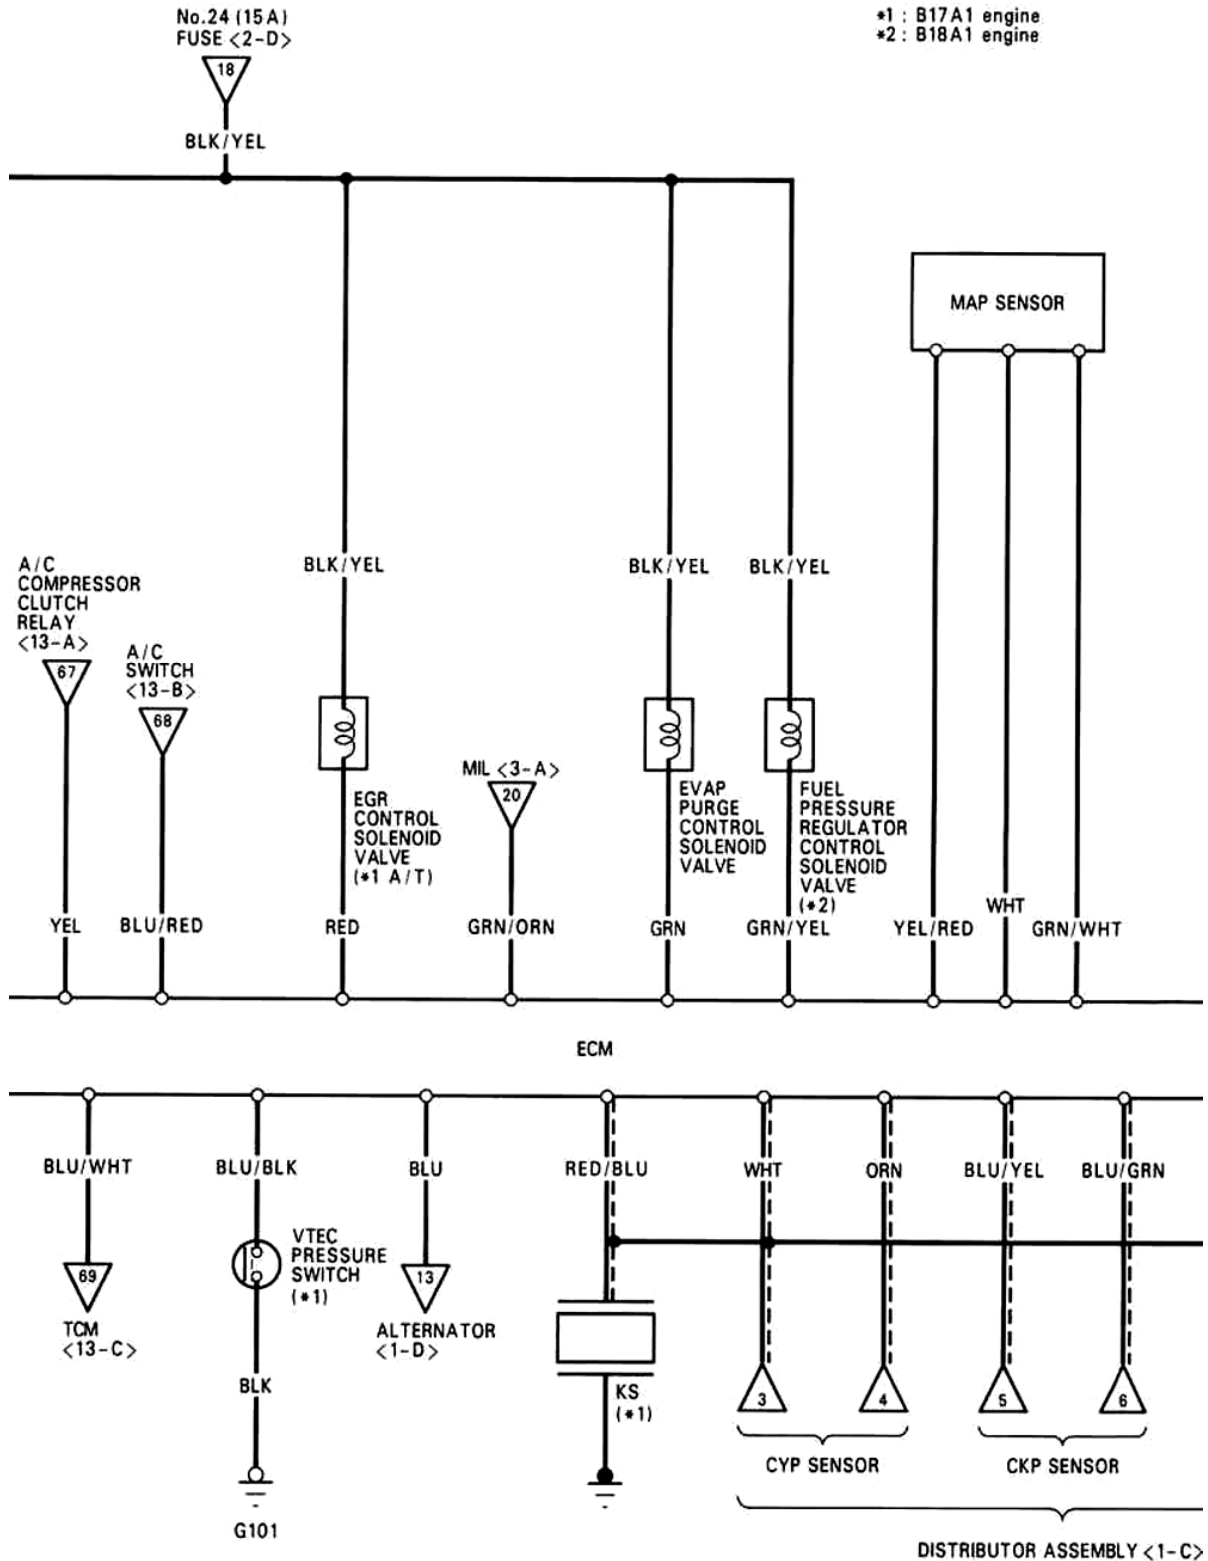

D

BAT

BLU/WHT IG2-B

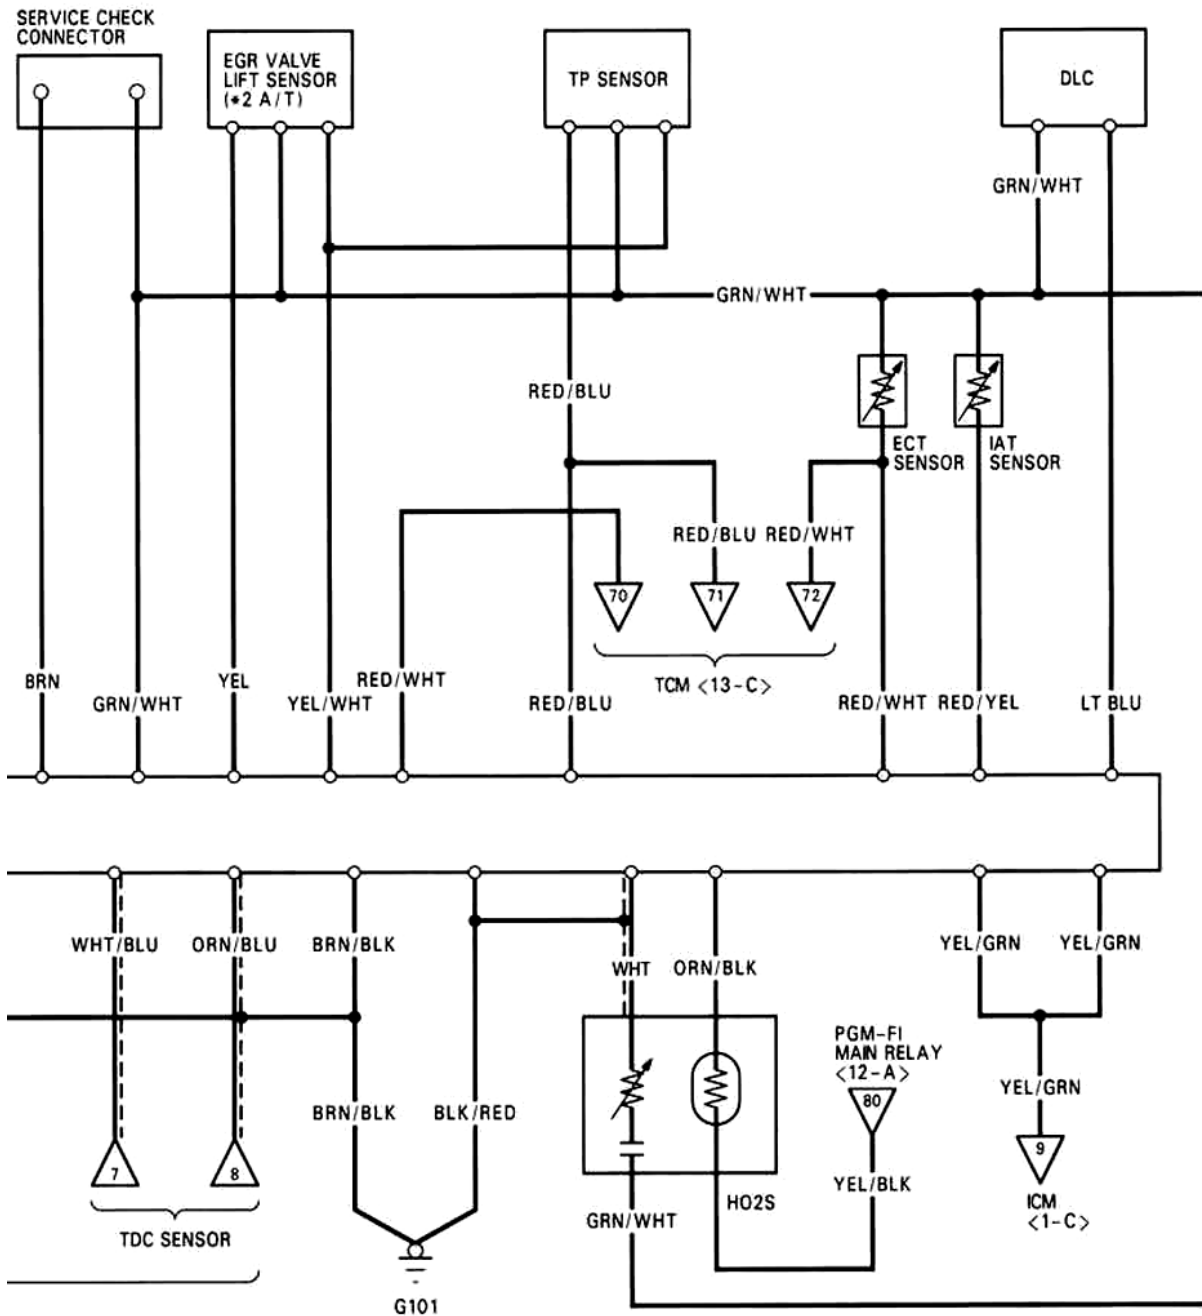

A


BAT

IG2-B — BLU/WHT

No. 17 (7.5A)  
FUSE  
<2-B or 2-D>No. 20 (15A)  
FUSE  
<2-B or 2-D>


WHT

 BLK/YEL



RED

YEL

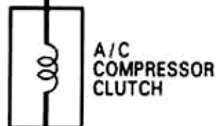- ECM <12-B>  
- TCM <13-D>A/C  
COMPRESSOR  
CLUTCHHEATER  
BLOWER  
MOTOR

BLU/BLK


RESISTOR

BLU

BLU/WHT

BLU/YEL

BLU/BLK

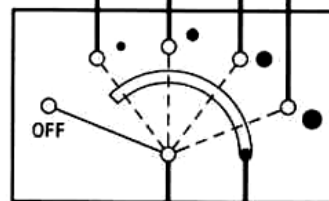FAN  
SWITCH


OFF

G201

No. 11 (15A) FUSE  
<5-C or 6-C>


BLK/YEL

RED/BLK

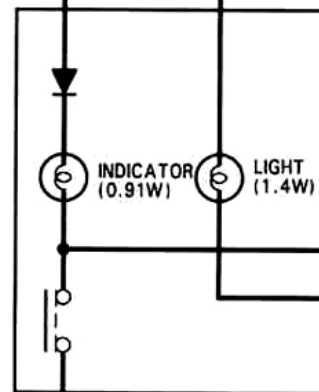A/C  
SWITCHINDICATOR  
(0.91W)LIGHT  
(1.4W)CONDENSER  
FAN RELAY  
<2-B or 2-C>RADIATOR  
FAN RELAY  
<2-B or 2-C>

BLU/RED

 
YEL/GRN




A/C DIODE

THERMOSTAT

DASH LIGHTS  
BRIGHTNESS  
CONTROLLER  
<5-C or 6-C>

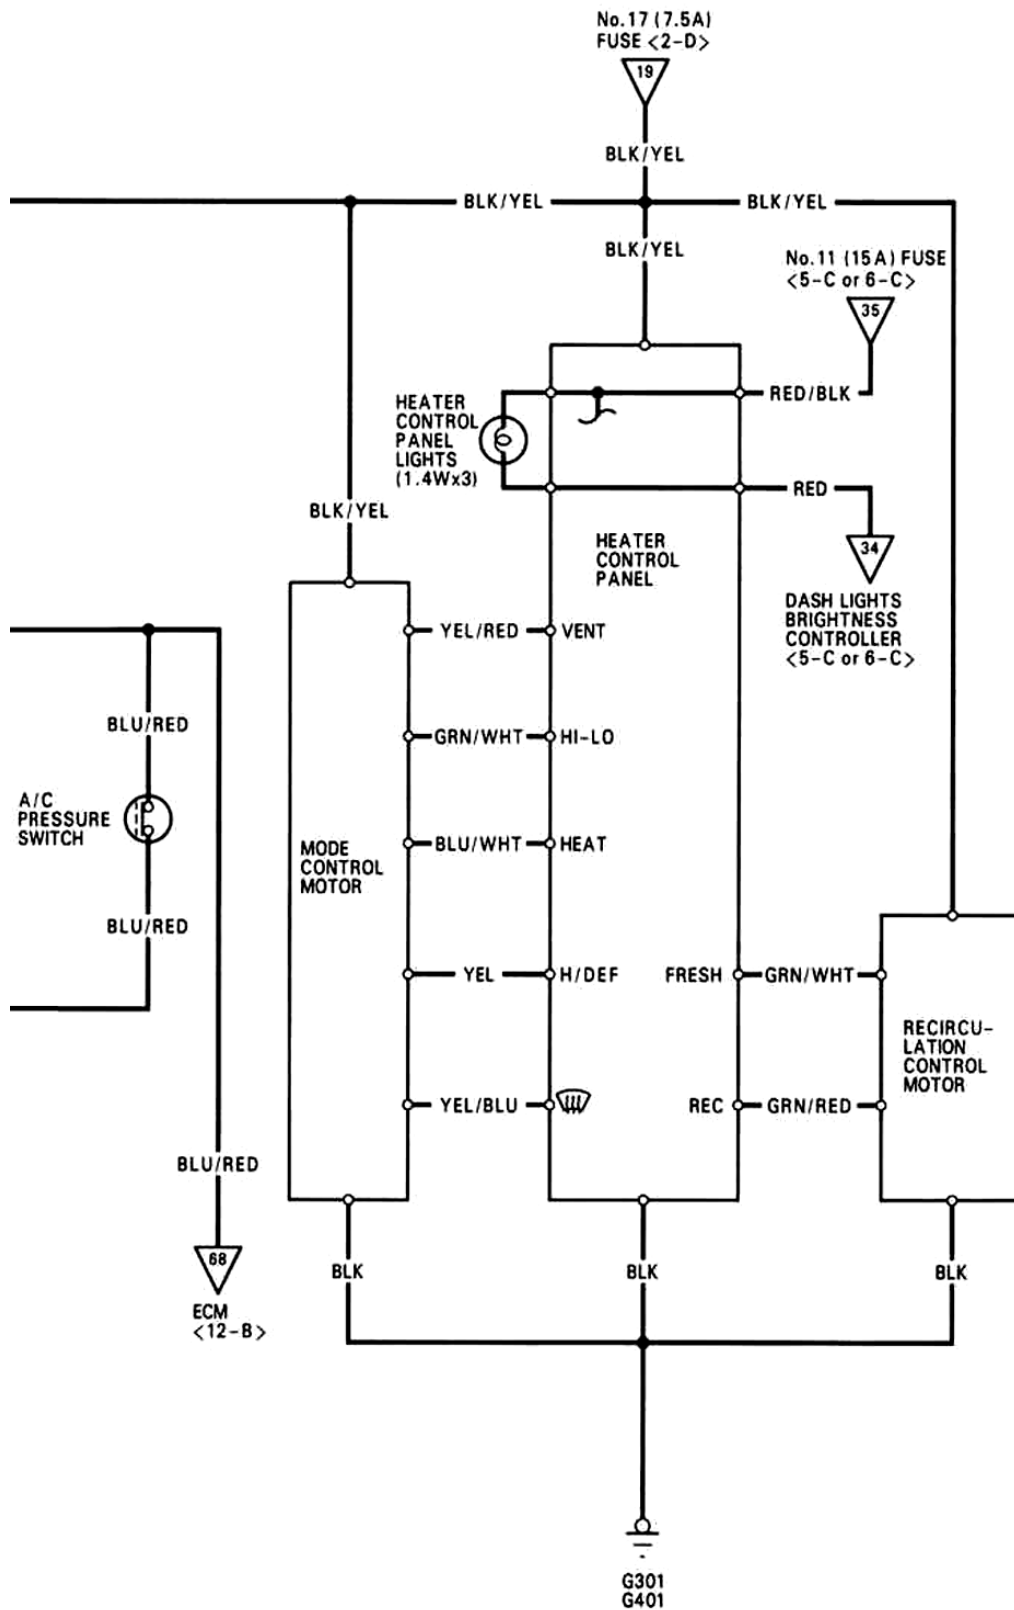

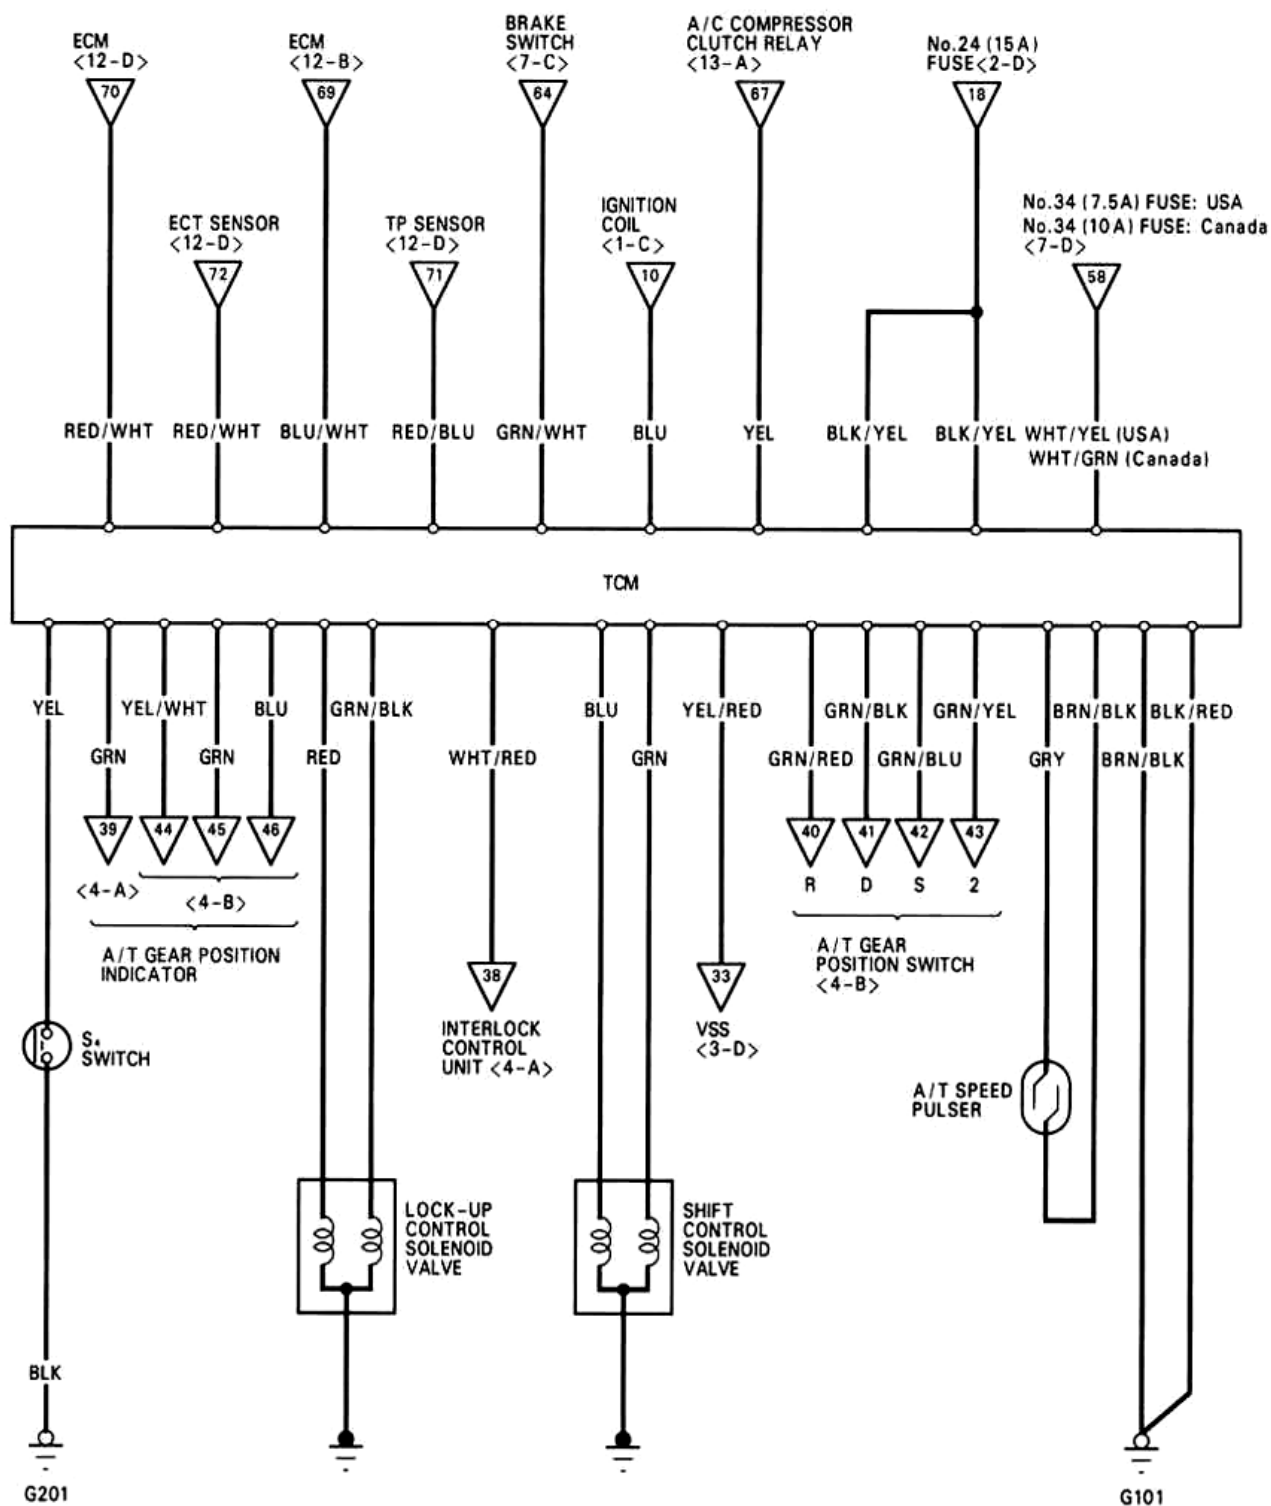



BAT

A

B

No. 17 (7.5A)  
FUSE <2-D>

19

BLK/YEL

ABS  
B1  
(20A)

ABS  
B2  
(15A)

ABS  
INDICATOR  
LIGHT  
<3-A>

BRAKE  
SWITCH  
<7-C>

22

84

WHT/GRN

BLU/RED

BLK/YEL

WHT/GRN

WHT/GRN

WHT

BLU/RED

BLU/RED

GRN/WHT

INSPECTION  
CONNECTOR

○

BLK/YEL

○

BLK/WHT

○

GRN/YEL

○

LT BLU

○

GRN/BLK

○

GRN/BLU

GRN/BLU

BRN

GRN/BLK

GRN

LT BLU

GRY

GRN/YEL

BLU/YEL

LEFT  
FRONT

RIGHT  
FRONT

LEFT  
REAR

RIGHT  
REAR

WHEEL SENSORS

(Internal connection in the UNDER-HOOD MAIN FUSE BOX)

