




Rear Speaker Replacement

1. Open the tailgate and pry the speaker grille off.
2. Remove the 4 screws and disconnect the connector (S).

Right/Left Speaker:

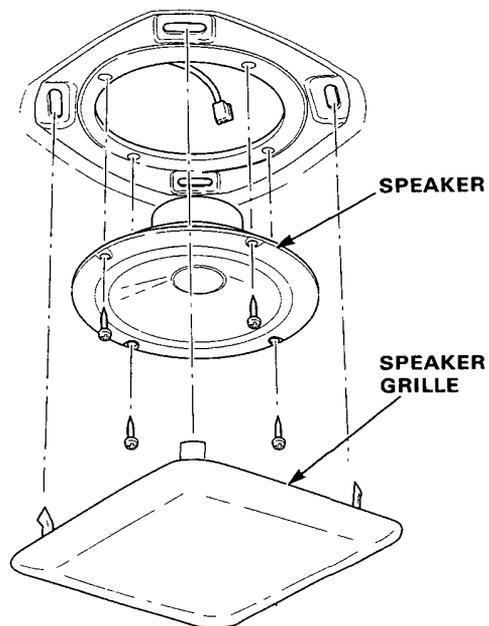

Woofer Speaker:

