


Seat Belts

Rear Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove:
 - Rear seat back.
 - Side trim panel.
 - Rear side trim.
 - Rear corner trim.
 - Quarter window.
2. Remove the upper anchor bolt, the lower anchor bolt and retractor bolt with a 17 mm socket or box-end wrench.

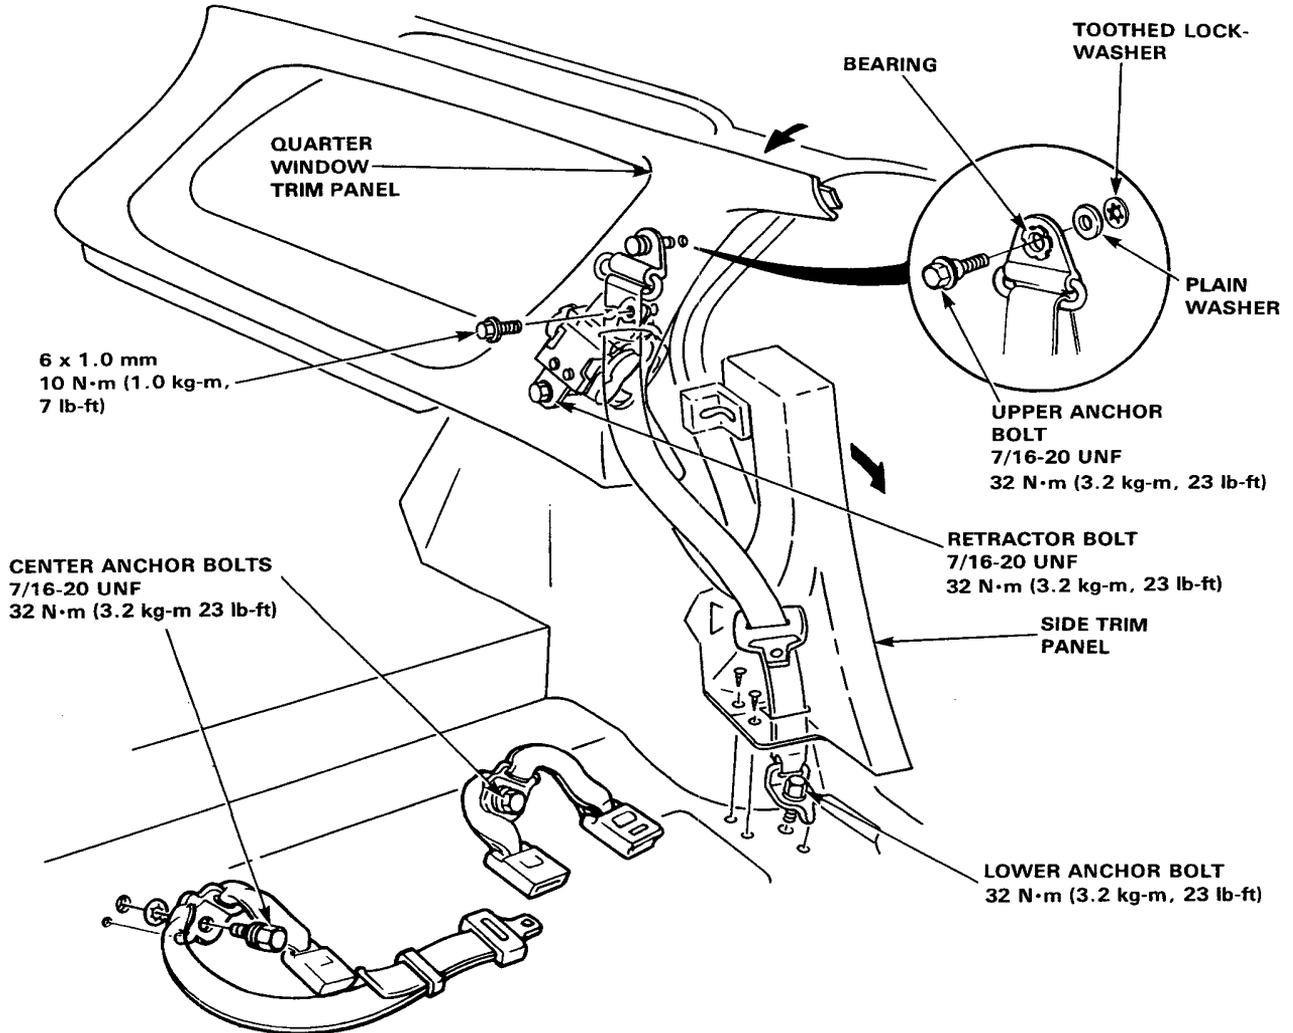

3. Check that the retractor locking mechanism functions properly.
4. Install the seat belt in the reverse order of removal.

NOTE:

- Before attaching the rear pillar trim panel and rear seat, make sure there are no twists in the belt.
- Pass the seat belts through the seat belt guides of the seat cushion.
- * On reassembly, replace the upper anchor bolt and use liquid thread lock.