




# Taillights

## Replacement

### Body side:


1. Open the tailgate and remove the rear quarter trim panel.
2. Disconnect the 4-P or 6-P connector from the body-side taillight.
3. Remove the 4 mount nuts and the taillight.

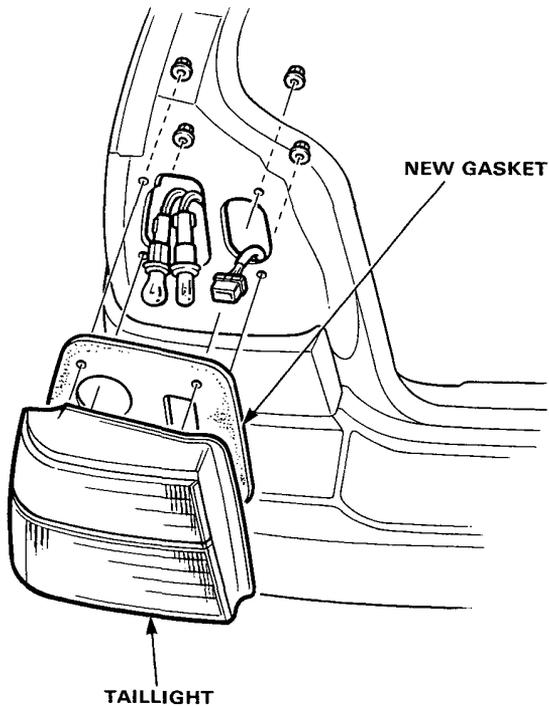

4. Inspect the gasket; replace if it is distorted or overly compressed.
5. Make sure that there is no water leakage in the taillights, after installing the taillights.

### Tailgate side:

1. Open the tailgate and remove the tailgate trim panel.
2. Disconnect the 4-P connector from the tailgate-side taillight.
3. Remove the 6 mount nuts and the tailgate-side taillight.

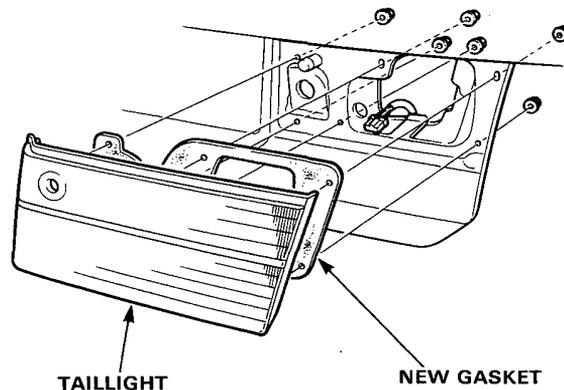

4. Inspect the gasket; replace if it is distorted or overly compressed.
5. Make sure that there is no water leakage in the taillights, after installing the taillights.