






# Rear Wiper/Washer


## Wiper Motor Test

1. Remove the tailgate trim panel, then disconnect the 4-P connector.
2. Test wiper motor operation by connecting battery positive wire to No. 1 terminal and battery negative wire to No. 2 terminal. If the motor fails to run smoothly, replace it.
3. While running the motor, check the voltages between the terminals according to the table.

1	4	2	voltage should be between 5-10V
			
			

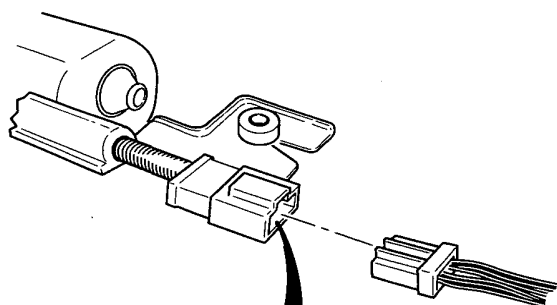


View from  
terminal side

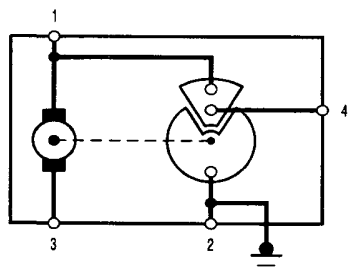

## Wiper Motor Replacement

1. Remove the tailgate trim panel.
2. Remove the trim cover, outer nut, wiper arm, pivot cap, inner nut, washer, and rubber seal as shown below.

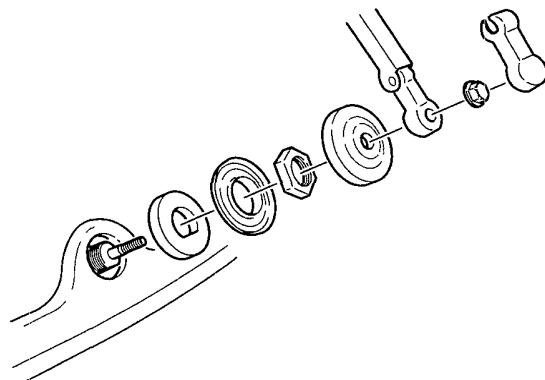

3. Disconnect the 4-P connector from the wiper motor.
4. Remove the three mounting bolts and the wiper motor assembly.

