
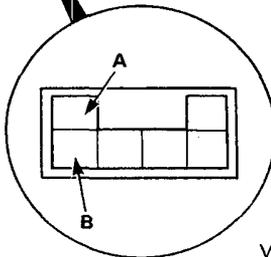


# Power Door Locks

## Ignition Key Switch Test

1. Remove the instrument lower panel, then disconnect the 6-P connector from the main wire harness.
2. There should be continuity between the A and B terminals when the ignition switch is turned from "II" to "O" position.  
There should be no continuity when the ignition key is removed.

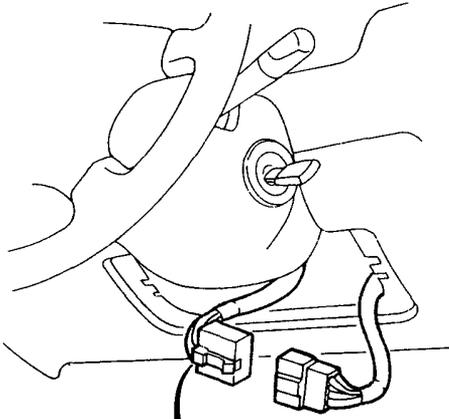

View from  
wire side