




## Washer Motors Test

1. Remove the front bumper and disconnect the 2-P connectors from the washer motors.
2. Test the washer motors operation by connecting battery positive to the  $\oplus$  terminal and negative to the  $\ominus$  terminal.

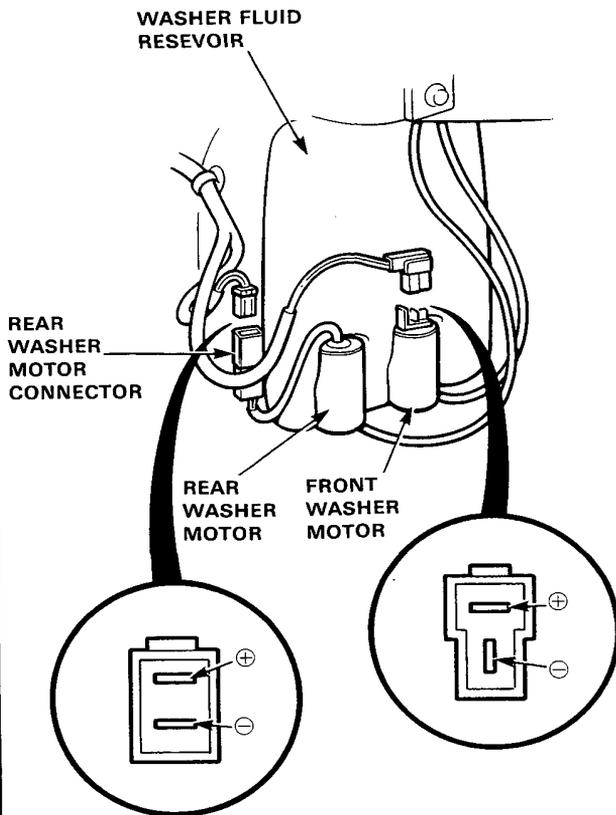

- If the motors fail to run smoothly or are not running, replace them.
- If the motors run smoothly, but there is not enough fluid pumped, check for disconnected, blocked or damaged washer hoses.