
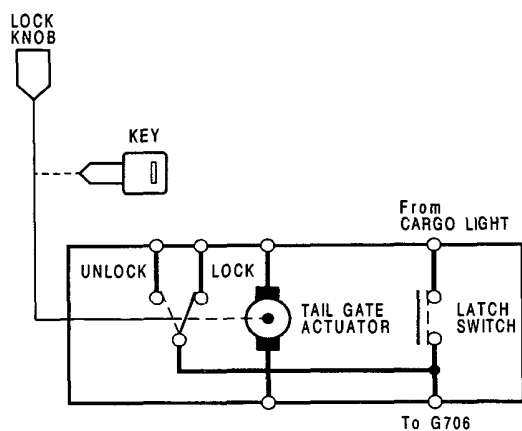


Tailgate Latch Switch

Test/Replacement

1. Open the tailgate and remove the tailgate trim panel.
2. Disconnect the 2-P connector from the tailgate latch.
3. There should be continuity between the two tailgate latch switch connector terminals.

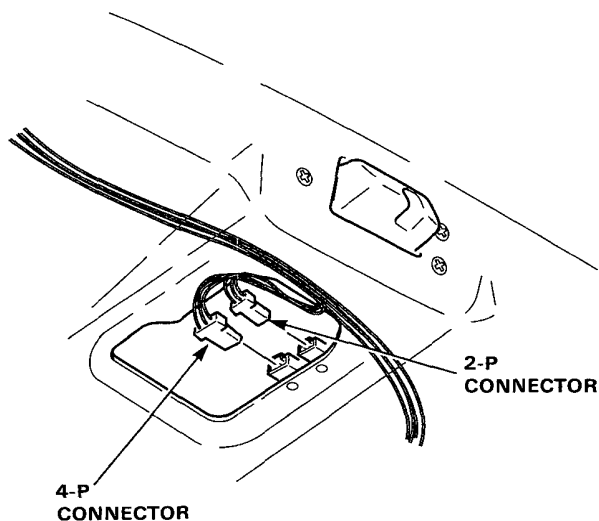

4. If necessary, remove the 3 screws and pull the latch of the tailgate, then disconnect the 4-P connector and rods from the latch.

