


Carpet/Spare Tire Lid/Rear Floor Box

Replacement

1. Remove:
 - Front seats
 - Rear seat
 - Center console
 - Opener cover and footrest
 - Front seat belt lower anchor and center anchor bolts
 - Center pillar lower trim
 - Kick panels
 - Door sill moldings
2. Pry out the clips in the rear and under the dashboard.
3. Remove the carpet by sliding it rearward.
4. Remove the mounting bolts, then remove the floor box and floor cover.

* : Torx bolt locations
NOTE: Use TORX® T-30.

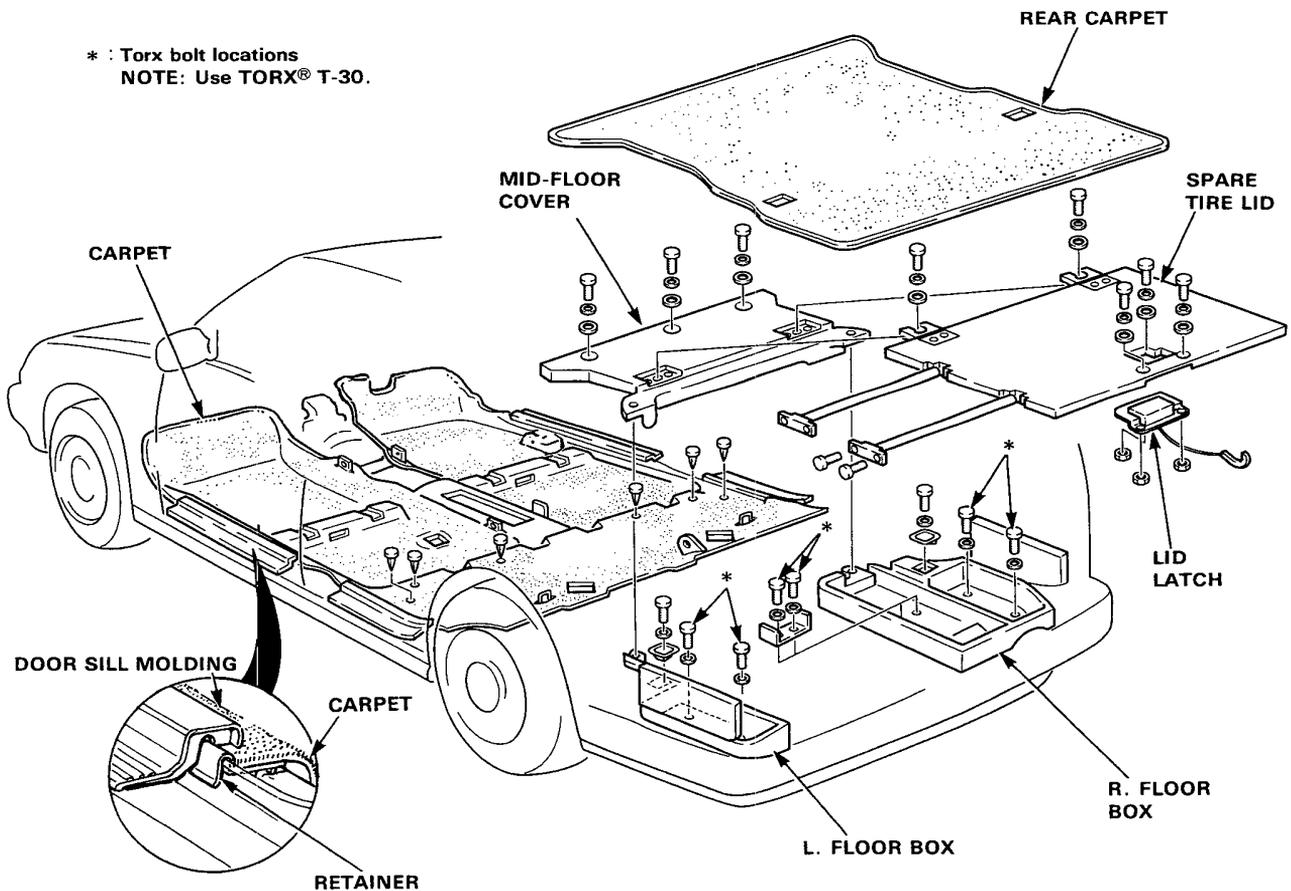

5. Install the carpet in the reverse order of removal.

NOTE:

- Make sure the carpet fits onto the body correctly.
- Take care not to damage the carpet.