

Stereo Sound System


Power Antenna Motor Test

1. Remove the left rear quarter trim panel.
2. Disconnect the 3-P connector from the motor and remove the connector from its clamp.
3. First check power to the motor at the connector terminals. There should be battery voltage between the WHT/BLU (+) and BLK (-) terminals all the time. There should be battery voltage between the YEL/WHT (+) and BLK (-) terminals only with the ignition and radio switched ON.

4. Test motor operation:

FULL EXTEND: Connect battery positive to the No. 3 and No. 2 terminals and negative to the No. 1 terminal.

RETRACTED: Then disconnect battery positive from the No. 2 terminal.

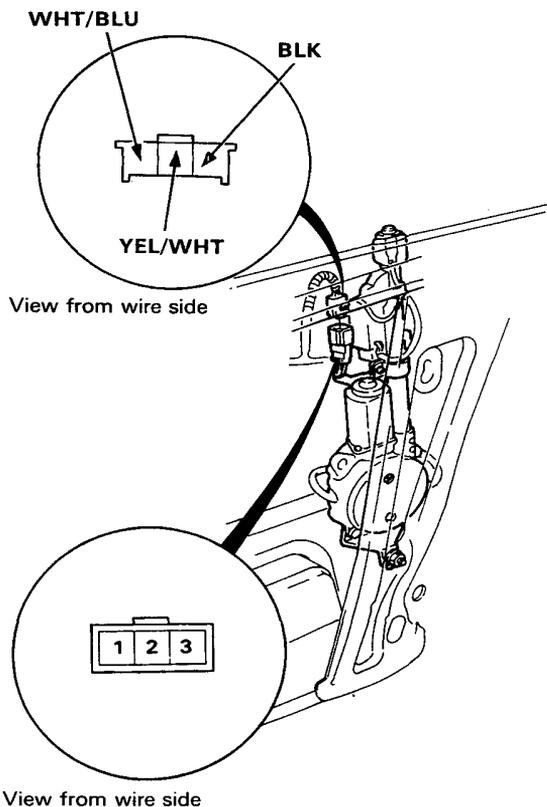

5. If the motor fails to operate properly, replace it.

