

Maintenance Schedule

Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace		I—Inspect. After inspection, clean, adjust, repair or replace if necessary.				
	x 1,000 km x 1,000 miles months	20 12 12	40 24 24	60 36 36	80 48 48	100 60 60	
Idle speed and idle CO		I	I	I	I	I	
Valve clearance		I	I	I	I	I	
Alternator drive belt			I		I		
Timing belt and timing balancer belt							R
Water pump							I
■ Engine oil and oil filter		Replace every 10,000 km (6,000 miles) or 6 months					
■ Transmission oil			R		R		
■ Radiator coolant					R*1		
Cooling system hoses and connections			I		I		
E. G. R. system							I
Secondary air supply system (Standard for some types)							I
Air cleaner element (Viscous type)			R		R		
Fuel filter			R		R		
Tank, fuel line and connections			I		I		
Evaporative emission control system							I
Ignition timing and control system			I		I		
Spark plugs			R		R		
Distributor cap and rotor			I		I		
Ignition wiring			I		I		
Positive crankcase ventilation valve			I		I		
Brake hoses and lines		I	I	I	I	I	
Brake fluid			R		R		
Front brake discs and calipers		I	I	I	I	I	
Front brake pads		Inspect every 10,000 km (6,000 miles) or 6 months					
Rear brake discs, calipers and pads			I		I		
Parking brake		I	I		I		
Exhaust pipe and muffler		I	I	I	I	I	
Suspension mounting bolts		I	I	I	I	I	
Front wheel alignment		I	I	I	I	I	
Steering operation, tie rod ends, steering gear box and boots		I	I		I		
Power steering system		I	I	I	I	I	
Power steering pump belt			I		I		
Catalytic converter heat shield							I

■: These service intervals assume routine checking and replenishment has been done, as needed, by the customer.

*1 Thereafter, replace every 2 years or 40,000 km (24,000 miles), whichever comes first.



CAUTION: The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

Severe driving conditions include:

A : Repeated short distance driving

B : Driving in dusty conditions

C : Driving in severe cold weather

D : Driving in areas using road salt or other corrosive materials

E : Driving on rough and/or muddy roads

F : Towing a trailer

R—Replace.


I— Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A B . . . F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
. F	Transmission oil	R	Every 20,000 km (12,000 miles) or 12 months
A B . D E F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A B . D E F	Rear brake discs, calipers and pads	I	Every 20,000 km (12,000 miles) or 12 months
. B C . E .	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

Exhaust Pipe and Muffler

Replacement5-2

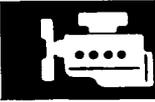

Outline of Model Change

ACCORD AERO DECK has been added.