




Passenger's Door Actuator Test

1. Remove the door trim panel.
2. Disconnect the 2-P connector from the actuator.
3. Test actuator operation by connecting battery voltage to the No. 1 and No. 2 terminals.
Test the actuator in each direction, by switching the leads from the battery.

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

NOTE: Right front actuator is shown; rear actuators are similar.

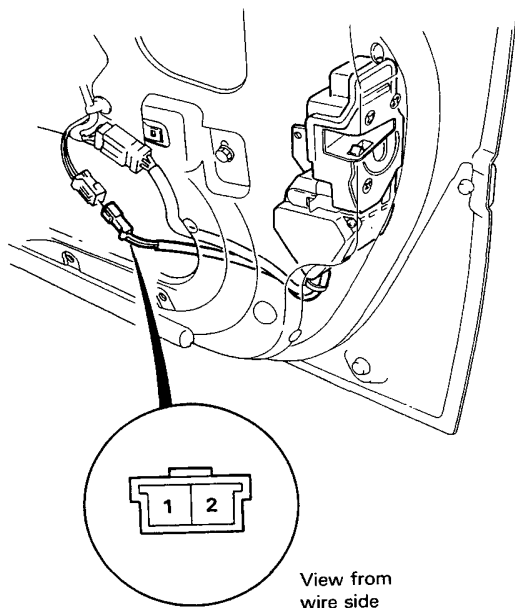

4. If the actuator fails to operate properly, replace it.

Door Key Cylinder Switch Test

1. Remove the front passenger's door trim panel.
2. Disconnect the 3-P connector of the key cylinder switch.
3. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	1	2	3
UNLOCK		○	○
LOCK	○	○	

