




# Driver's Door Actuator Test

1. Remove the door trim panel.
2. Disconnect the connectors from the actuator.
3. Test actuator operation by connecting battery voltage to the No. 5 and No. 6 terminals.  
Test the actuator in each direction, by switching the leads from the battery.

**CAUTION:** To prevent damage to the motor, apply battery voltage momentarily.


NOTE: LHD type is shown; RHD type is similar.

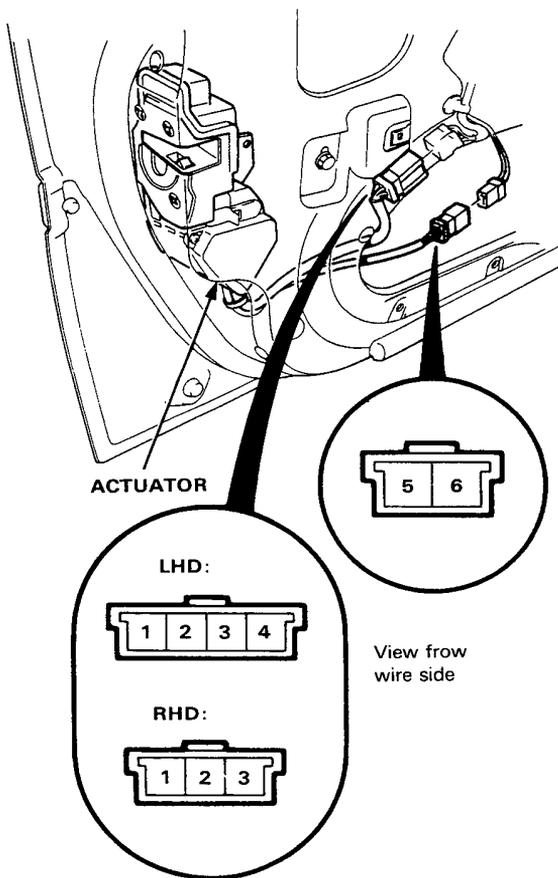

4. If the actuator fails to operate properly, replace it.

5. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	1	2	3
LOCK		○ — ○	○ — ○
UNLOCK	○ — ○	○ — ○	

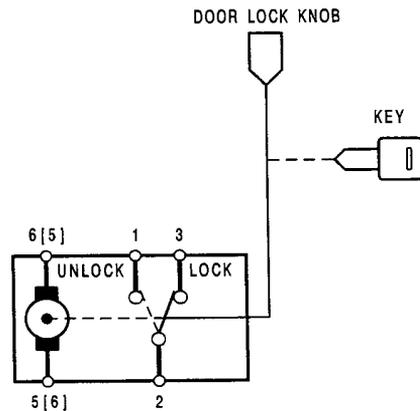

[ ]: RHD