


Tailgate Latch/Fuel Lid Opener Cable


Tailgate Lock Replacement

1. Remove the tailgate lower trim panel (page 14-17).
2. To remove the outside handle, first remove the:
 - License light covers
 - Wiper arm (See section 16)
 - Wiper motor (See section 16)
3. To remove the tailgate latch assembly, first disconnect the rod and connector.

NOTE: To ease reassembly, note the location **A** of the rod on the joint before disconnecting it.

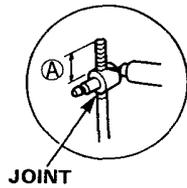

TAILGATE LOCK CYLINDER
Remove the tailgate lock cylinder by turning it right.

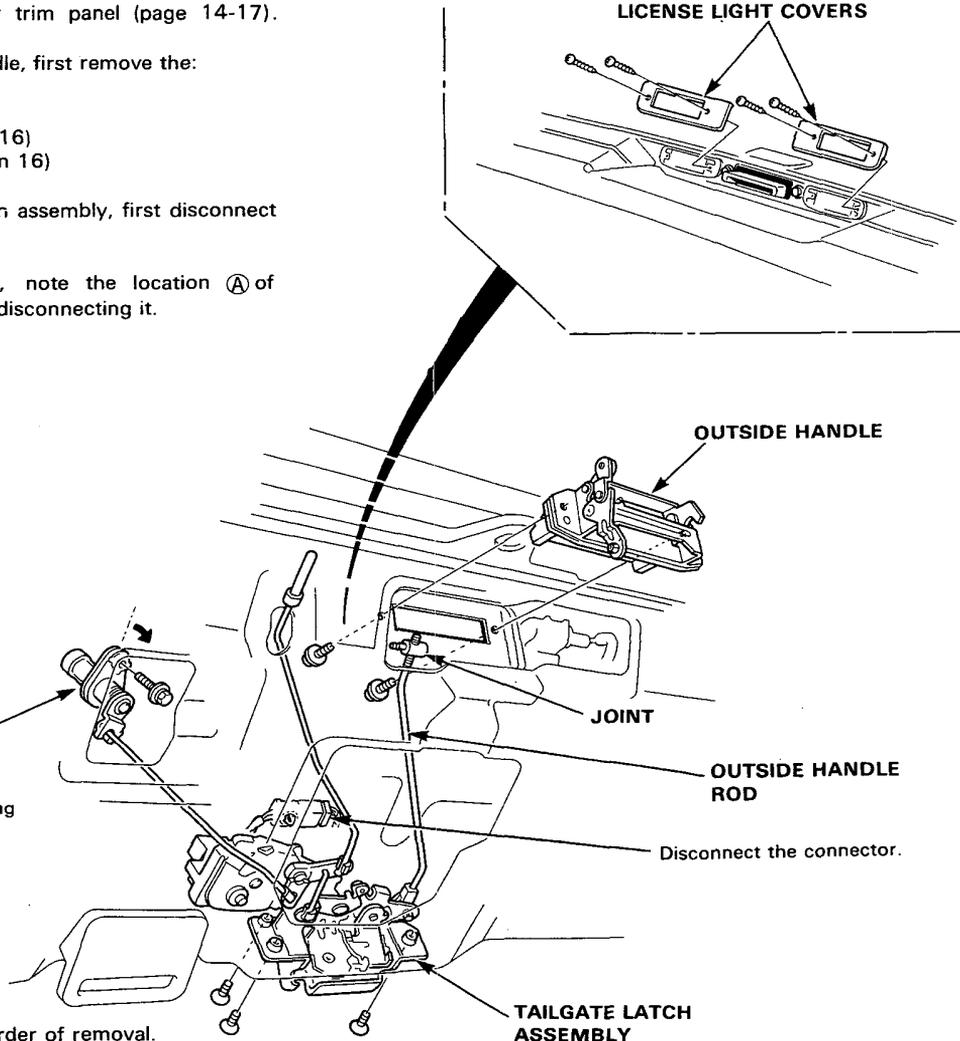

4. Installation is the reverse order of removal.



NOTE: After installing, check that the tailgate latch is operated properly.

Fuel Lid Opener Cable Replacement

Fuel lid opener cable is routed and connected properly as shown.

NOTE: Take care not to bend the cable.

→: Clip locations

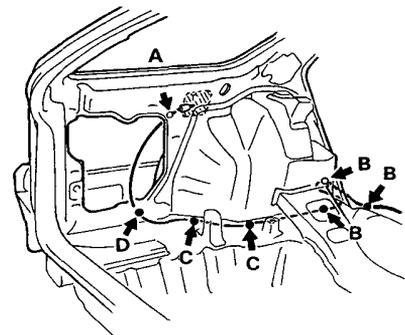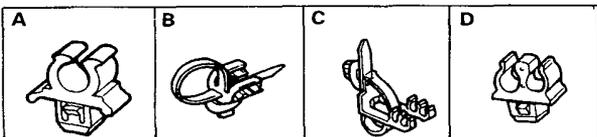

Electrical

Index to Circuits and Systems

Brake Lights	
Brake Light Failure Sensor Test ..	16-9
Circuit Diagram	16-8
Ground Distribution	
Circuit Identification	16-7
Power Door Locks	
Circuit Diagram	16-17
Component Location Index.....	16-16
Control Unit Input Test.....	16-19
Control Unit Input Test (cont'd) .	16-20
Door Key Cylinder Switch Test ..	16-23
Driver's Door Actuator Test	16-21
Ignition Key Switch Test.....	16-24
Passenger's Door Actuator Test .	16-23
Tailgate Actuator Test	16-22
Troubleshooting	16-18
Rear Wiper/Washer	
Circuit Diagram	16-26
Component Location Index.....	16-25
Wiper Motor Replacement	16-28
Wiper Motor Test	16-28
Washer Motors Test.....	16-29
Wiper/Washer Switch Test	16-27
Relay and Control Unit Locations	
Floor and Door.....	16-2
Stereo Sounds System	
Circuit Diagram	16-13
Component Location Index.....	16-12
Power Antenna Motor Test	16-14
Rear Speaker Replacement.....	16-15
Tailgate Latch Switch	
Test/Replacement	16-10
Taillights	
Replacement	16-11
Wire Harness and Ground Locations	
Floor.....	16-3
Rear.....	16-5
Rear Roof.....	16-4
Tailgate	16-6
Wiring Diagrams	16-30

