


Power Door Locks

Tailgate Actuator Test


1. Open the tailgate and remove the tailgate trim panel.
2. Disconnect the 4-P and 2-P connectors from the actuator.
3. Test actuator operation by connecting battery voltage to the No. 5 and No. 6 terminals. Test the actuator in each direction, by switching the leads from the battery.

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

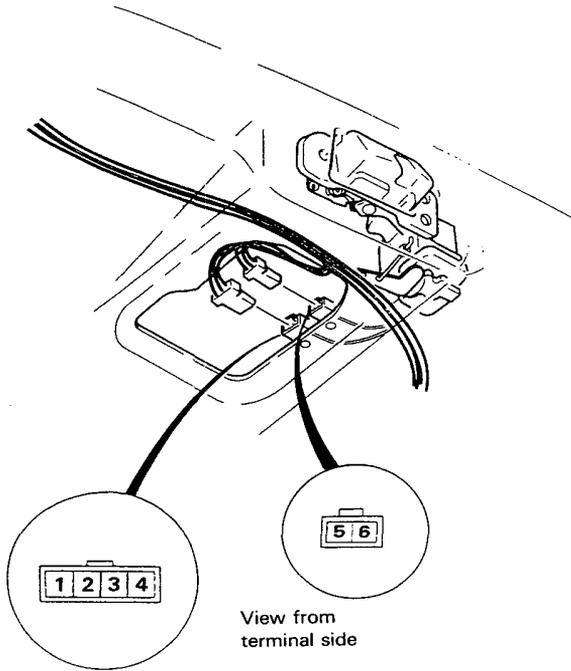

5. Check for continuity between the terminals in each switch position according to the table.

Terminal	1	2	6
Position			
LOCK	○	—	○
UNLOCK		○	○

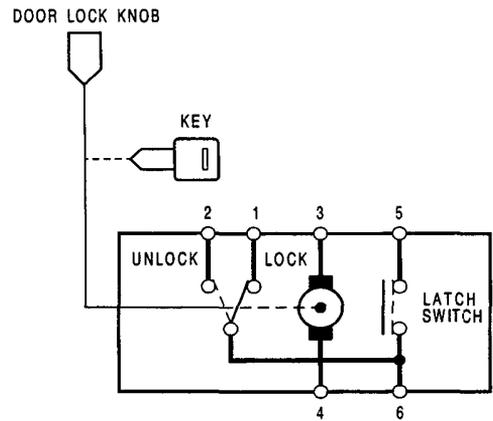

4. If the actuator fails to operate properly, replace it.