


# Seat Belt Reminder System (Sedan: KY model)

## Seat Belt Switch Test

1. Slide the front seat all the way forward then disconnect the 2-P connector from the seat belt switch.

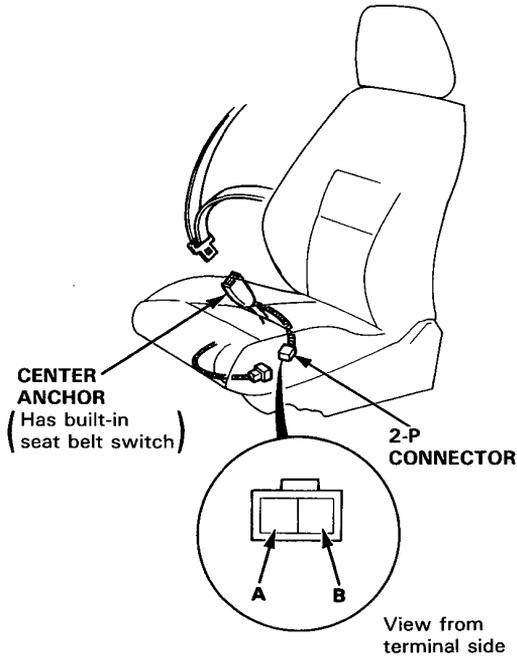

2. There should be continuity between the A and B terminals when the seat belt is not buckled. There should be no continuity when the seat belt is buckled.

## Chime Test

1. Remove the left side kick panel and disconnect the 2-P connector from the main wire harness.
2. Test the chime by connecting battery power to the ORN terminal and ground to the BLK terminal, and cycling the power on-off repeatedly.
3. If the chime fails to sound every time power is cycled, replace it.

