
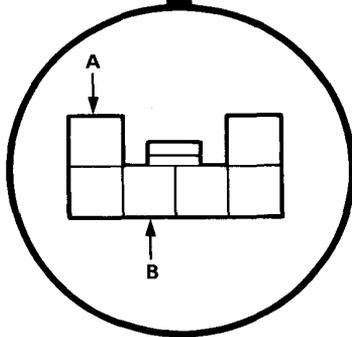


Key-in Reminder System (Sedan: KY model)

Ignition Key Switch Test

1. Remove the dashboard lower cover.
2. Disconnect the 6-P connector from the main wire harness.

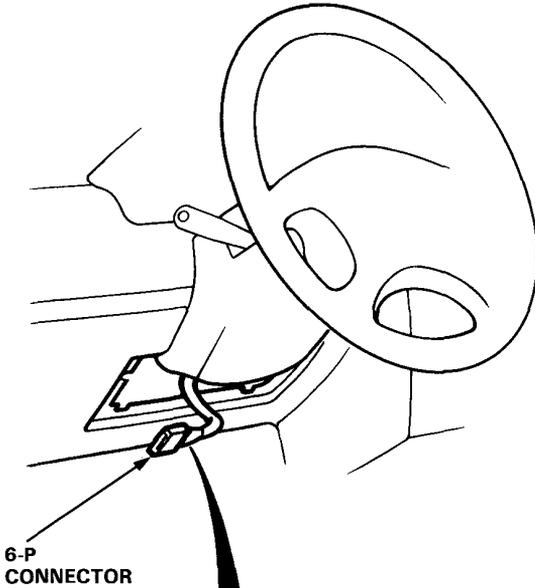

View from wire side

3. There should be continuity between the A and B terminals when the ignition key is inserted. There should be no continuity with the ignition key removed.