




# Fuses

## Under-hood Fuse/Relay Box

NOTE: The under-hood fuse/relay box is located at the right side of the engine compartment.

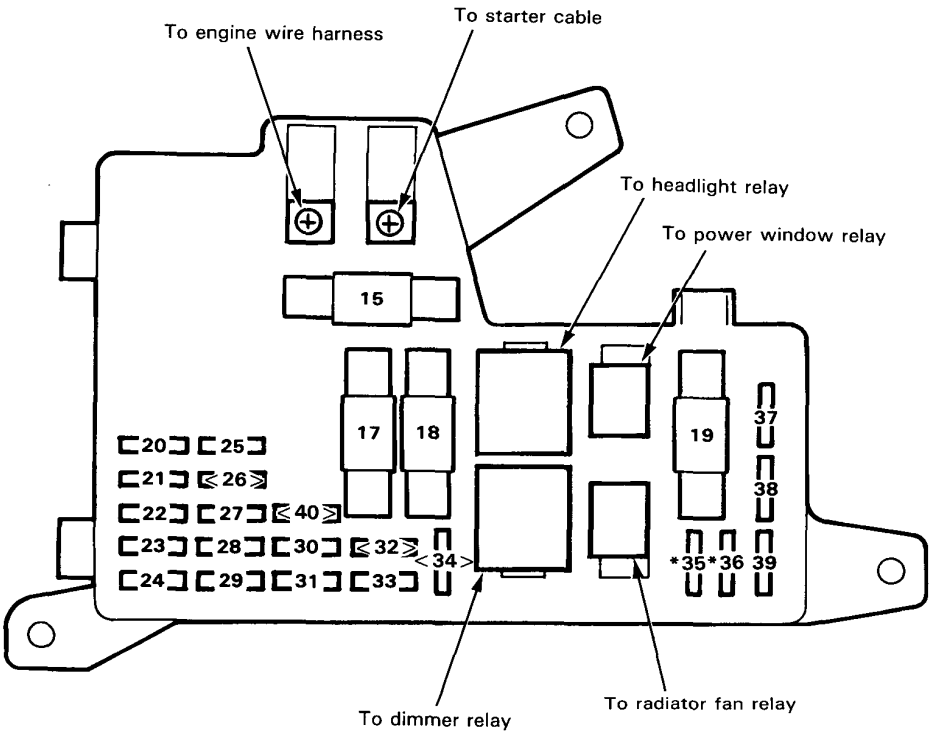

< >: Not used  
\*: KE model

