


# Fuses

## Under-dash Fuse/Relay Box

NOTE: The under-dash fuse box is located behind the left (LHD) or right kick panel (RHD).

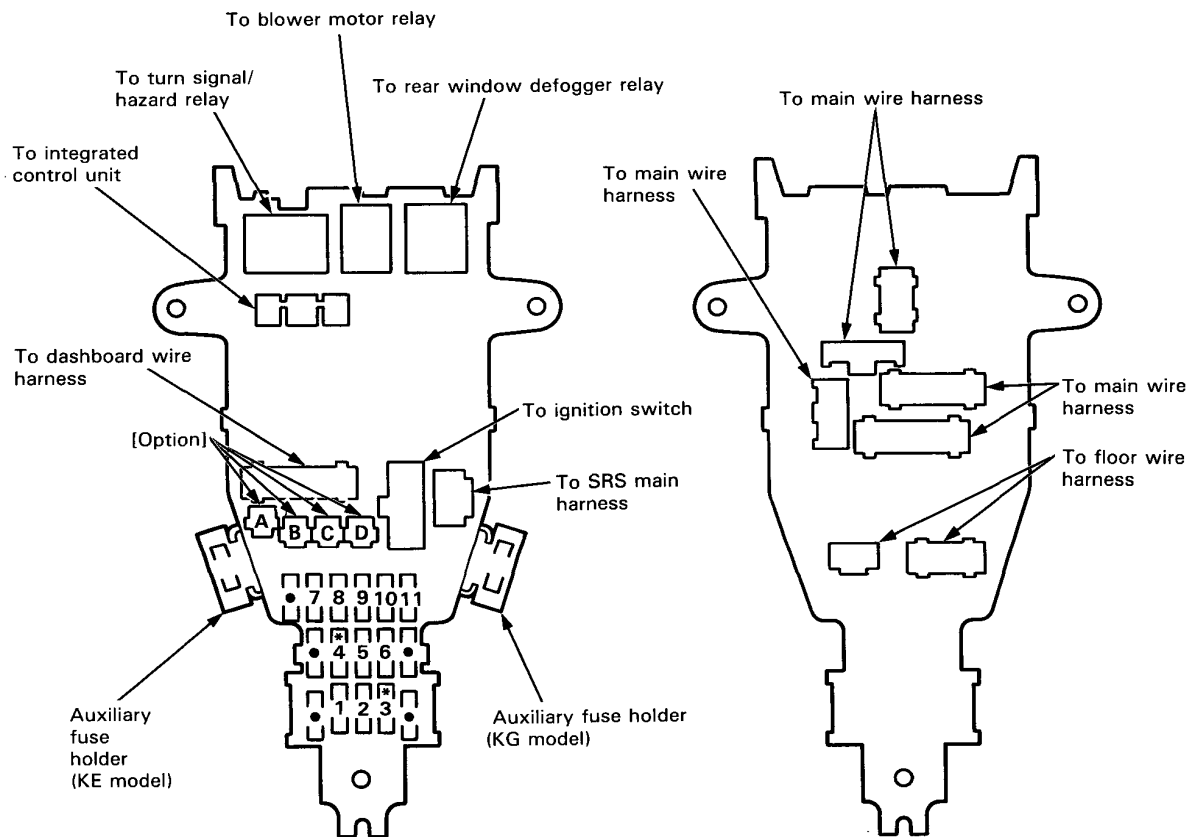

•: Spare fuse  
\*: KE model