





# Quarter Glass

## Replacement


1. Pry the latch cover out and remove the mounting screws.

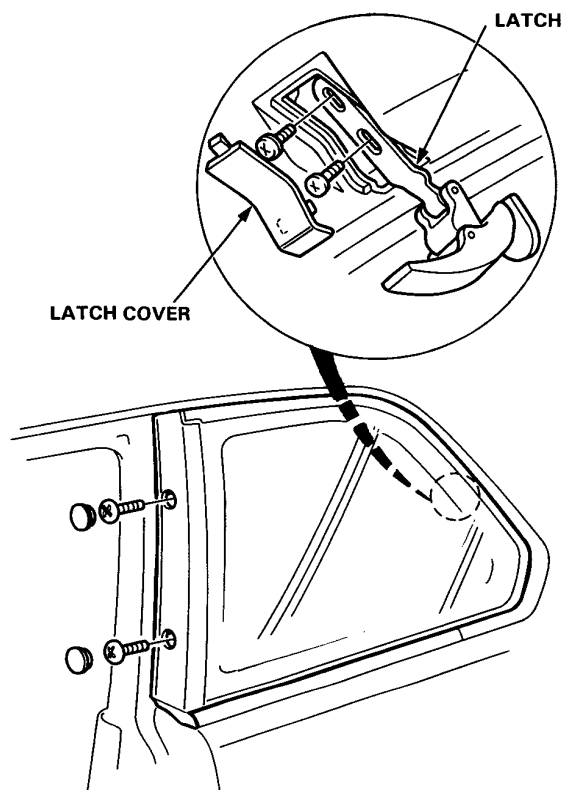


2. Remove the caps and 2 screws, then remove the quarter glass.
3. If necessary, pull out the special nut and holder from the body.

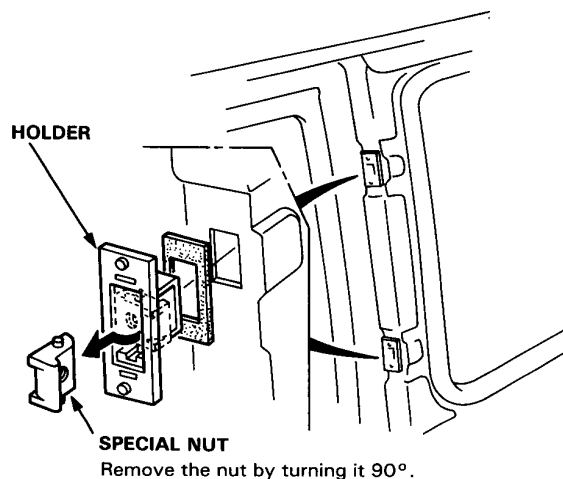

4. Remove the E-clip with a flat tip screwdriver, then remove the latch.

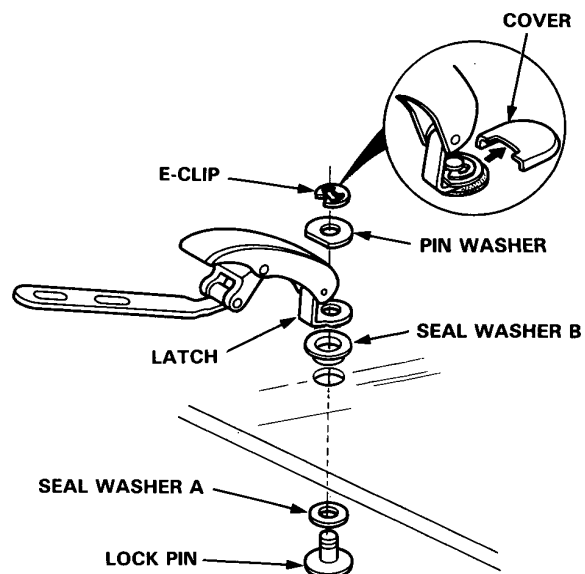

5. Remove the hinge mounting nuts and quarter glass hinges.

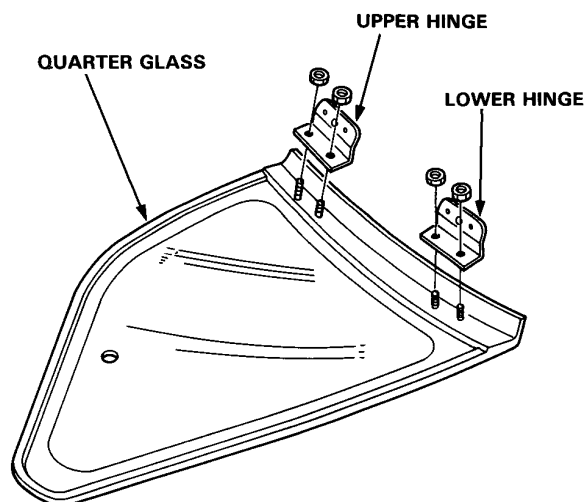


(cont'd)

# Quarter Glass


## Replacement (cont'd)

6. Remove the lower molding and the quarter molding.

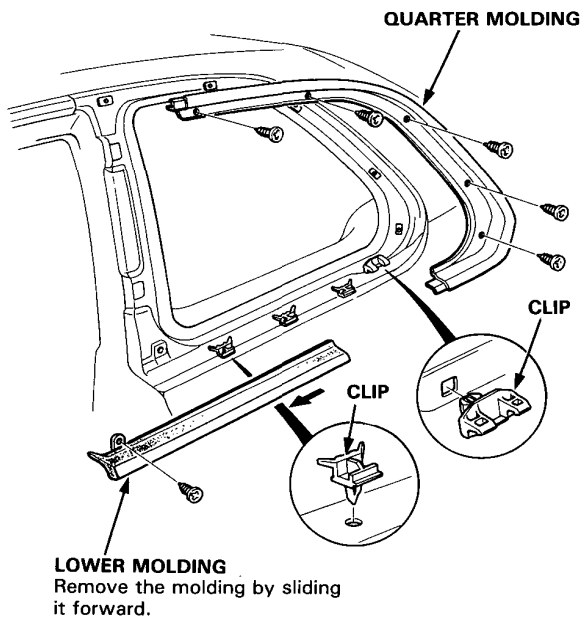

7. Install the lower molding, set the clips on to the molding.

8. Install in the reverse order of removal. Check for proper glass fit when closed after installation. To adjust, loosen the latch mounting screws and move the latch back and forth. Adjust so that the latch works smoothly, and the glass closes securely. Check for proper contact between the glass and weatherstrip at the rear edge.

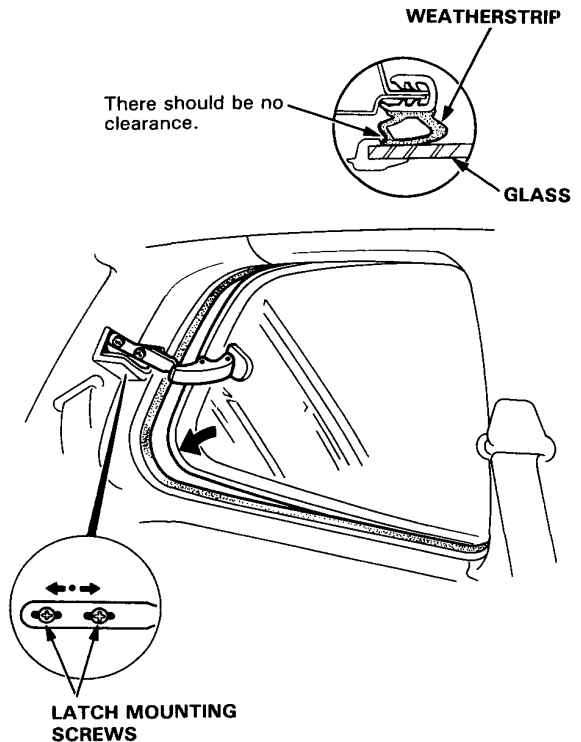

9. With the quarter glass closed fully, check for water and air leaks.

NOTE: Do not use high pressure water.