


Fuel Gauge Sending Unit

Testing

WARNING Do not smoke while working on fuel system. Keep open flame away from work area. Drain fuel only into an approved container.


1. Check that ignition switch is OFF, then disconnect fuel sending unit connector at tank.
2. Drain and remove fuel tank as shown on page 12-9.
3. Remove fuel sending unit from tank.

FUEL SENDER WRENCH
07920-SB20000

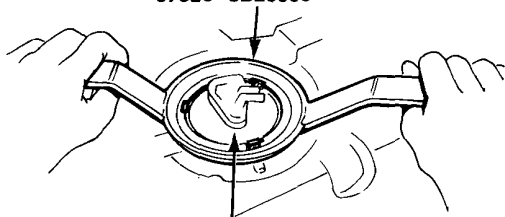

FUEL SENDING UNIT

4. Measure resistance between the yellow/white wire and black wire at the 3 float positions shown below.

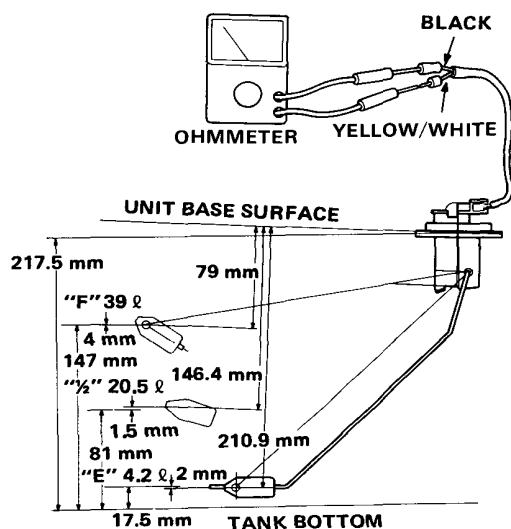

FLOAT POSITION	RESISTANCE (OHMS)	FUEL VOLUME (l)
EMPTY	105-110	5
1/2 FULL	25.5-39.5	20.5
FULL	2-5	39

Fuel Line Unit


Replacement

WARNING

- Do not smoke while working on fuel system. Keep open flame away from work area.
- Block front wheels before jacking up rear of car.

1. Drain and remove fuel tank as shown on page 12-9.
2. Remove fuel line unit from tank.

FUEL SENDER WRENCH
07920-SB20000

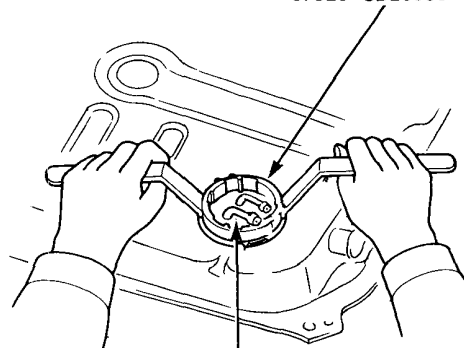

FUEL LINE UNIT