



Shift Arm Holder Assy

Installation

1. Hook selector arm and shift arm into shift rod guide.

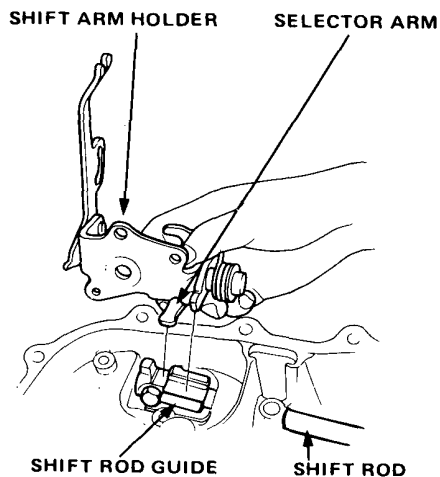

2. Install bolts in shift arm holder.

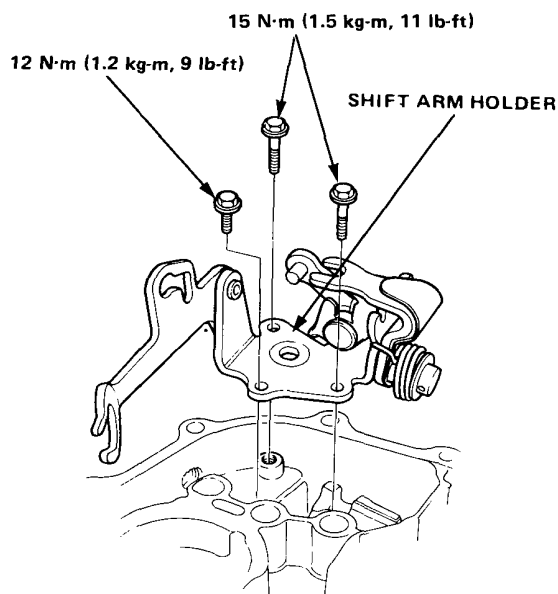


Transmission Assy




Reassembly

1. Install differential assembly in clutch housing.

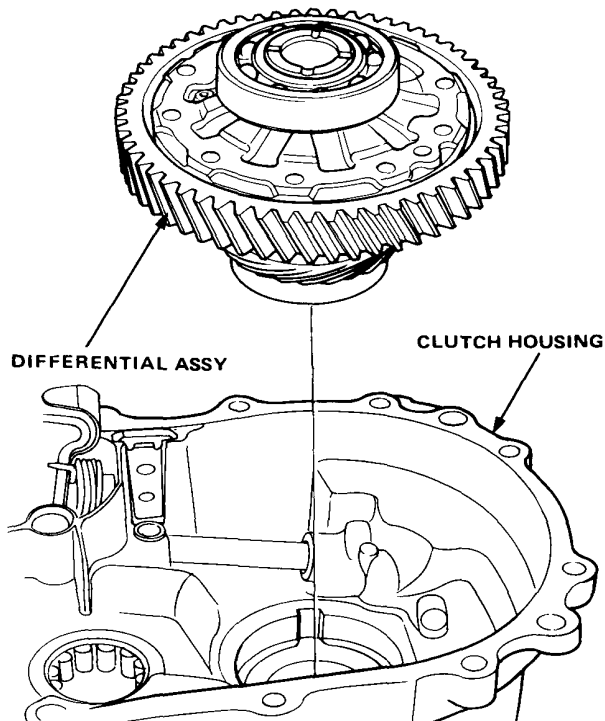

2. Install mainshaft, countershaft, first/second gear shift shaft and third/fourth gear shift shaft together as an assembly. Make sure forks are in fourth and second gear positions to make installation easier.

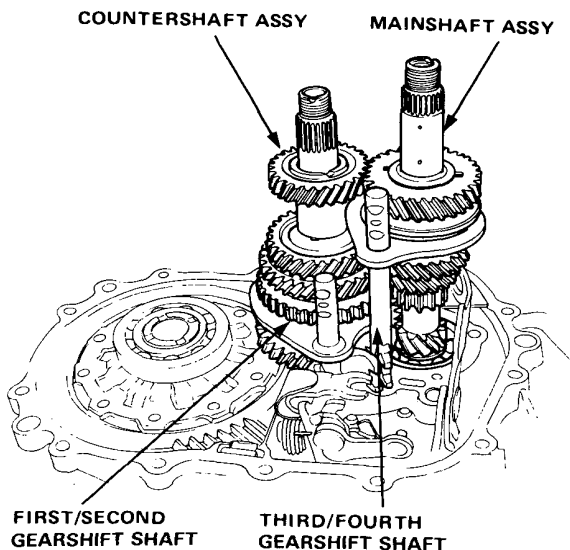

(cont'd)