


Shift Arm Holder

Index

To remove selector arm from holder for shimming or replacement, drive out spring pin with driver.

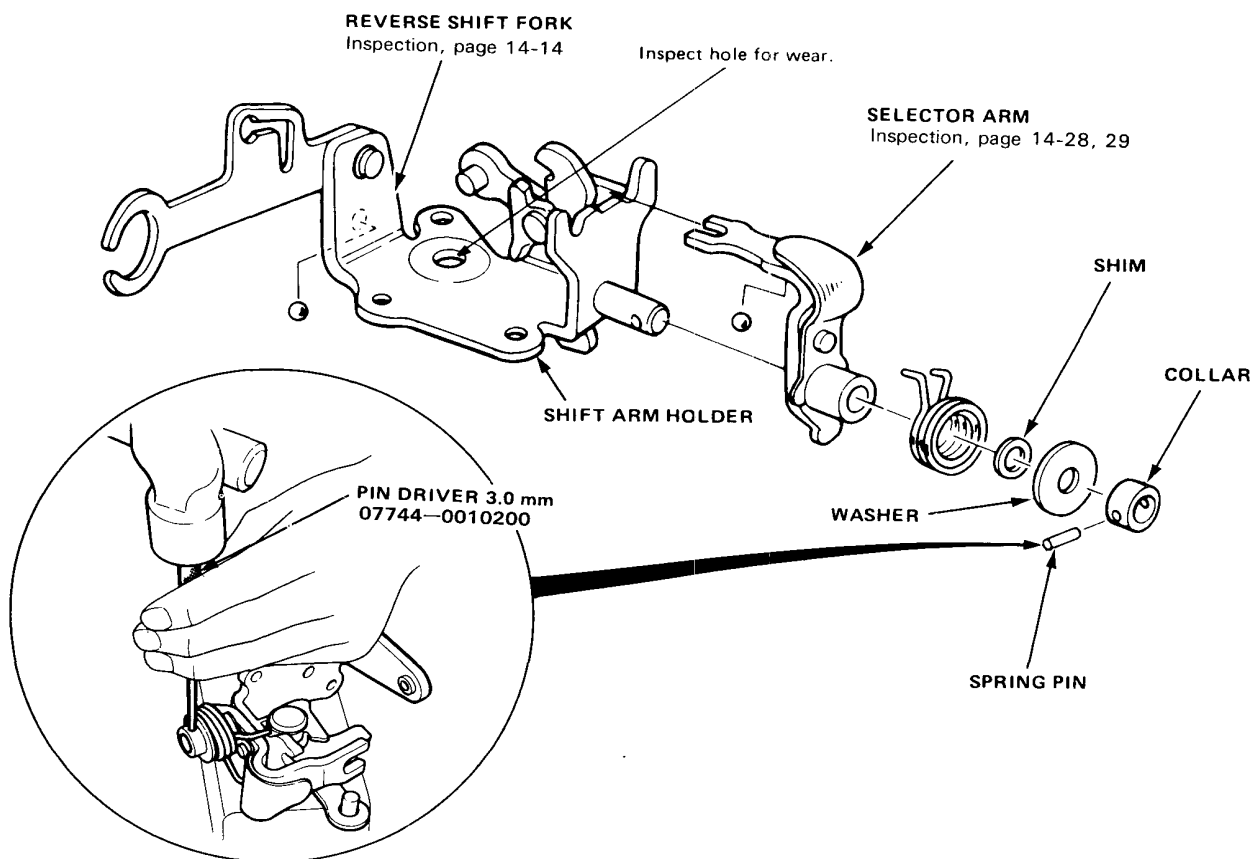

Clearances

1. Measure clearance between collar and shim on shaft of selector arm as shown.

CLEARANCE

Standard (New): 0.01 – 0.2 mm
(0.0004 – 0.008 in.)

2. If out of tolerance, select a new shim from following table:

Collar-to-Selector Arm Shim Clearance:

IDENTIFICATION	THICKNESS
A	0.8 mm (0.031 in.)
B	1.0 mm (0.039 in.)
C	1.2 mm (0.047 in.)
D	1.4 mm (0.055 in.)
E	1.6 mm (0.063 in.)

