



Differential Oil Seal

Installation


1. Install 80 mm snap ring in transmission housing. If differential bearings or carrier were replaced, select snap ring of correct thickness as shown on page 17-6.

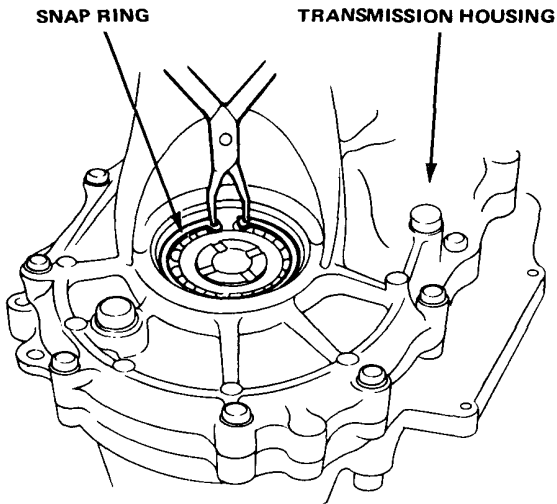

2. Drive oil seal into transmission housing with part number side facing away from snap ring.

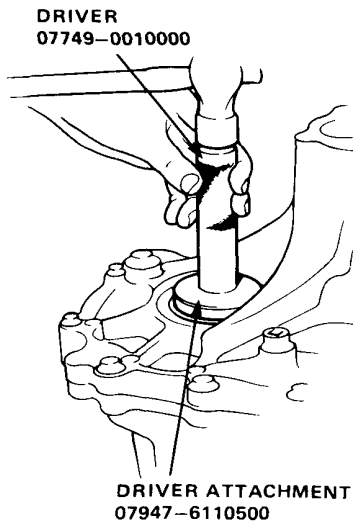

3. Drive differential oil seal into clutch housing with part number side facing away from bearing.

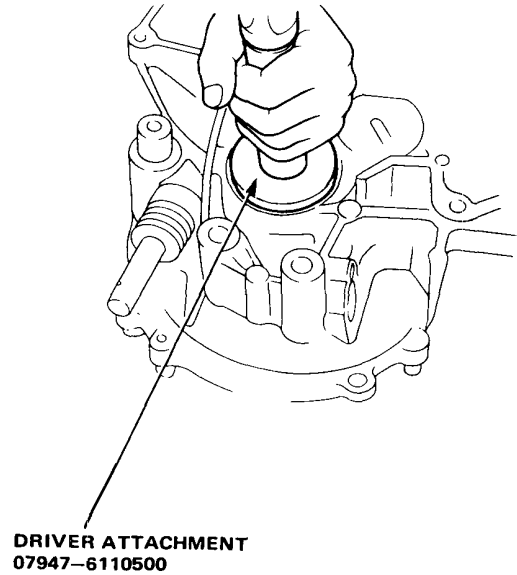

OIL SEAL LOCATIONS

