


# Vacuum and Electrical Connections

[Except KX model]

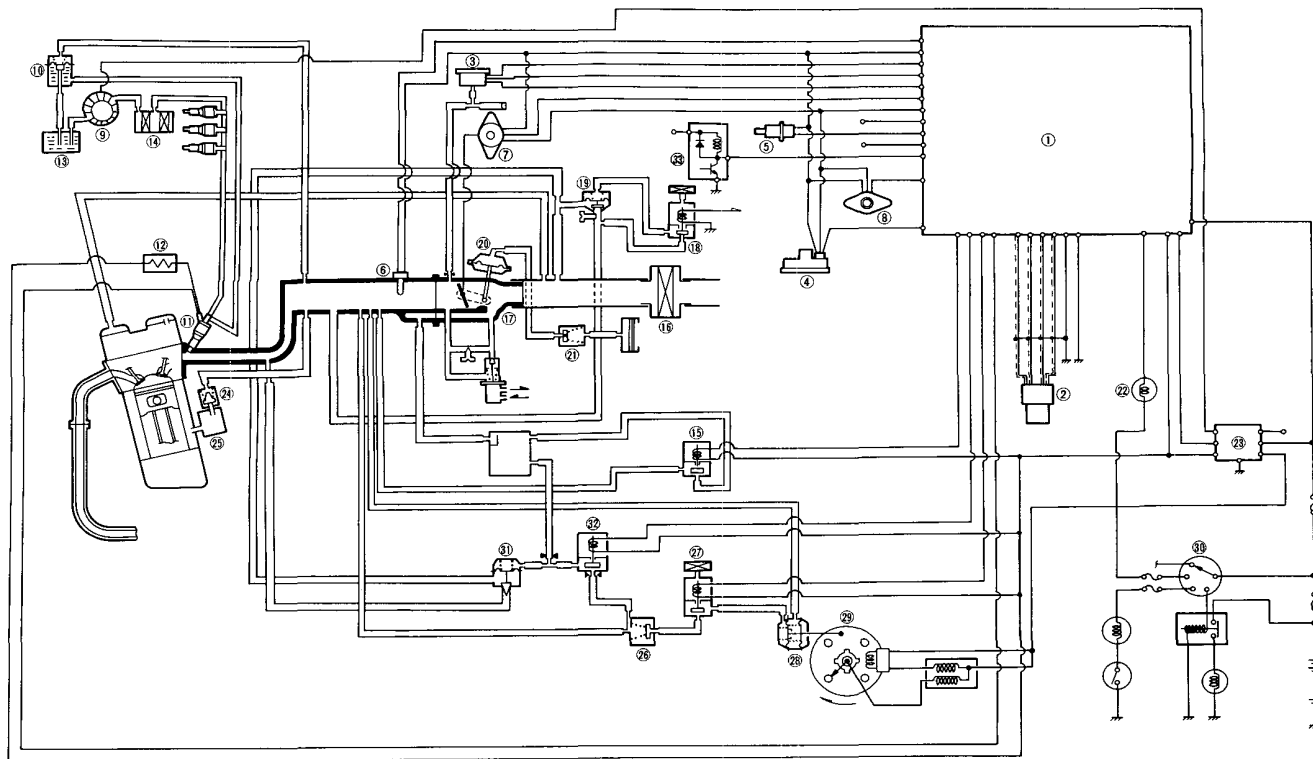


- ① ELECTRONIC CONTROL UNIT (ECU)
- ② CRANK ANGLE SENSOR
- ③ MANIFOLD ABSOLUTE PRESSURE SENSOR
- ④ ATMOSPHERIC PRESSURE SENSOR
- ⑤ COOLANT TEMPERATURE SENSOR
- ⑥ INTAKE AIR TEMPERATURE SENSOR
- ⑦ THROTTLE ANGLE SENSOR
- ⑧ IDLE MIXTURE ADJUSTER SENSOR
- ⑨ FUEL PUMP
- ⑩ PRESSURE REGULATOR
- ⑪ INJECTOR
- ⑫ RESISTOR
- ⑬ FUEL TANK
- ⑭ FUEL FILTER
- ⑮ IDLE CONTROL SOLENOID VALVE
- ⑯ AIR CLANER

- ⑰ THROTTLE BODY
- ⑱ A/C IDLE BOOST SOLENOID VALVE
- ⑲ A/C IDLE BOOST VALVE
- ⑳ DASHPOT DIAPHRAGM
- ㉑ DASHPOT CHECK VALVE
- ㉒ PGM-FI WARNING LIGHT
- ㉓ MAIN RELAY
- ㉔ PCV VALVE
- ㉕ BREATHER CHAMBER
- ㉖ CHECK VALVE
- ㉗ COLD ADVANCE SOLENOID VALVE
- ㉘ VACUUM ADVANCE DIAPHRAGM
- ㉙ DISTRIBUTOR
- ㉚ IGNITION SWITCH
- ㉛ AIR VALVE
- ㉜ AIR CONTROL SOLENOID VALVE
- ㉝ ALTERNATOR



[KX model]

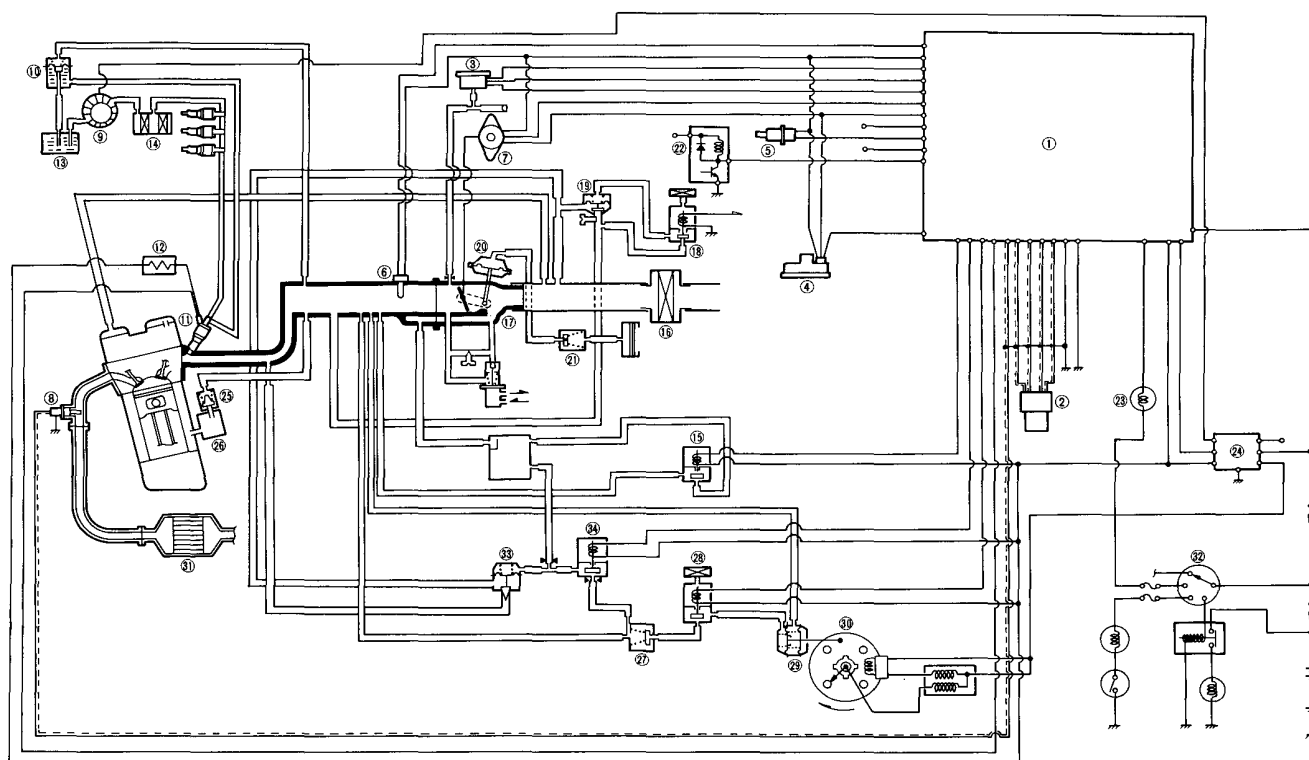

- ① ELECTRONIC CONTROL UNIT (ECU)
- ② CRANK ANGLE SENSOR
- ③ MANIFOLD ABSOLUTE PRESSURE SENSOR
- ④ ATMOSPHERIC PRESSURE SENSOR
- ⑤ COOLANT TEMPERATURE SENSOR
- ⑥ INTAKE AIR TEMPERATURE SENSOR
- ⑦ THROTTLE ANGLE SENSOR
- ⑧ OXYGEN SENSOR
- ⑨ FUEL PUMP
- ⑩ PRESSURE REGULATOR
- ⑪ INJECTOR
- ⑫ RESISTOR
- ⑬ FUEL TANK
- ⑭ FUEL FILTER
- ⑮ IDLE CONTROL SOLENOID VALVE
- ⑯ AIR CLEANER
- ⑰ THROTTLE BODY

- ⑱ A/C IDLE BOOST SOLENOID VALVE
- ⑲ A/C IDLE BOOST VALVE
- ⑳ DASHPOT DIAPHRAGM
- ㉑ DASHPOT CHECK VALVE
- ㉒ ALTERNATOR
- ㉓ PGM-FI WARNING LIGHT
- ㉔ MAIN RELAY
- ㉕ PCV VALVE
- ㉖ BREATHING CHAMBER
- ㉗ CHECK VALVE
- ㉘ COLD ADVANCE SOLENOID VALVE
- ㉙ VACUUM ADVANCE DIAPHRAGM
- ㉚ DISTRIBUTOR
- ㉛ CATALYTIC CONVERTER
- ㉜ IGNITION SWITCH
- ㉝ AIR VALVE
- ㉞ AIR CONTROL SOLENOID VALVE