


# Differential


## Inspection/Disassembly

1. Remove the ring gear and inspect teeth for excessive wear.

**CAUTION:** The ring gear bolts have left-hand threads.

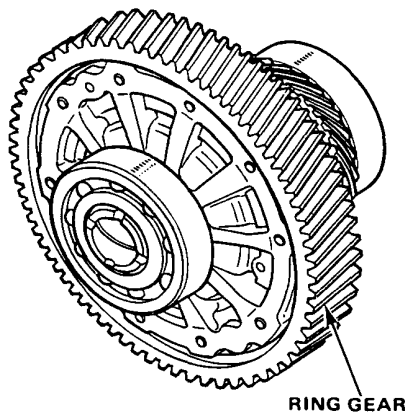


2. Drive out spring pin with pin punch.

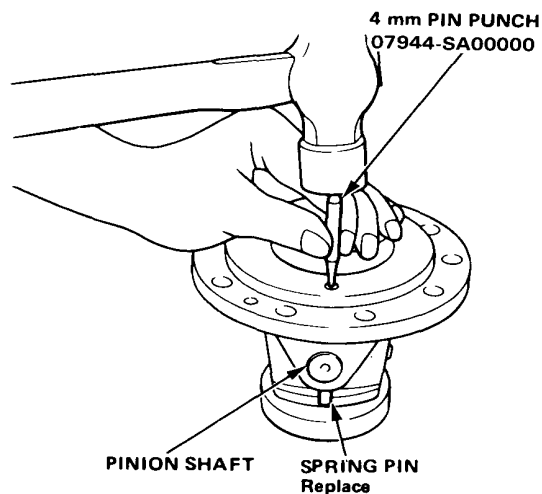

3. Remove pinion shaft, pinion gears and thrust washers.

**PINION SHAFT**  
Inspect for scoring  
and burrs.

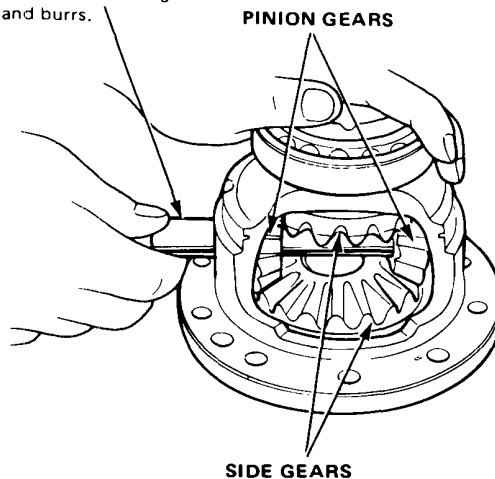

4. Wash parts thoroughly in solvent and dry with compressed air. Inspect all parts for wear or damage and replace any that are defective.