


# Charging

## Alternator Output Test

1. With engine off, disconnect the alternator terminal (W).
2. Hook up an ammeter as shown.

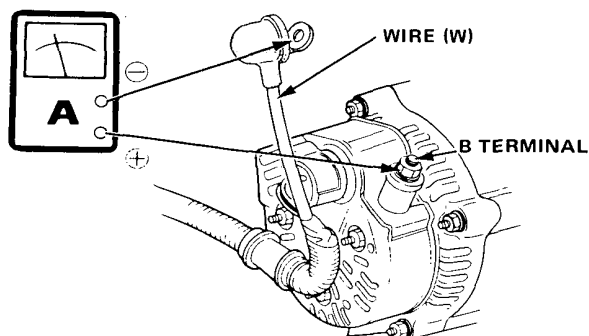

3. Start the engine.
4. Turn on:
  - Headlight switch (high beam).
  - Rear window defroster switch.
  - Heater fan switch (MAX).
5. Check alternator output.

If within the output curve shown, the alternator is good.

If the alternator has no output or its output is not within specification, see the alternator checks starting.

