


Crankcase Emission Control



Inspection

PCV Valve

1. Check the crankcase ventilation hoses and connections for leaks and clogging.
2. At idling, make sure there is a clicking sound from the PCV valve when the hose between PCV valve and insulator is lightly pinched with your fingers or pliers.

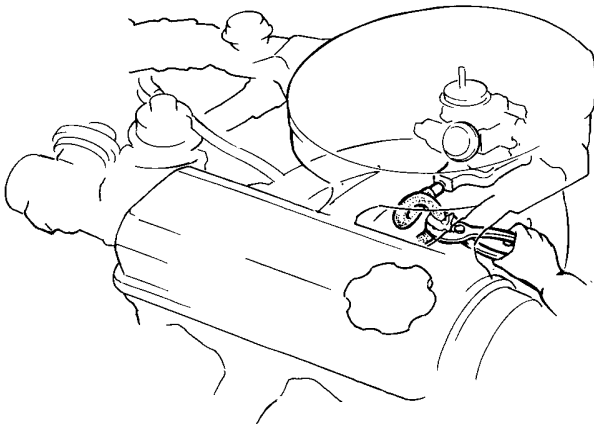

- If there is no clicking sound, check the PCV valve grommet for cracks or damage.
- If the grommet is OK, replace the PCV valve and recheck.

Blow-by Filter

1. Inspect the condition of the blow-by filter.
 - Replace the filter in the following instances:
 - When the filter is stuck fast and oil is dripping or seeping through.
 - When the filter is covered with dust and dirt so that clogging is evident.

