



Differential Oil Seals

Removal

1. If seals are to be replaced, or if differential needs repair, remove differential assembly.

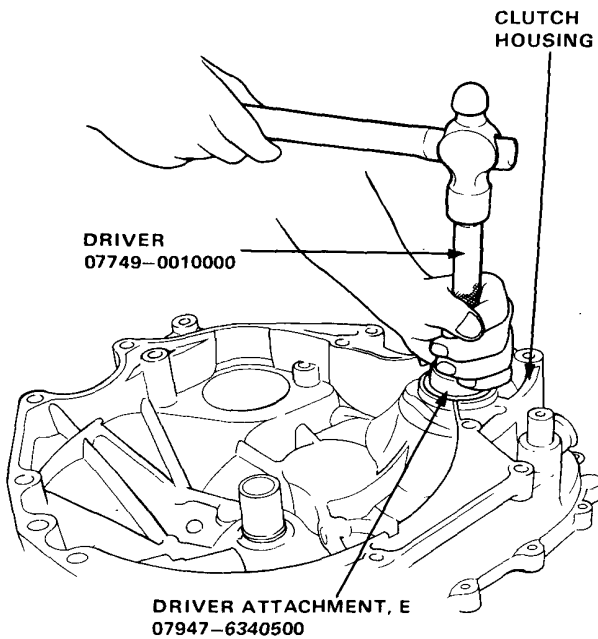

2. Drive the differential oil seal out of the clutch housing.
3. Remove 80 mm snap ring in transmission housing.

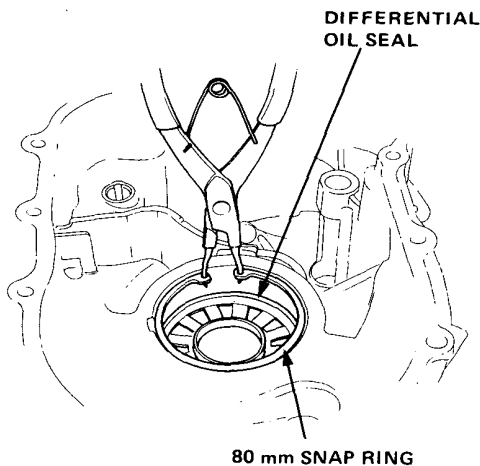


4. Drive the differential oil seal out of the transmission housing.

NOTE: Replace the differential oil seal in the transmission housing whenever disassembled.

Bearings and Seals

Replacement (Clutch Housing)

1. Remove countershaft bearing retainer plate.
2. Remove the breather chamber plate.

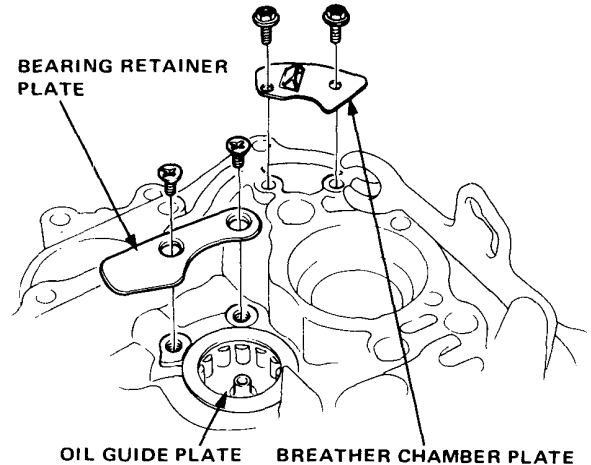

3. Insert Bearing Remover with attachment into countershaft bearing.
4. Raise slide hammer rapidly and strike against handle. Repeat several times to remove bearing.

