
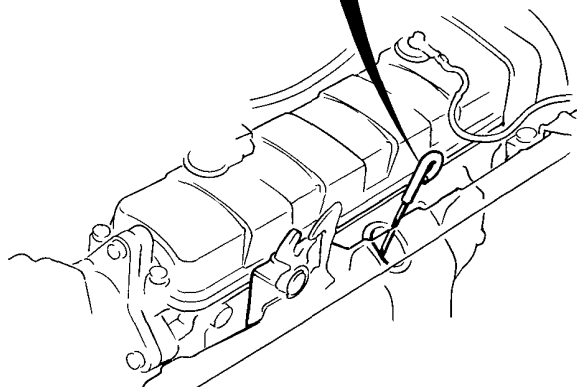


Oil Level

Inspection

1. Check engine oil with the engine off and the car parked on level ground.
2. Make certain that the oil level indicated on the dipstick is between the upper and lower marks.
3. If the level has dropped close to the lower mark, add oil until it reaches the upper mark.

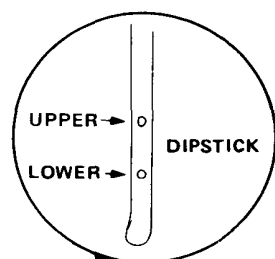


Engine Oil



Replacement

1. Warm up the engine.
2. Drain the engine oil.

NOTE: Remove the filler cap to speed draining.

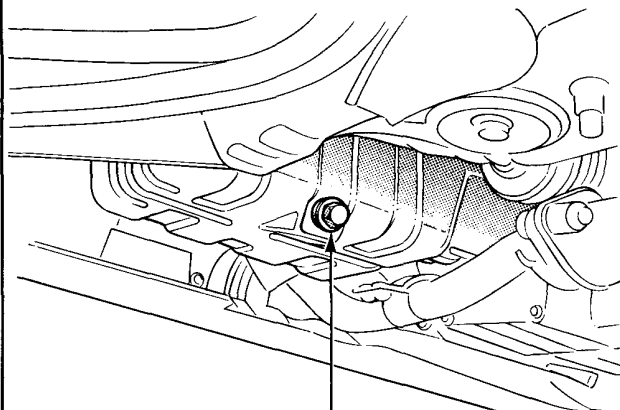


OIL PAN DRAIN PLUG
45 N·m (4.5 kg·m, 33 lb·ft)

3. Reinstall the drain plug with a new washer, and refill with the recommended oil.

Capacity	3.0 lit (3.2 US qt., 2.6 Imp. qt.)
	Exclude Oil filter
	3.5 lit (3.7 US qt., 3.1 Imp. qt.)
	Adding replace oil filter
	4.0 lit (4.2 US qt., 3.5 Imp. qt.)
	Means designed valve
Change	Every 12,000 km (7,500 mi.)

NOTE: Oil filter should be replaced at each oil change.

Recommended Engine Oil (SE or SF Grade only)

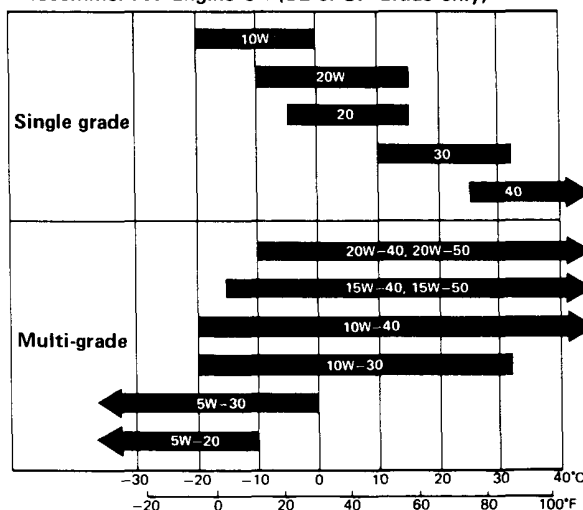

Expected Ambient Temperature before next oil change