
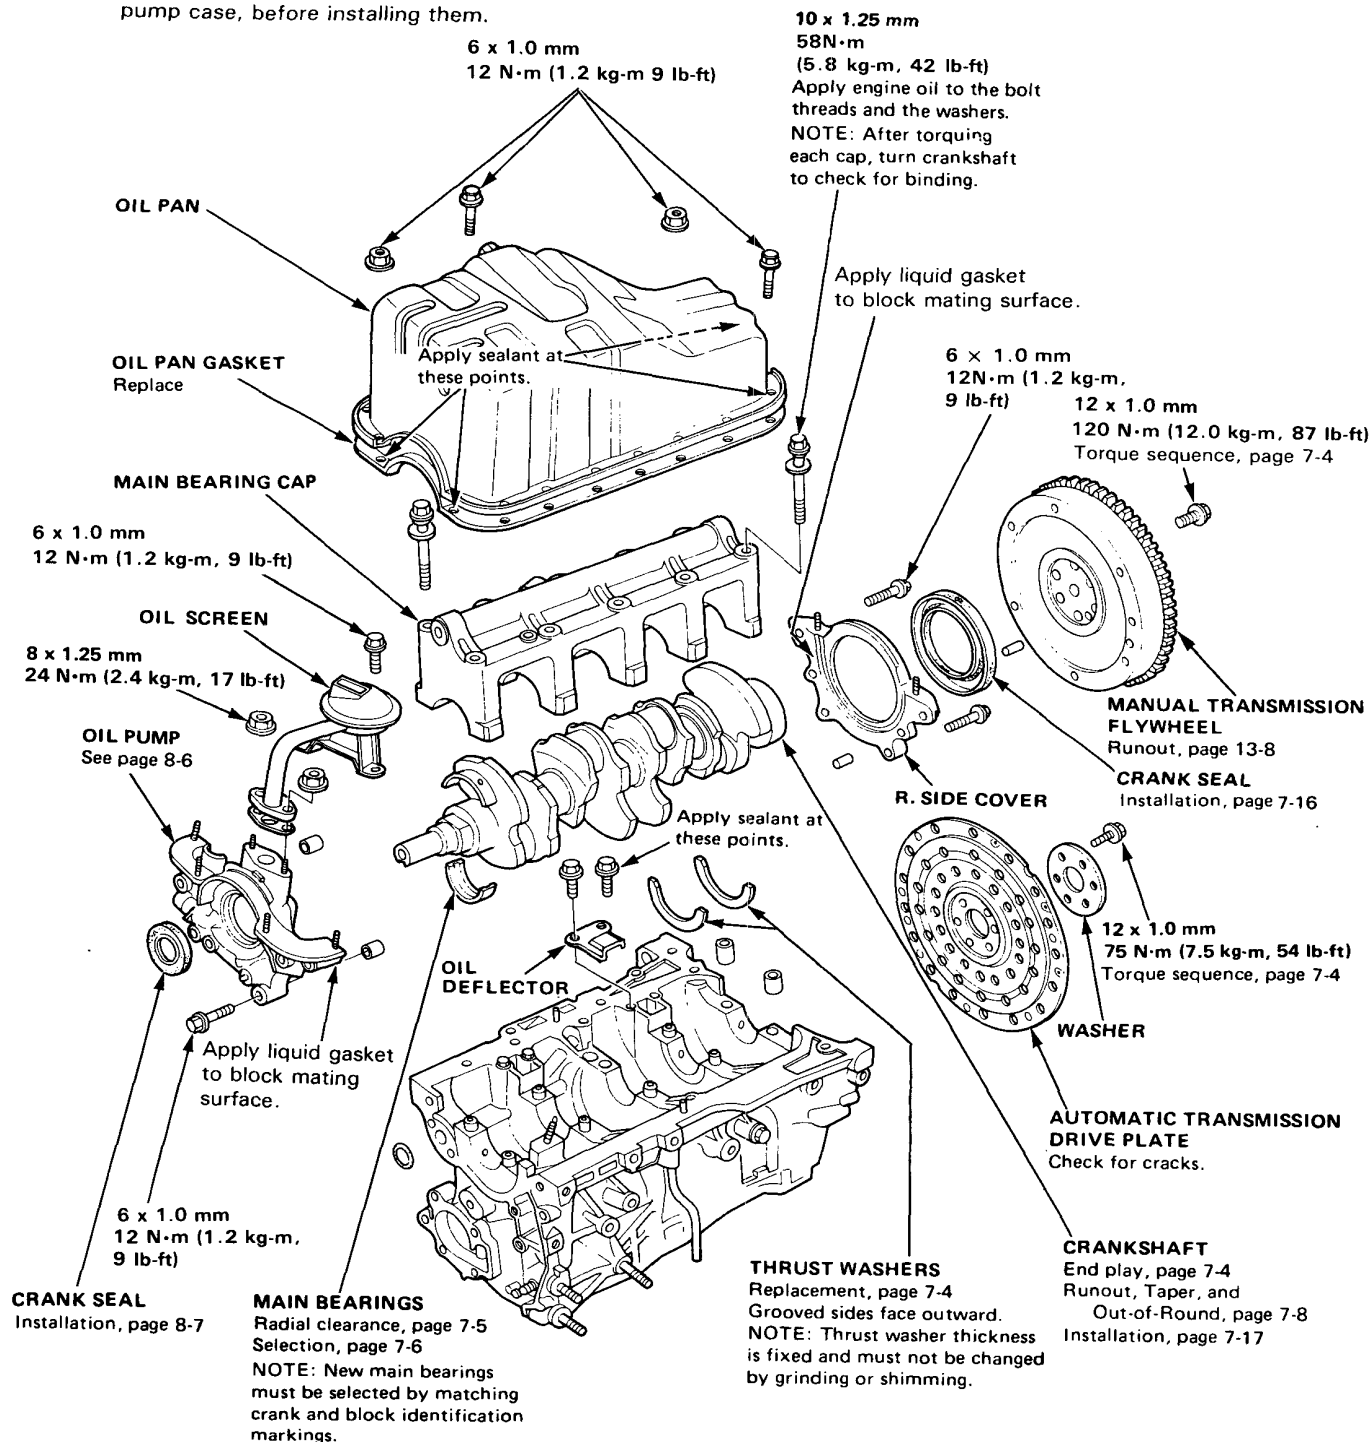


Engine Block

Illustrated Index

 Lubricate all internal parts with engine oil during reassembly.

NOTE: Apply non-hardening liquid gasket to the mating surfaces of the right side cover and oil pump case, before installing them.





NOTE: New rod bearings must be selected by matching connecting rod and crankshaft identification markings (page 7-6).

