


# Differential

## Oil Seal Installation

1. Install the oil seal in the transmission housing.

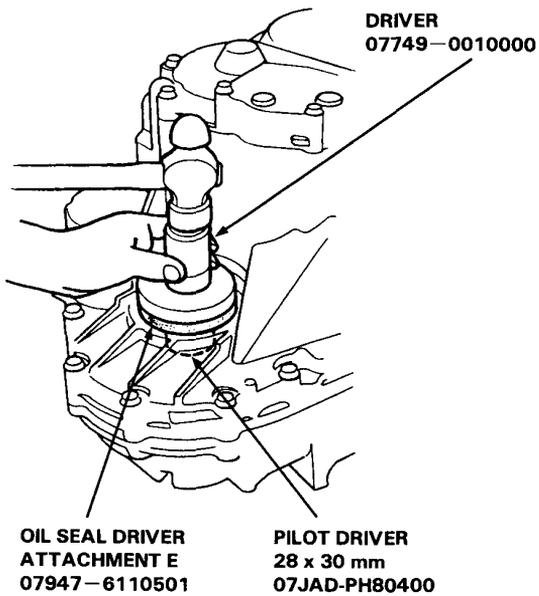

2. Install the oil seal in the torque converter housing.

