


Shift Position Switch

Installation

1. Position the switch slider in neutral as shown.
2. Shift selector lever to neutral.
3. Align the switch lug with the actuator rod.

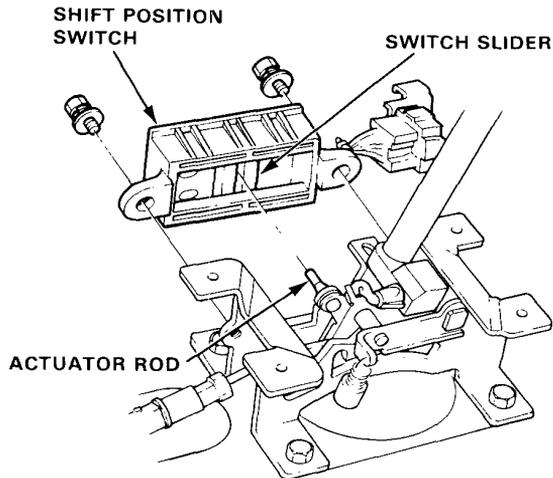


4. Tighten the bolts.

Shift Indicator Light

Check and Installation

1. Check for continuity between indicator light connector terminals as shown. If there is no continuity, check for burned out bulb or open circuit.

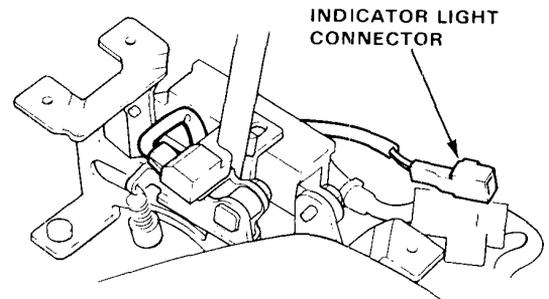

2. Install the indicator bulb in the bulb housing. Insert the bulb housing into slot in escutcheon, then turn 90° to bulb housing.

