


Governor Valve

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Check that the governor works smoothly; replace it if it does not.
- Coat all parts with ATF before reassembly.

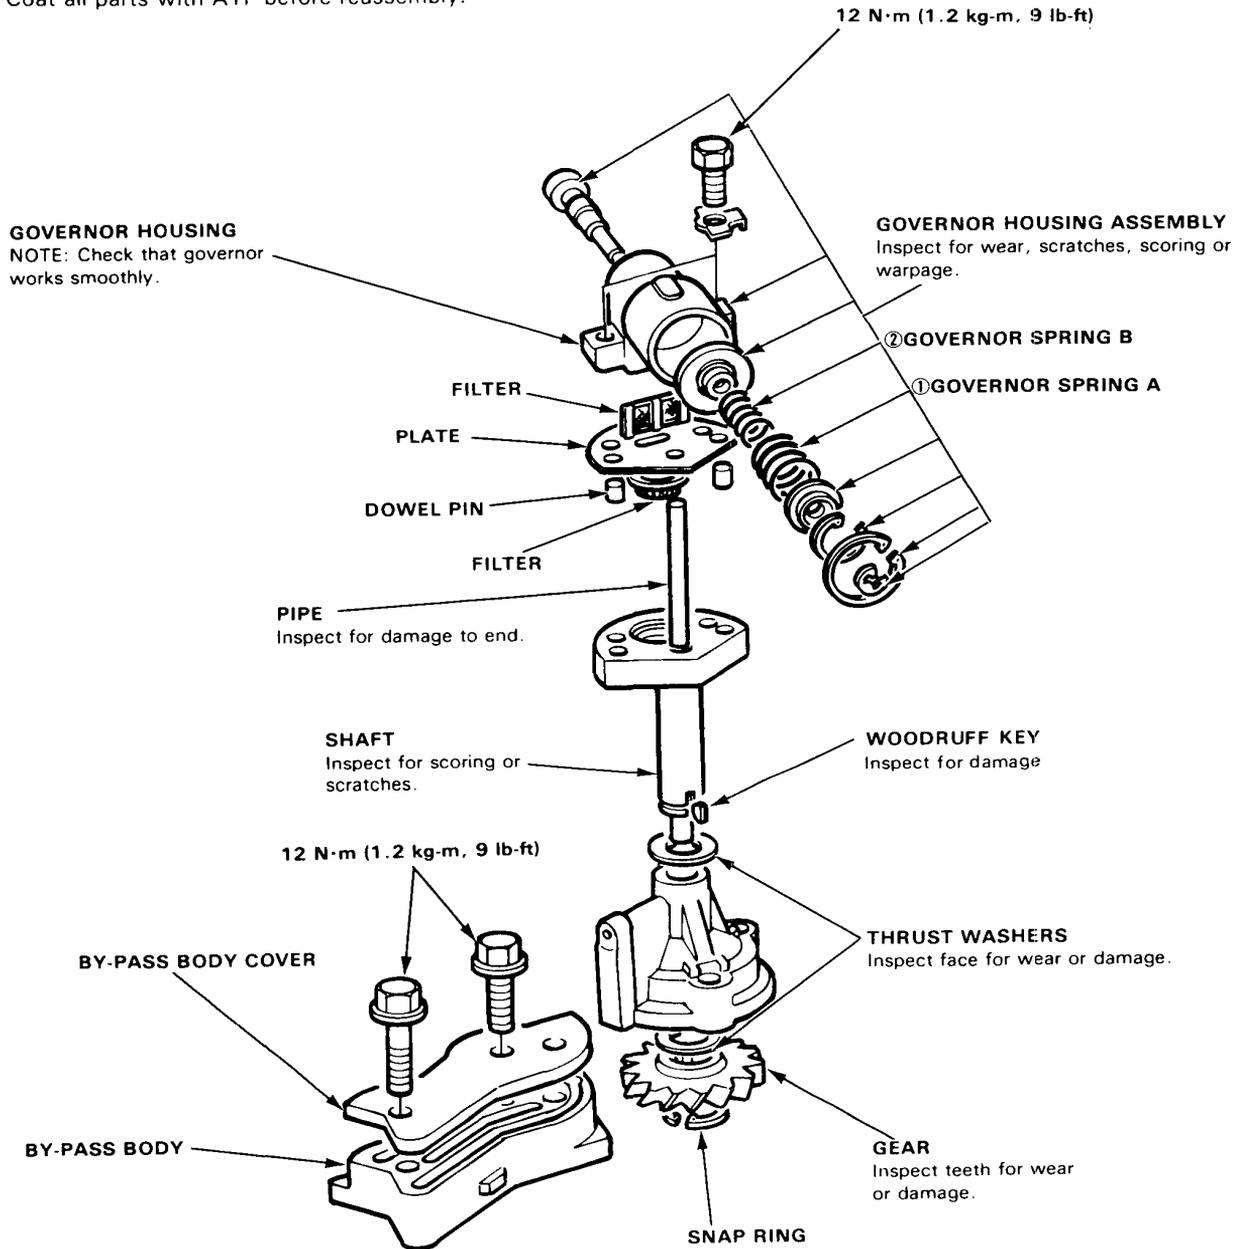

Spring Specifications		Unit of length mm (in.)			
No.	Spring	Standard (New)			
		Wire Dia.	O. D.	Free Length	No. of Coils
①	Governor spring A	1.0(0.039)	18.8(0.740)	20.4(0.803)	4
②	Governor spring B	0.8(0.031)	11.8(0.465)	26.7(1.051)	6