



1st Accumulator

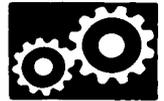

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Coat all parts with ATF before reassembly.

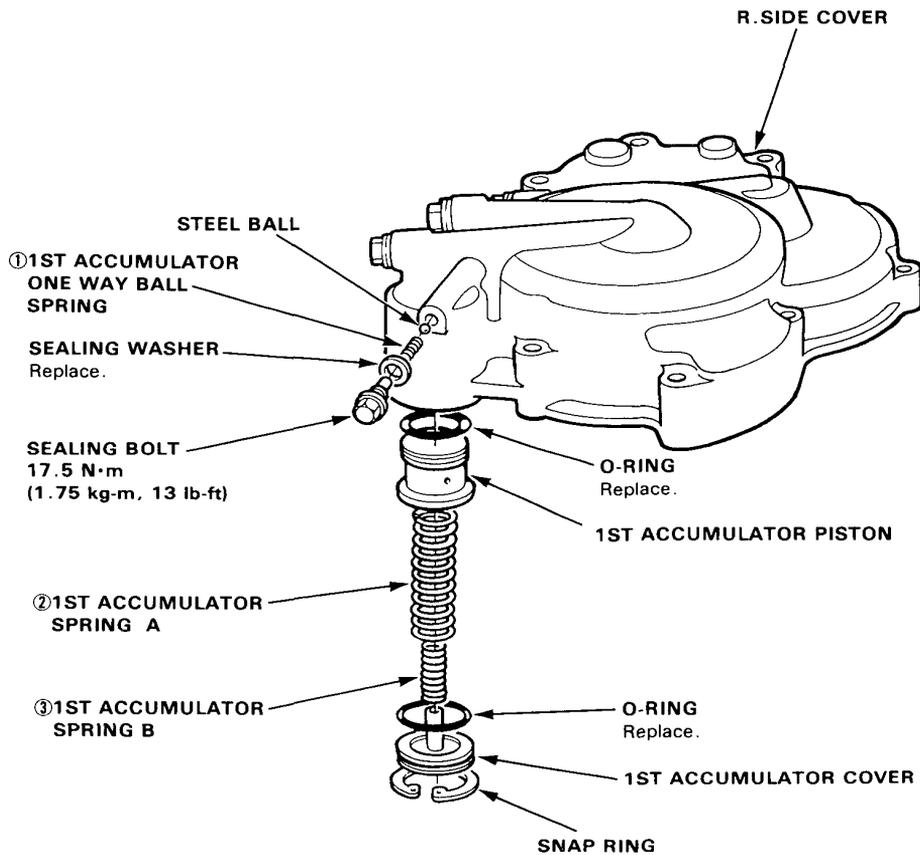

Spring Specifications

Unit of length mm (in.)

| No. | Spring | Standard (New) | | | |
|-----|-------------------------------------|--------------------------------|-------------|-------------|--------------|
| | | Wire Dia. | O.D. | Free Length | No. of Coils |
| ① | 1st accumulator one way ball spring | 0.29(0.011) | 4.0(0.157) | 14.0(0.551) | 13 |
| ② | 1st accumulator spring A | 2.34 x 2.90 (0.092 x 0.114) | 21.5(0.846) | 66.7(2.626) | 10.2 |
| ③ | 1st accumulator spring B | 2.8(0.110) | 13.1(0.516) | 40.0(1.575) | 8.8 |