



Rear Window Defogger



Component Location Index

DEFOGGER SWITCH
Test, page 16-35

REAR WINDOW DEFOGGER
Function Test, page 16-34

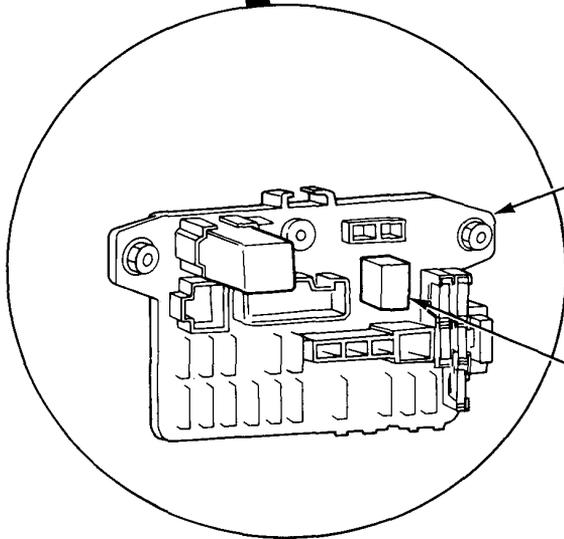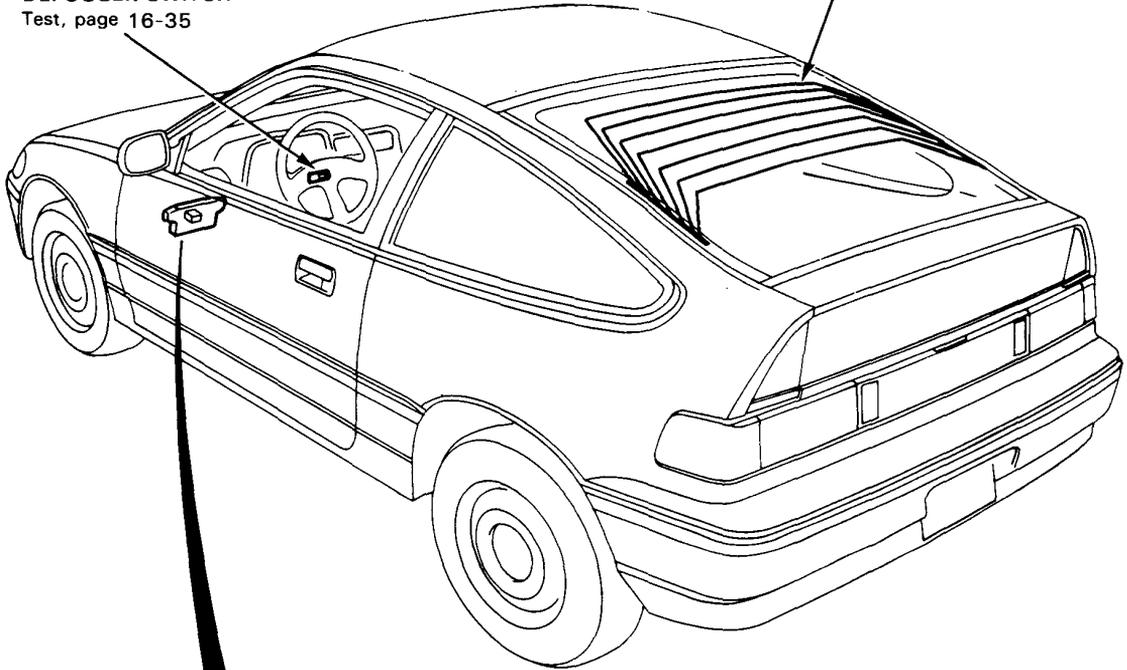

DASH FUSE BOX
(Located under dash, driver side)

DEFOGGER RELAY
Test, page 16-35