




Rear Fog Light Switch Removal


1. Remove the caps, then remove the 4 screws.
2. Remove the instrument panel from the dashboard.
3. Disconnect the 10-P connector from the switch.
4. Remove the switch from the instrument panel.

NOTE : LHD type shown, RHD type similar.

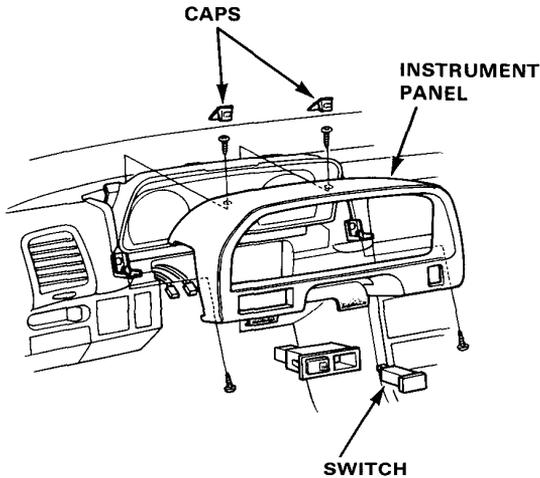

5. Turn the socket 45° counterclockwise sockets to remove it.

BULB/SOCKETS(0.84 W×2)

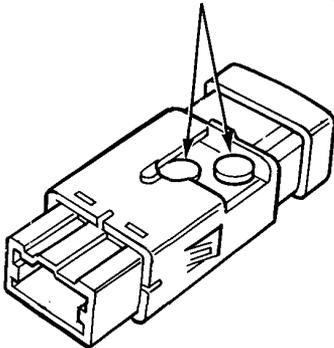

Rear Fog Light Switch Test

1. Remove the switch from the instrument panel.
2. Check for continuity between the terminals according to the table.

Terminal Position	A	B	C	D	E
ON	○	○	○	○	○
OFF					

