


# Parking Brake Stopper

## Inspection/Adjustment

1. Set the parking shift arm in PARKING position.
2. Measure the distance between the outer face of the parking pawl shaft and outer face of the parking shift arm roller pin.

**SPECIFICATION (distance): 28.7–29.7 mm (1.130–1.169 in.)**

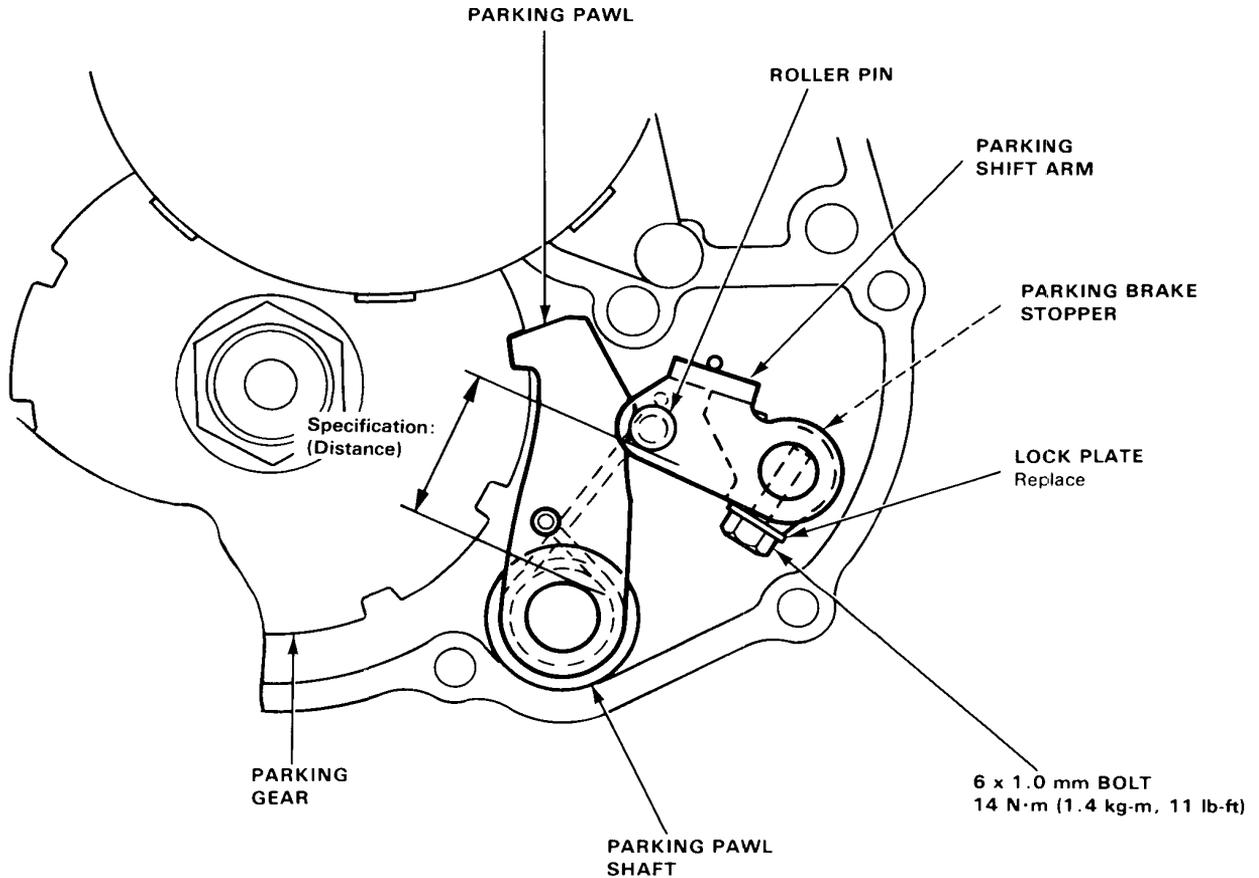

3. If the measurement is out of the specification (distance), select the appropriate parking stopper using the table below, and install it on the parking shift arm.

No.	PART NUMBER
1	24537-PA9-003
2	24538-PA9-003
3	24539-PA9-003