


Air Intake System

Choke Cable

1. Check that choke control operates smoothly with no evidence of binding or sticking.
2. Set choke knob in the second detent position and check that the marks are aligned.

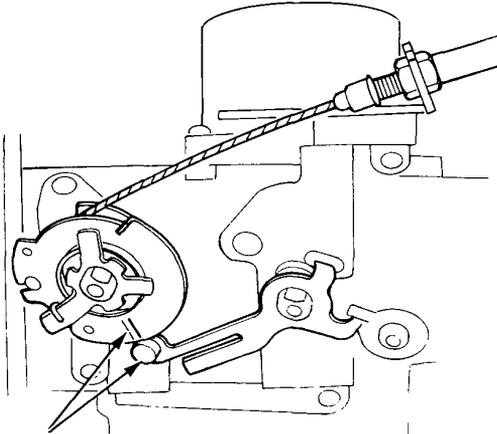

**ADJUSTING
MARKS**

3. If not aligned, loosen the locknut and adjust the adjusting nut, then retighten the locknut.