


# Shift Fork


## Disassembly

1. Remove the shift fork shaft by removing the spring pins from the shift forks.


PIN DRIVER  
3.0 mm  
07744-0010200

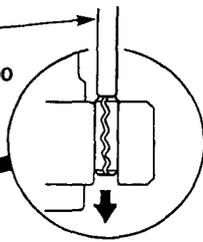

PIN DRIVER  
5.0 mm  
07744-0010400

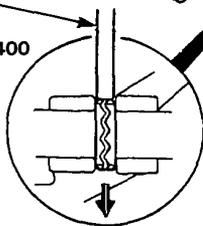


**CAUTION:** Do not lose the spring-loaded detent while disassembling the shift forks and shift fork shafts.

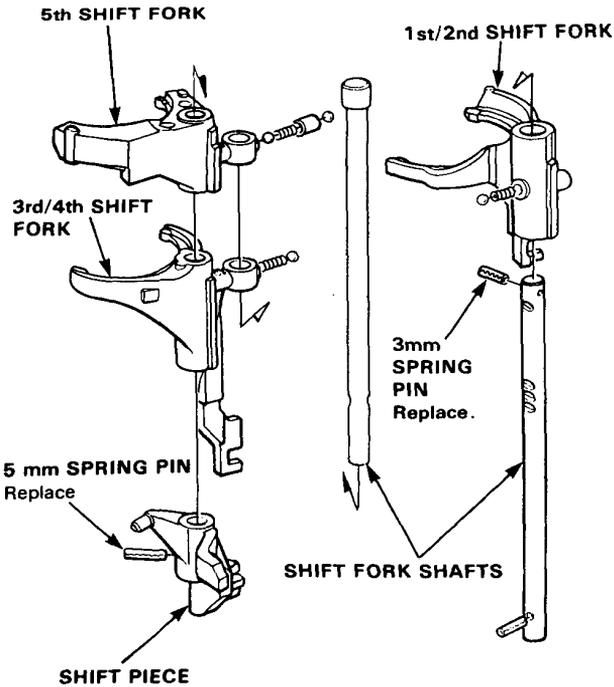

## Reassembly

1. Insert the shift fork shaft into the shift forks and drive in the spring pins.

**NOTE:** Do not lose the steel balls and spring when reassembling.

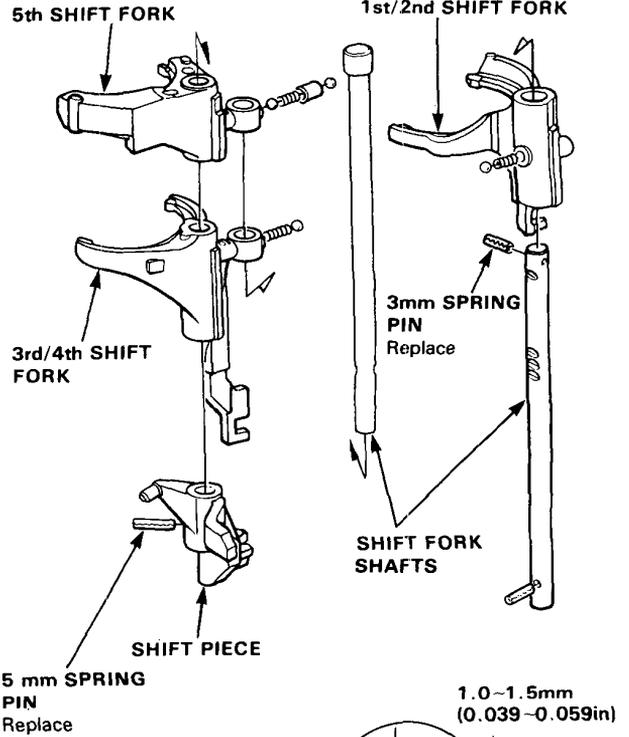

1.0-1.5mm  
(0.039-0.059in)

