




## Thermal Protector Inspection

Check for continuity between the 1 and 3 terminals of the compressor connector.


There should be continuity.

- If no continuity, replace the thermal protector.

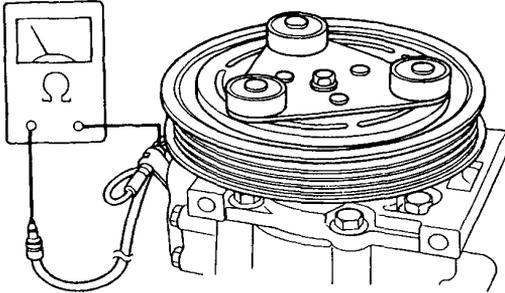

## Thermal Protector Replacement

1. Remove the pressure plate and field coil (page 22-29).
2. Pull the rubber cap out from the thermal protector.
3. Remove the screws and wire clips.
4. Remove the circlip and thermal protector.

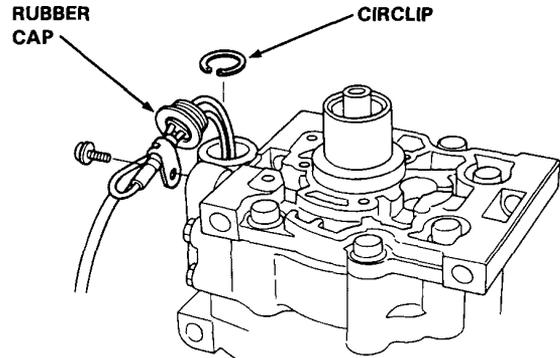

5. Install in the reverse order of removal.

### NOTE:

- Replace the O-rings with new ones.
- Set the new O-rings in place as shown.

