


Lubrication Points


No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SE, SF or SG SAE Viscosity: See chart below
2	Transmission Manual	API Service Grade: SE or SF SAE Viscosity: See chart below
3	Brake Line (alb line for ALB mode)	Brake fluid DOT 3 or DOT 4
4	Power steering system	Honda power steering fluid P/N 08208-99961
5	Steering gearbox (Power steering)	Honda steering grease P/N 08733-B070E
6	Shift lever pivot (manual transmission)	Silicone grease with molybdenum disulfide
7-22	7 Tilt steering 8 Steering ball joints 9 Suspension ball joints 10 Steering boots 11 Steering gearbox(Manual steering) 12 Steering column bushings 13 Pedal linkage 14 Brake master cylinder push rod 15 Tailgate hinges 16 Door hinges upper and lower 17 Door opening detents 18 Fuel filler lid 19 Engine hood hinges 20 Engine hood latch 21 Select lever 22 Rear brake shoe linkage (drum brake)	Multi-purpose grease
23	Caliper Piston seal Dust seal Caliper pin Piston	Silicone grease

Recommended Engine Oil
(SE, SF or SG Grade oil)

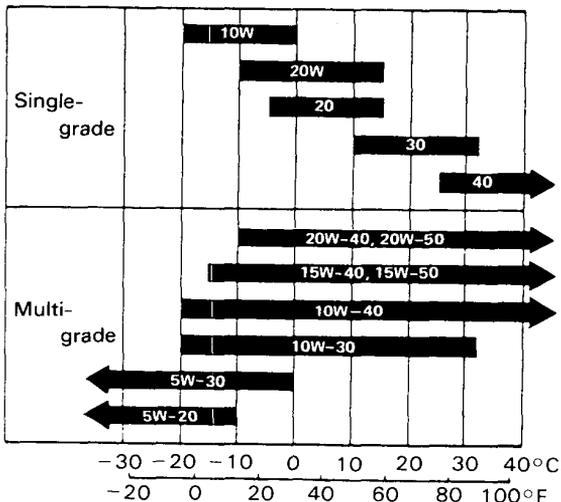

Engine oil viscosity for ambient temperature ranges

Recommended Manual Transmission Oil
(SE or SF Grade oil)

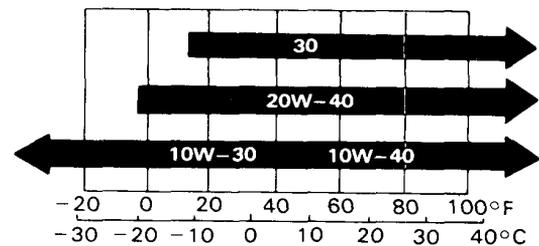

Transmission oil viscosity for ambient temperature ranges

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

