


Secondary Valve Body

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Check all valves for free movement. If any fail to slide freely, see Valve Body Repair.
- Replace as assembly if any parts are worn or damaged.

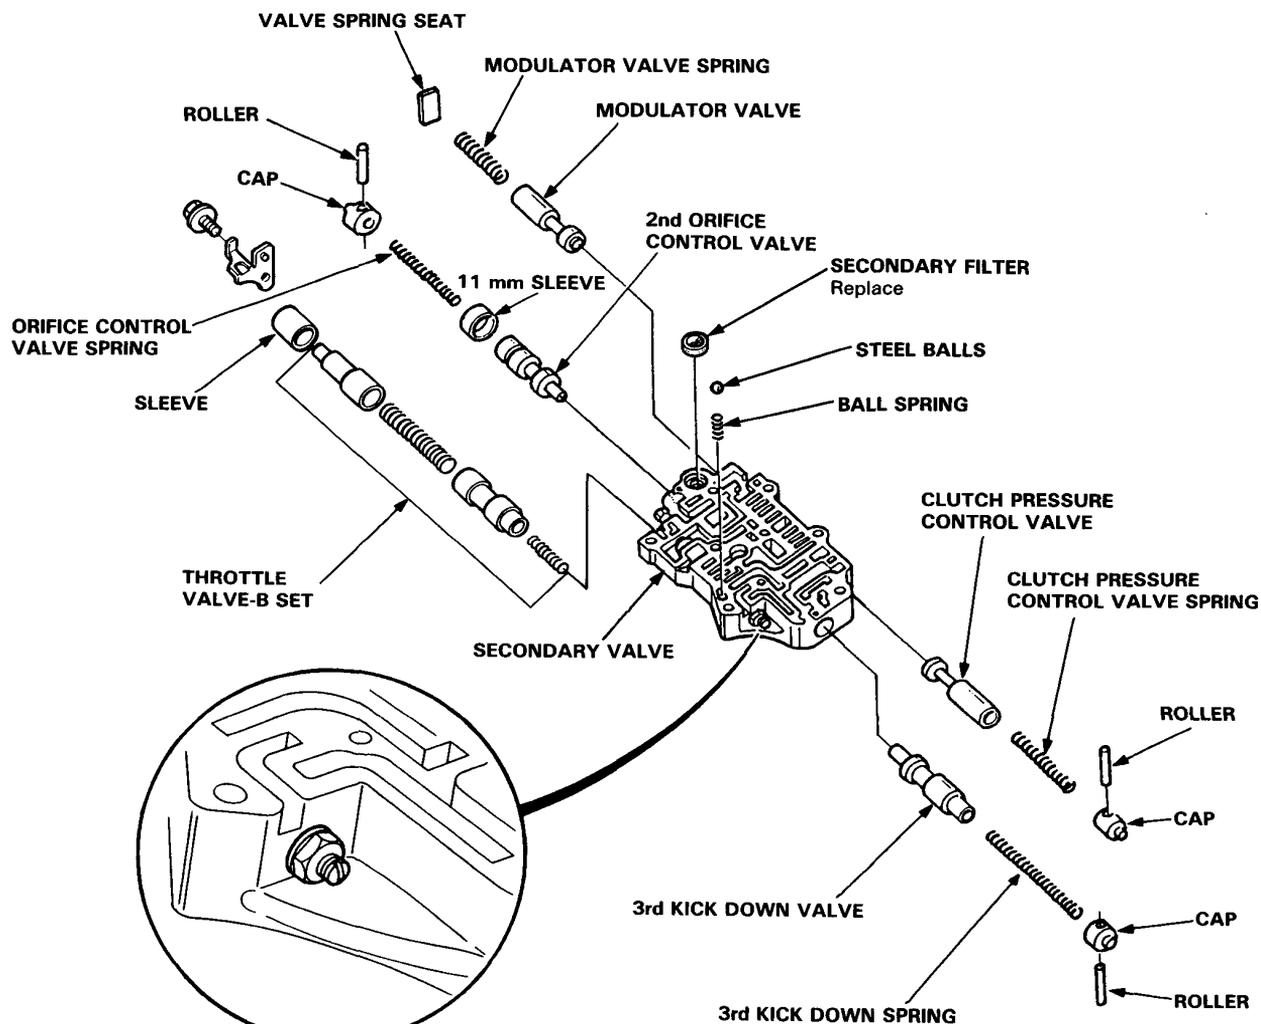

THROTTLE PRESSURE BOLT B

NOTE: Do not adjust or remove this bolt; it is adjusted at the factory for proper shift point.