


Lubrication Points


No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SE or SF SAE Viscosity: See chart below
2	Transmission Manual Automatic	API Service Grade: SE or SF SAE Viscosity: See chart below DEXRON® or DEXRON® II Automatic transmission fluid
3 4	Brake reservoir Clutch reservoir	Brake fluid DOT 3
5	Steering gearbox (Power steering)	Honda steering grease P/N 08733-B070E
6 7 8 9 10 11 12 13 14 15 16 17 18 19	Steering ball joint Suspension ball joints Steering boot Shift lever pivot (Manual steering) Steering column bushings Select lever (Automatic transmission) Pedal linkage Brake master cylinder push rod Trunk hinges Door hinges upper and lower Door opening detents Fuel filler lid Engine hood hinges Engine hood latch	Multi-purpose Grease
20	Caliper Piston seal Dust seal Caliper pin Piston	Silicone Grease
21	Power steering reservoir	Honda power steering fluid P/N 08208-99961

Recommended Engine Oil
(SE or SF Grade Only)

Recommended Manual Transmission Oil

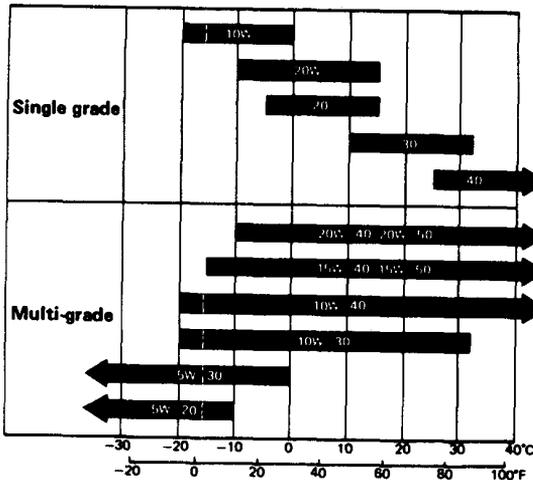

Engine oil viscosity for ambient temperature ranges.

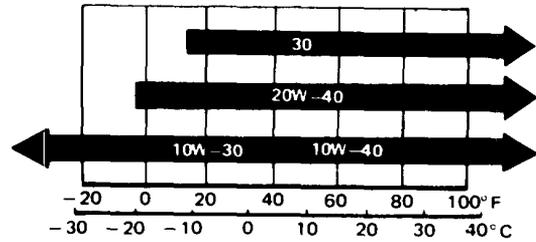

Transmission oil viscosity for ambient temperature ranges.

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

