


# Shift Cable

## Removal (cont'd)

8. Remove the shift cable by removing the control pin.

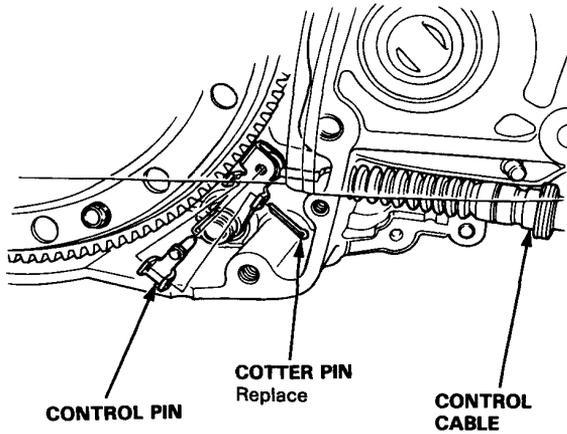

9. Pull the shift cable out of the by setting slot.


**CAUTION:** Do not bend the shift cable excessively.

## Installation

1. Installation is in the reverse order of removal.

**NOTE:** When installing the engine stiffener, loosely install the bolts then, torque them in the order shown.

**39 N·m (3.9 kg-m, 28 lb-ft)**

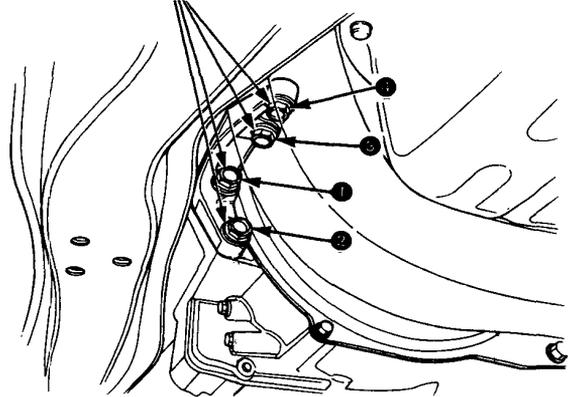

- Shift cable adjustment Page 9-29.