


Injector Resistor

Test

1. Disconnect the resistor connector.
2. Check for resistance between each of the resistor terminals (E, D, C and B) and the Power terminal (A).

Resistance should be: 5–7 Ω

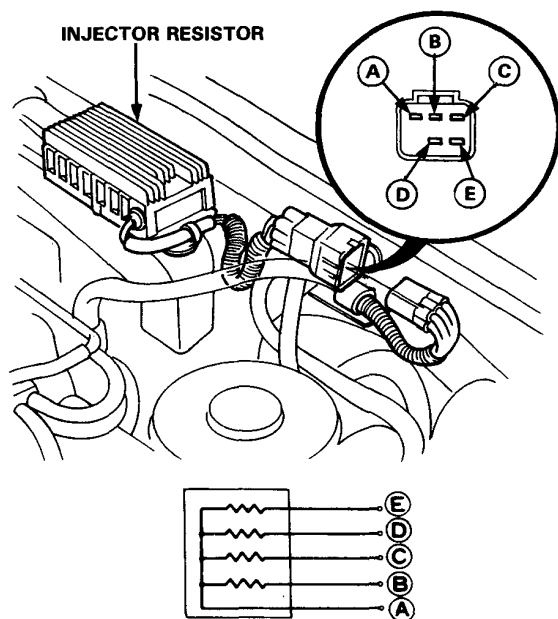

- Replace the resistor with a new one if any of the resistance are outside of the specification.