


Cruise Control

Clutch Switch Test

1. Disconnect the 3-P connector from the switch.
2. Check for continuity between the terminals according to the table.

Terminal	A	B	C
Clutch Pedal			
RELEASED	○	○	○
PUSHED			

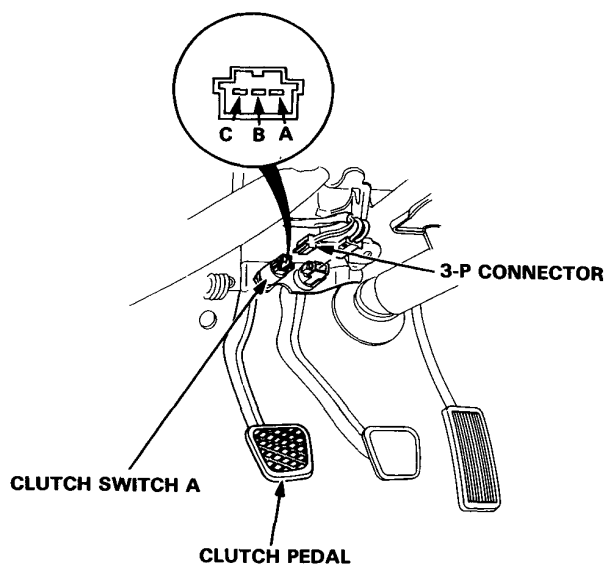

3. If necessary, adjust the switch position or replace the switch.

