




Parking Brake Stopper

Inspection/Adjustment

1. Set the parking shift arm in the PARK position.
2. Measure the distance between the outer face of the parking pawl shaft and outer face of the parking shift arm roller pin.

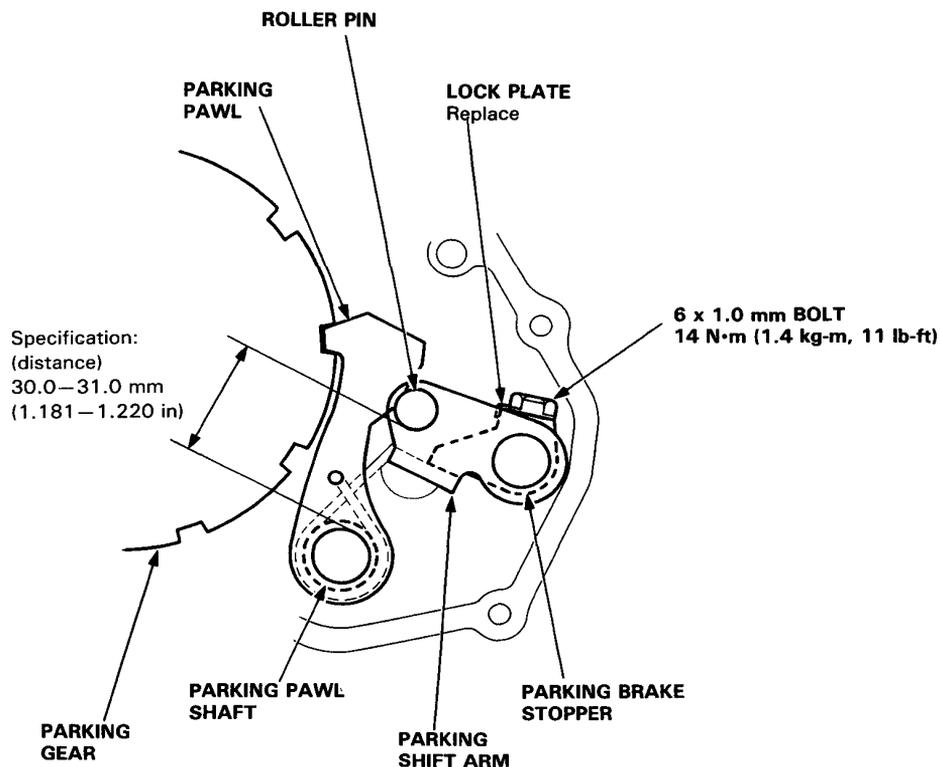

3. If the measurement is out of specification (distance), select the appropriate parking brake stopper using the table below, and install it on the parking shift arm.

No.	PART NUMBER
1	24537-PA9-003
2	24538-PA9-003
3	24539-PA9-003