

# Body Dimensional Drawings

## Upper Body Measuring Dimensions


<Engine Compartment>

2.5TL:


Unit: mm (in)

NOTE: Measuring dimensions show the distance between the forward or upper edge of positioning bosses and/or holes shown in the detail sketches.


Measuring point (Black dots)

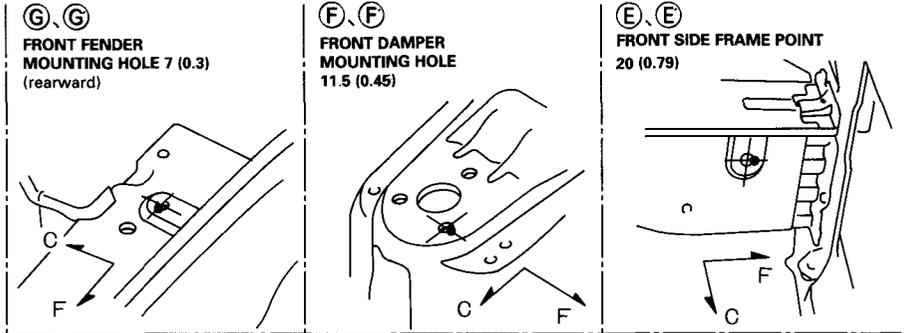

F: Forward  
C: Center

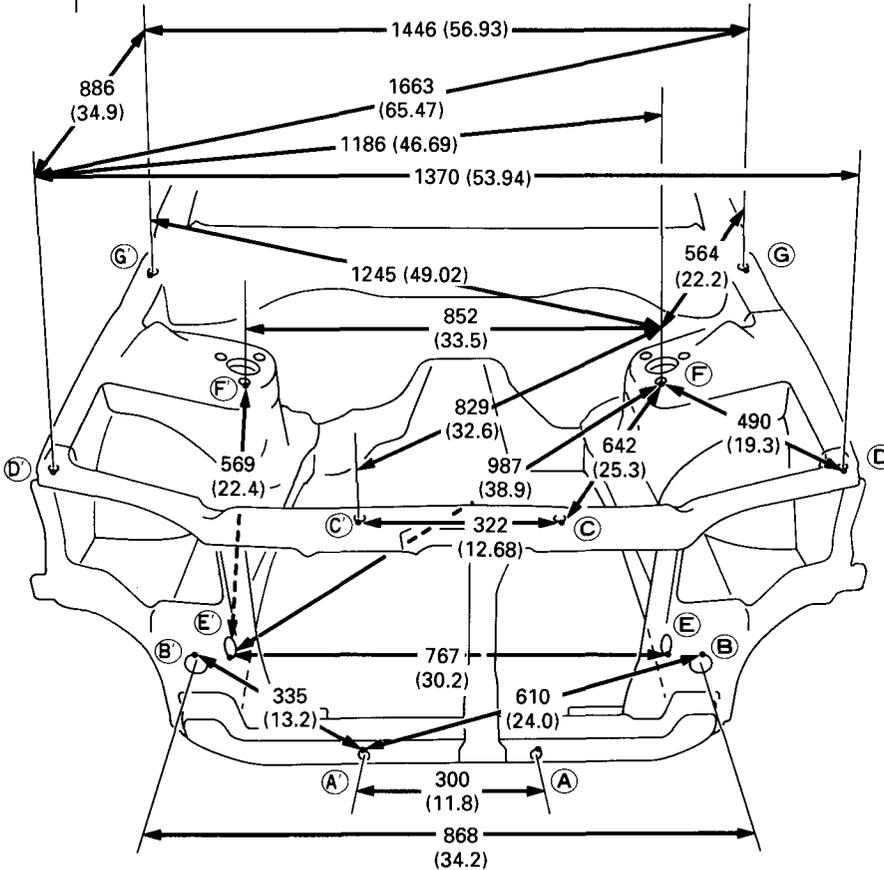

**A, A**  
FRONT LOWER CROSS  
MEMBER POINT 15 (0.6)

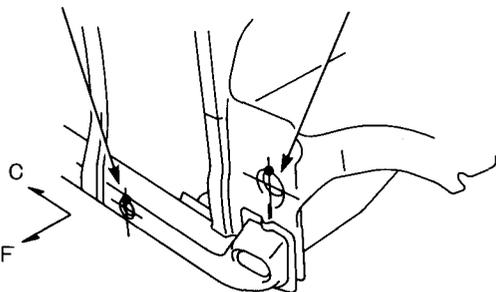

**B, B**  
FRONT SIDE BULKHEAD  
POINT 35 (1.4)

**C, C**  
BULKHEAD UPPER  
FRAME POINT 16 (0.63)

